




# W11 Spare parts

P. de Heus en Zonen Greup B.V.  
Stougjesdijk 153  
3271 KB Mijnsheerenland  
The Netherlands  
Tel. + 31 (0) 186 612 333  
[info@eurotrac.nl](mailto:info@eurotrac.nl)

|           |                                                  |           |
|-----------|--------------------------------------------------|-----------|
| <b>1.</b> | <b>MULTIFUNCTION WHEEL LOADER ASSEMBLY .....</b> | <b>4</b>  |
| 1.1       | Labels .....                                     | 6         |
| <b>2.</b> | <b>TRANSMISSION SYSTEM .....</b>                 | <b>8</b>  |
| 2.1       | Transmission system general assembly .....       | 8         |
| 2.2       | Rear axle assembly .....                         | 10        |
| 2.3       | Front axle assembly .....                        | 14        |
| 2.4       | Differential mechanism assembly .....            | 18        |
| 2.5       | Tyre assembly (26x12-12AS) .....                 | 20        |
| 2.6       | Tyre assembly (27x8.5-15NHS) .....               | 22        |
| 2.7       | Brake assembly .....                             | 24        |
| <b>3.</b> | <b>POWER SYSTEM .....</b>                        | <b>26</b> |
| 3.1       | Power system mounting assembly .....             | 26        |
| 3.2       | Engine .....                                     | 28        |
| 3.3       | Exhaust system .....                             | 30        |
| 3.4       | Air inlet system .....                           | 32        |
| 3.5       | Cooling system .....                             | 34        |
| 3.6       | Fuel system .....                                | 36        |
| 3.7       | Power system .....                               | 38        |
| <b>4.</b> | <b>VEHICLE SYSTEM .....</b>                      | <b>40</b> |
| 4.1       | Vehicle system general assembly .....            | 40        |
| 4.2       | Front chassis .....                              | 42        |
| 4.3       | Rear chassis .....                               | 46        |
| 4.4       | Working device .....                             | 50        |
| 4.5       | Canopy mounting assembly .....                   | 54        |
| 4.6       | Canopy base mounting assembly .....              | 56        |
| 4.7       | Rear bonnet .....                                | 60        |
| 4.8       | Bonnet hinge .....                               | 62        |
| 4.9       | Counterweight .....                              | 64        |
| 4.10      | Cab mounting assembly I .....                    | 66        |
| 4.11      | Cab mounting assembly II .....                   | 68        |
| 4.12      | Cab mounting assembly III .....                  | 70        |


|           |                                    |            |
|-----------|------------------------------------|------------|
| 4.13      | Cab mounting assembly IV .....     | 72         |
| 4.14      | Cab mounting assembly V .....      | 74         |
| 4.15      | Rear window assembly .....         | 76         |
| 4.16      | Left door assembly .....           | 78         |
| 4.17      | Right door assembly .....          | 80         |
| 4.18      | Bonnet mounting assembly .....     | 82         |
| <b>5.</b> | <b>OPERATE SYSTEM .....</b>        | <b>84</b>  |
| 5.1       | Operate System assembly .....      | 84         |
| 5.2       | Parking brake .....                | 86         |
| 5.3       | Accelerator operate .....          | 88         |
| 5.4       | Inching operate .....              | 90         |
| 5.5       | Inching operate (foot brake) ..... | 92         |
| <b>6.</b> | <b>HYDRAULIC SYSTEM .....</b>      | <b>94</b>  |
| 6.1       | Hydraulic system assembly .....    | 94         |
| 6.2       | Plunger pump-motor .....           | 96         |
| 6.3       | Steering gear .....                | 100        |
| 6.4       | Multitandem valve .....            | 102        |
| 6.5       | Multitandem valve component .....  | 106        |
| <b>7.</b> | <b>ELECTRIC SYSTEM .....</b>       | <b>108</b> |
| 7.1       | Electric system installation ..... | 108        |
| 7.2       | Dashboard .....                    | 110        |
| 7.3       | Battery and control box .....      | 114        |
| 7.4       | Operating handle .....             | 116        |
| <b>8.</b> | <b>ATTACHMENT .....</b>            | <b>118</b> |
| 8.1       | Bucket assembly .....              | 118        |

## 1. MULTIFUNCTION WHEEL LOADER ASSEMBLY

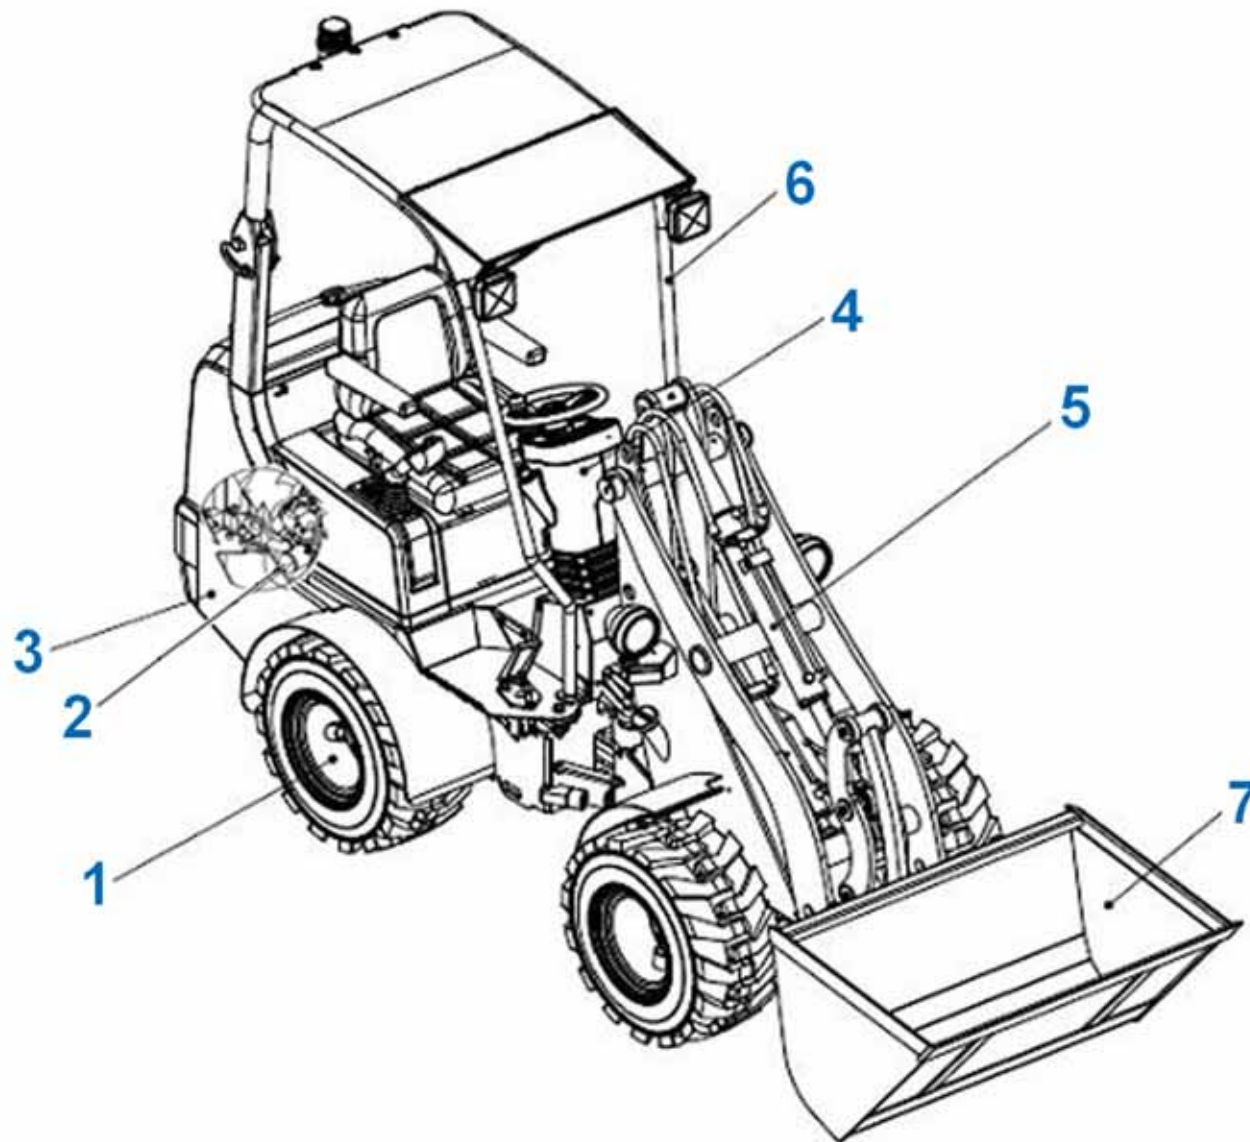

| Multifunction wheel loader assembly parts list |                 |                     |          |        |
|------------------------------------------------|-----------------|---------------------|----------|--------|
| Item                                           | Part Number     | Part Name           | Quantity | Remark |
| 1                                              | 1130-100000-000 | Transmission system | 1        |        |
| 2                                              | 810-300000-000  | Power system        | 1        |        |
| 3                                              | 810-400000-000  | Vehicle system      | 1        |        |
| 4                                              | 810-500000-000  | Operate system      | 1        |        |
| 5                                              | 810-600000-000  | Hydraulic system    | 1        |        |
| 6                                              | 810-700000-000  | Electric system     | 1        |        |
| 7                                              | 1130-800000-000 | Attachment          | 1        |        |

## 1.1 Labels

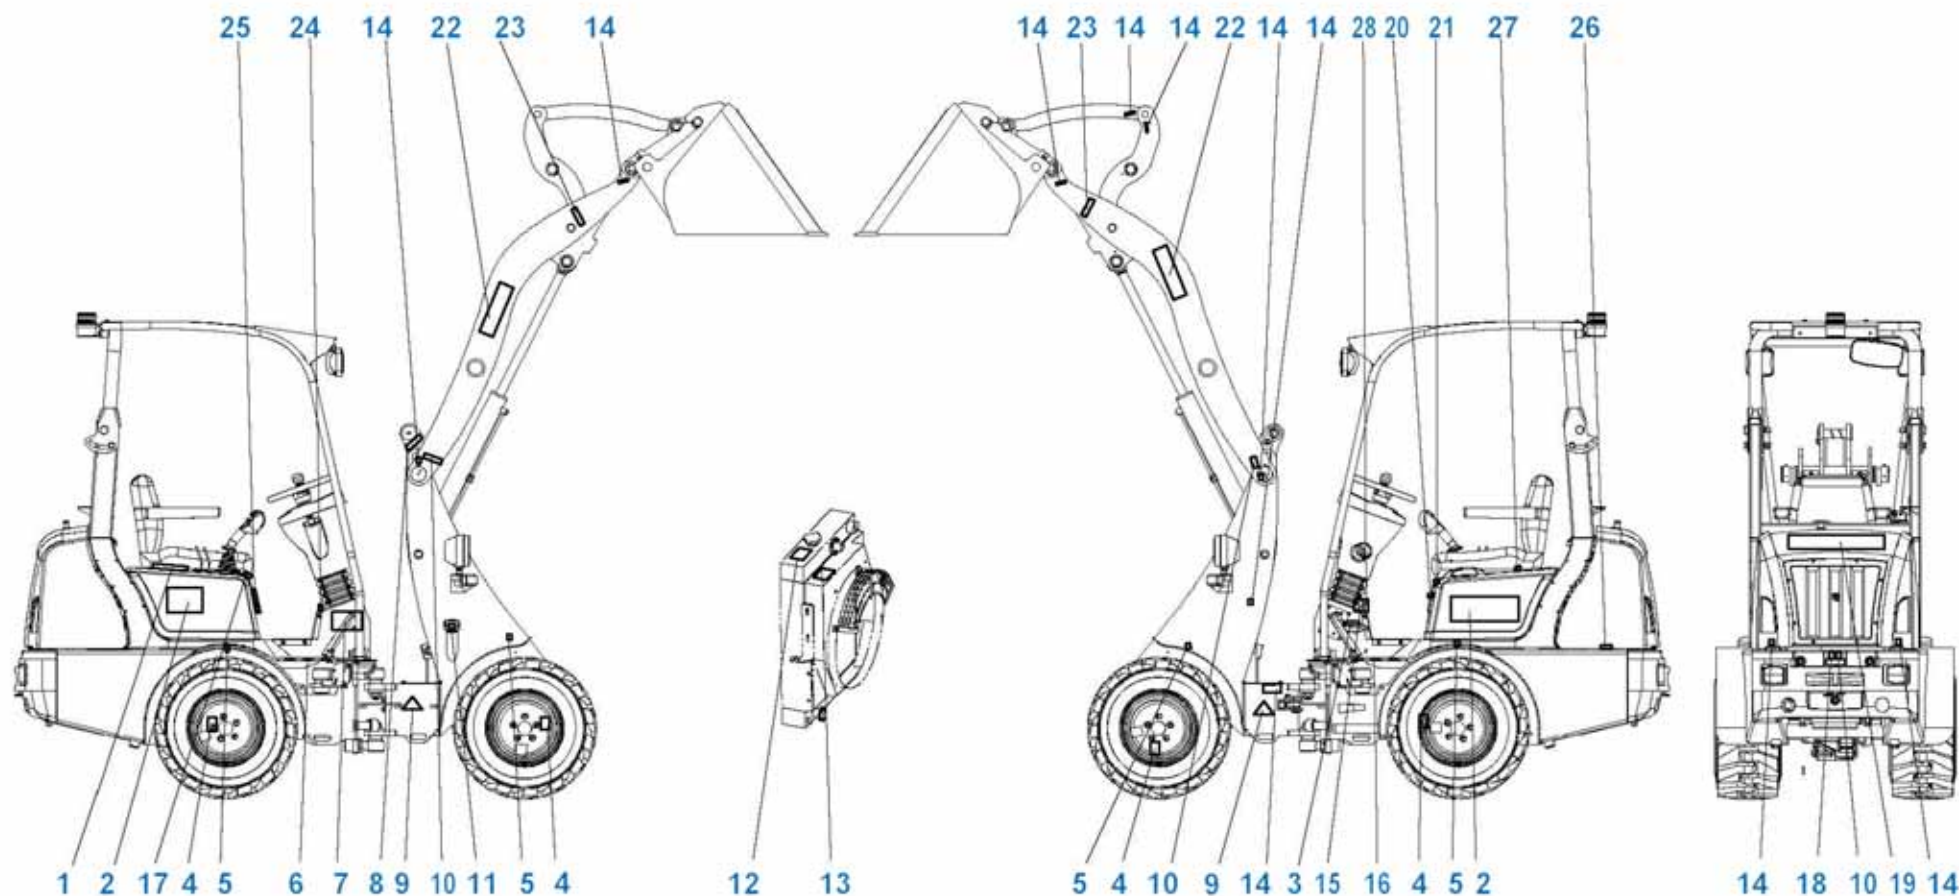


Labels parts list

| Item | Part Number     | Part Name                | Quantity | Remark |
|------|-----------------|--------------------------|----------|--------|
| 1    | 750610000038    | Hydraulic control prompt | 1        |        |
| 2    | 1130-010010-G00 | Model of trademark       | 2        |        |
| -    | 750610000092    | Model of trademark       | 2        |        |

| Labels parts list |                 |                                    |          |             |
|-------------------|-----------------|------------------------------------|----------|-------------|
| Item              | Part Number     | Part Name                          | Quantity | Remark      |
| 3                 | K30000 020033   | Stopping brake label               | 1        |             |
| 4                 | 750610000046    | Tyre label                         | 4        |             |
| 5                 | 750610000048    | Tyre pressure label                | 4        |             |
| 6                 | 750610000094    | Non-slip mat                       | 1        |             |
| 7                 | 1130-010011-G62 | Vehicle plate                      | 1        | Without cab |
| 8                 | 750610000047    | Lifting label                      | 2        |             |
| 9                 | 750610000044    | Anti-clip label                    | 2        |             |
| 10                | 750610000085    | Clamp hand label                   | 2        |             |
| 11                | 750610000041    | Fuel label                         | 1        |             |
| 12                | 750610000032    | Anti scalding label for water tank | 1        |             |
| 13                | 750610000096    | Anti cut hand                      | 1        |             |
| 14                | 750610000045    | Inject butter label                | 10       |             |
| 15                | 750610000034    | Noise declaration sticker          | 1        |             |
| 16                | 750610000095    | Non-slip mat                       | 2        |             |
| 17                | 750610000035    | Reset button label                 | 1        |             |
| 18                | 750610000036    | Transportation fixed point label   | 4        |             |
| 19                | 1130-010012-G54 | Manufacturing label                | 1        | Optional    |
| 20                | 750610000040    | Instruction warning                | 1        |             |
| 21                | 750610000039    | Maintenance manual warning         | 1        |             |
| 22                | 750610000100    | Manufacturing label                | 1        |             |
| 23                | 750610000098    | Anti-overturning label             | 2        |             |
| 24                | 750610000042    | Anti-tipping label                 | 1        |             |
| 25                | 1130-010011-G62 | Vehicle plate                      | 1        | Cab         |
| 26                | 750610000037    | Hydraulic oil label                | 1        |             |
| 27                | 750610000033    | Fasten seat belt label             | 1        |             |
| 28                | 750610000043    | Anti near label                    | 2        |             |


## 2. TRANSMISSION SYSTEM

### 2.1 Transmission system general assembly

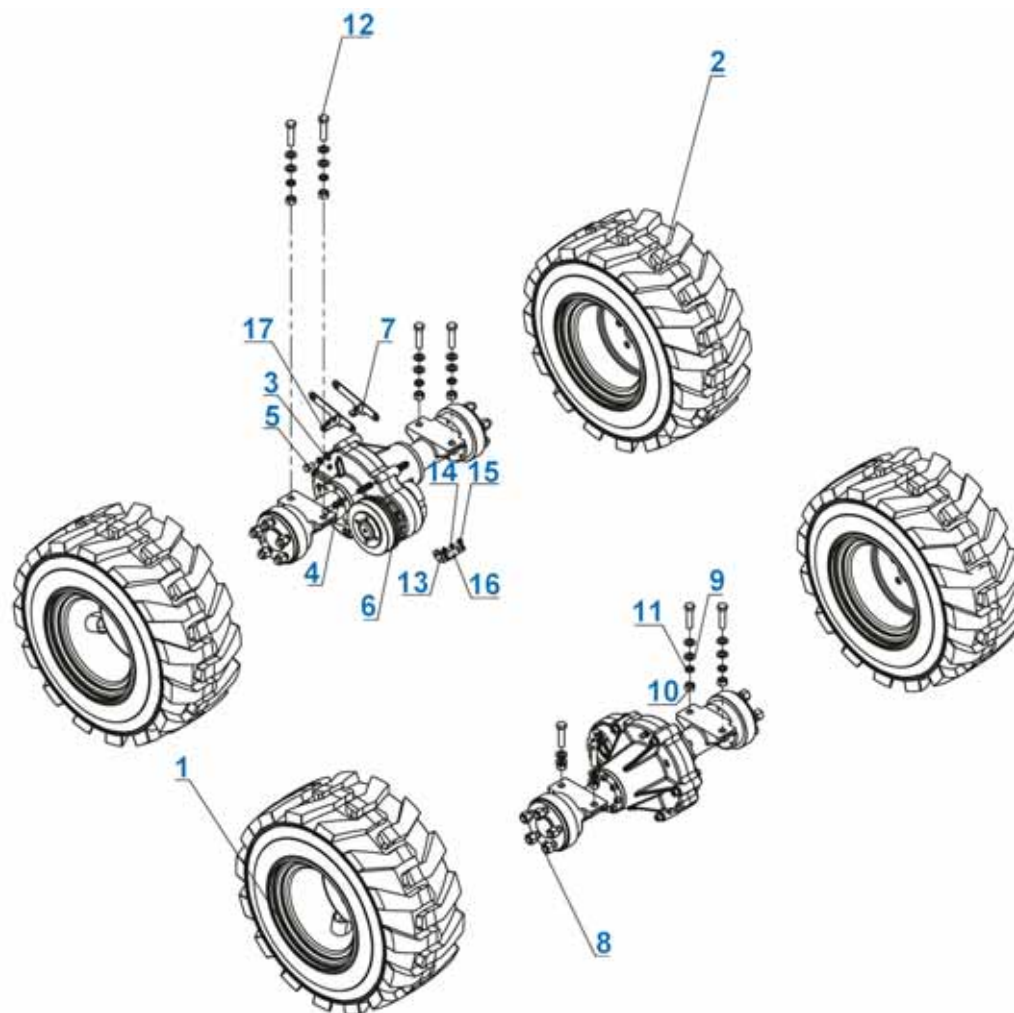


| Transmission system general assembly parts list |                   |                                         |          |        |
|-------------------------------------------------|-------------------|-----------------------------------------|----------|--------|
| Item                                            | Part Number       | Part Name                               | Quantity | Remark |
| 1                                               | 1130-102000-G00   | Tyre assembly (right)                   | 2        |        |
| 2                                               | 1130-101000-G00   | Tyre assembly (left)                    | 2        |        |
| 3                                               | 000971-000012-00  | Flat washer 12                          | 2        |        |
| 4                                               | GT00093-000012-00 | Spring washer12                         | 2        |        |
| 5                                               | 005783-012020-00  | Hexagon bolt M12x20-8.8                 | 2        |        |
| 6                                               | 1130-110000-000   | Rear axle assembly                      | 1        |        |
| 7                                               | 1130-100300-000   | Hand brake cable bracket (no foot       | 1        |        |
| 8                                               | 1020-120000-000   | Front axle assembly                     | 1        |        |
| 9                                               | 000971-000016-00  | Flat washer 16                          | 16       |        |
| 10                                              | 006170 016001     | Nut M16-8                               | 8        |        |
| 11                                              | GT00093-000016-00 | Spring washer 16                        | 8        |        |
| 12                                              | 005783-016065-00  | Bolt M16x65-8.8                         | 8        |        |
| 13                                              | 000971 000081     | Flat washer 8                           | 1        |        |
| 14                                              | GT00093-000008-00 | Spring washer 8                         | 1        |        |
| 15                                              | GT06170-000008-00 | Nut M8-8                                | 1        |        |
| 16                                              | 1130-500100-000   | Brake swing arm                         | 1        |        |
| 17                                              | 1130-500200-000   | Cable hanger assembly (with foot brake) | 1        |        |

## 2.2 Rear axle assembly

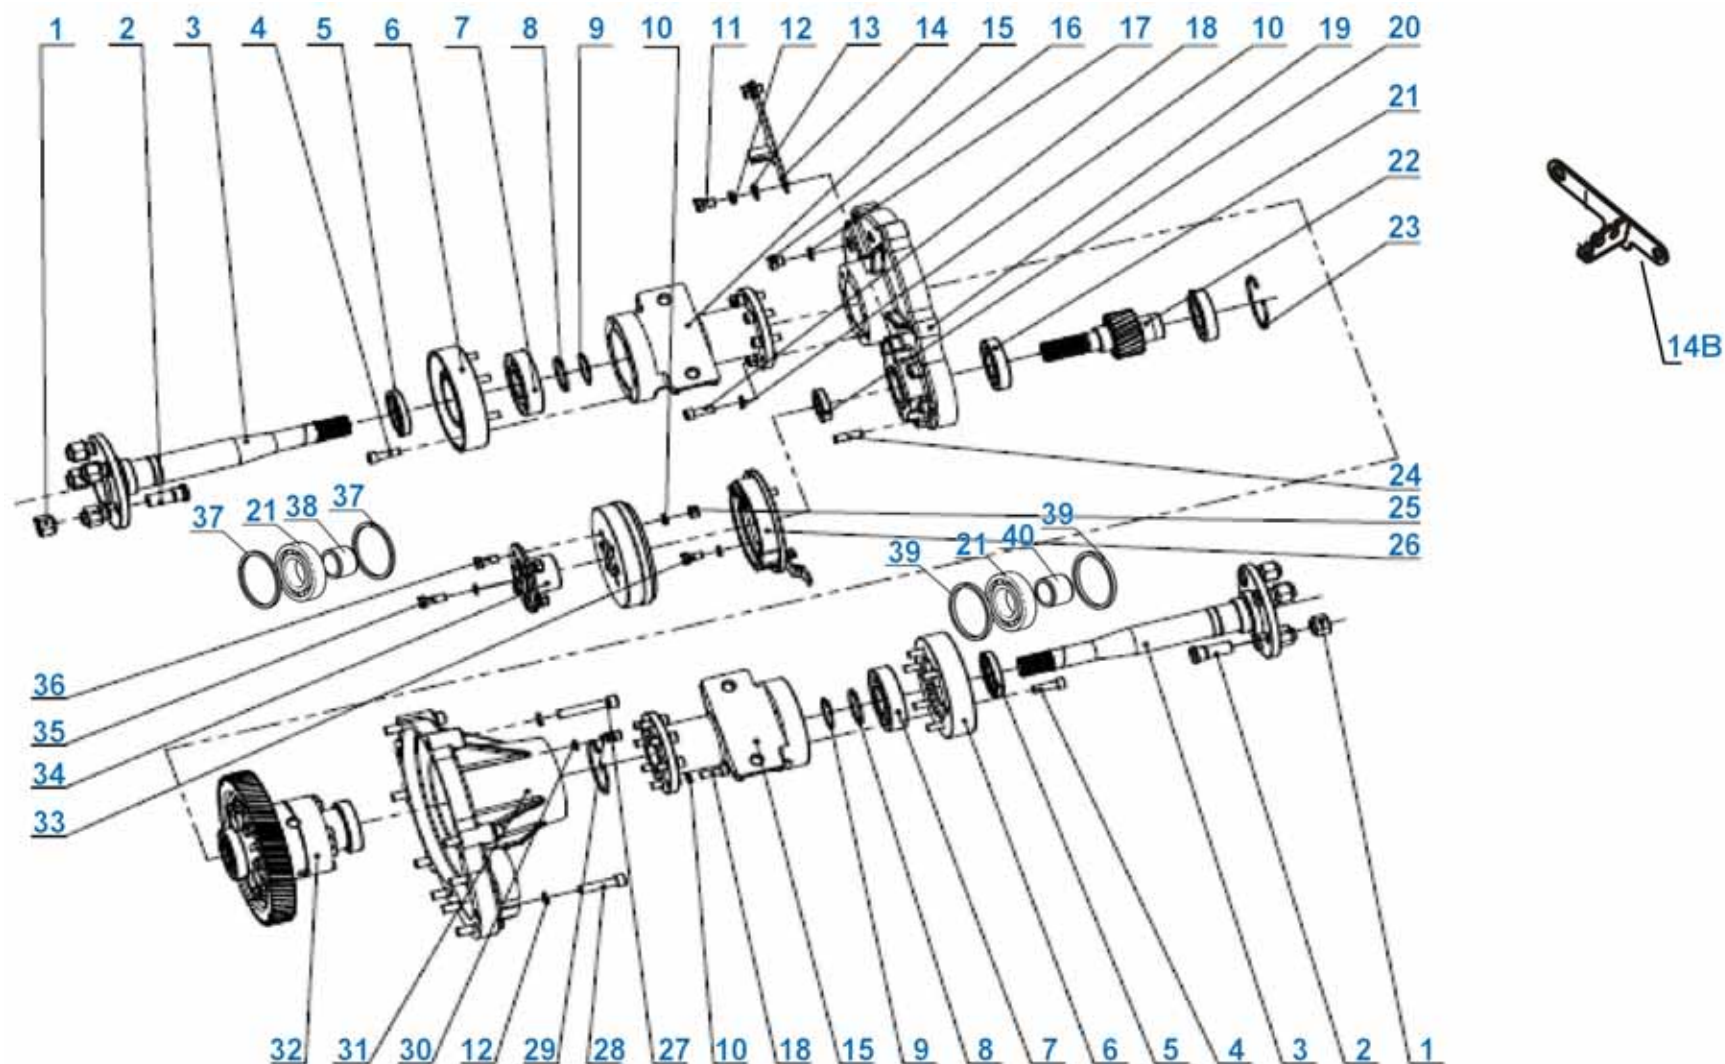

### Rear axle assembly parts list


| Item | Part Number          | Part Name                | Quantity | Remark   |
|------|----------------------|--------------------------|----------|----------|
| 1    | 1020-111006-G00      | Rim nut                  | 10       |          |
| 2    | 1020-111007-G00      | Rim bolt                 | 10       |          |
| 3    | 1020-111005-G00      | Axle shaft               | 2        |          |
| 4    | GT070P1-010035-02    | Bolt M10x35-10.9         | 12       |          |
| 5    | GT13871-055007212-00 | Oil seal 55x72x12        | 2        |          |
| 6    | 1020-111004-G00      | Thimble seat             | 2        |          |
| 7    | GT00276-0006309-00   | Bearing 6309             | 2        |          |
| 8    | 1020-111011-G00      | Axle shaft washer        | 2        |          |
| 9    | GT894P1-000045-00    | Check ring 45            | 2        |          |
| 10   | GT00093-000010-00    | Washer 10                | 25       |          |
| 11   | 005783-012016-01     | Bolt M12x16              | 2        |          |
| 12   | GT00093-000012-00    | Washer 12                | 12       |          |
| 13   | 000971-000012-00     | Washer 12                | 2        |          |
| 14   | 1020-100300-000      | Hand brake cable bracket | 1        |          |
| 14B  | 1130-100300-000      | Hand brake cable bracket | 1        | Optional |
| 15   | 1020-111003-G00      | Sleeve                   | 2        |          |
| 16   | J001000-0141P5-00    | Plug screw M14x1.5       | 2        |          |
| 17   | J000982-000014-00    | Washer 14                | 2        |          |
| 18   | GT070P1-010030-02    | Bolt M10x30              | 16       |          |
| 19   | 1020-111001-G00      | Axle housing             | 1        |          |
| 20   | GT13871-030005012-00 | Oil seal 30x50x12        | 1        |          |
| 21   | GT00276-0006208-00   | Bearing 6208             | 2        |          |
| 22   | 1020-111009-G00      | Driving gear             | 1        |          |
| 23   | GT893P1-00080-00     | Check ring 80            | 3        |          |
| 24   | G000119-010040-00    | Pin 10x40                | 2        |          |
| 25   | GT06170-000010-01    | Nut M10                  | 4        |          |

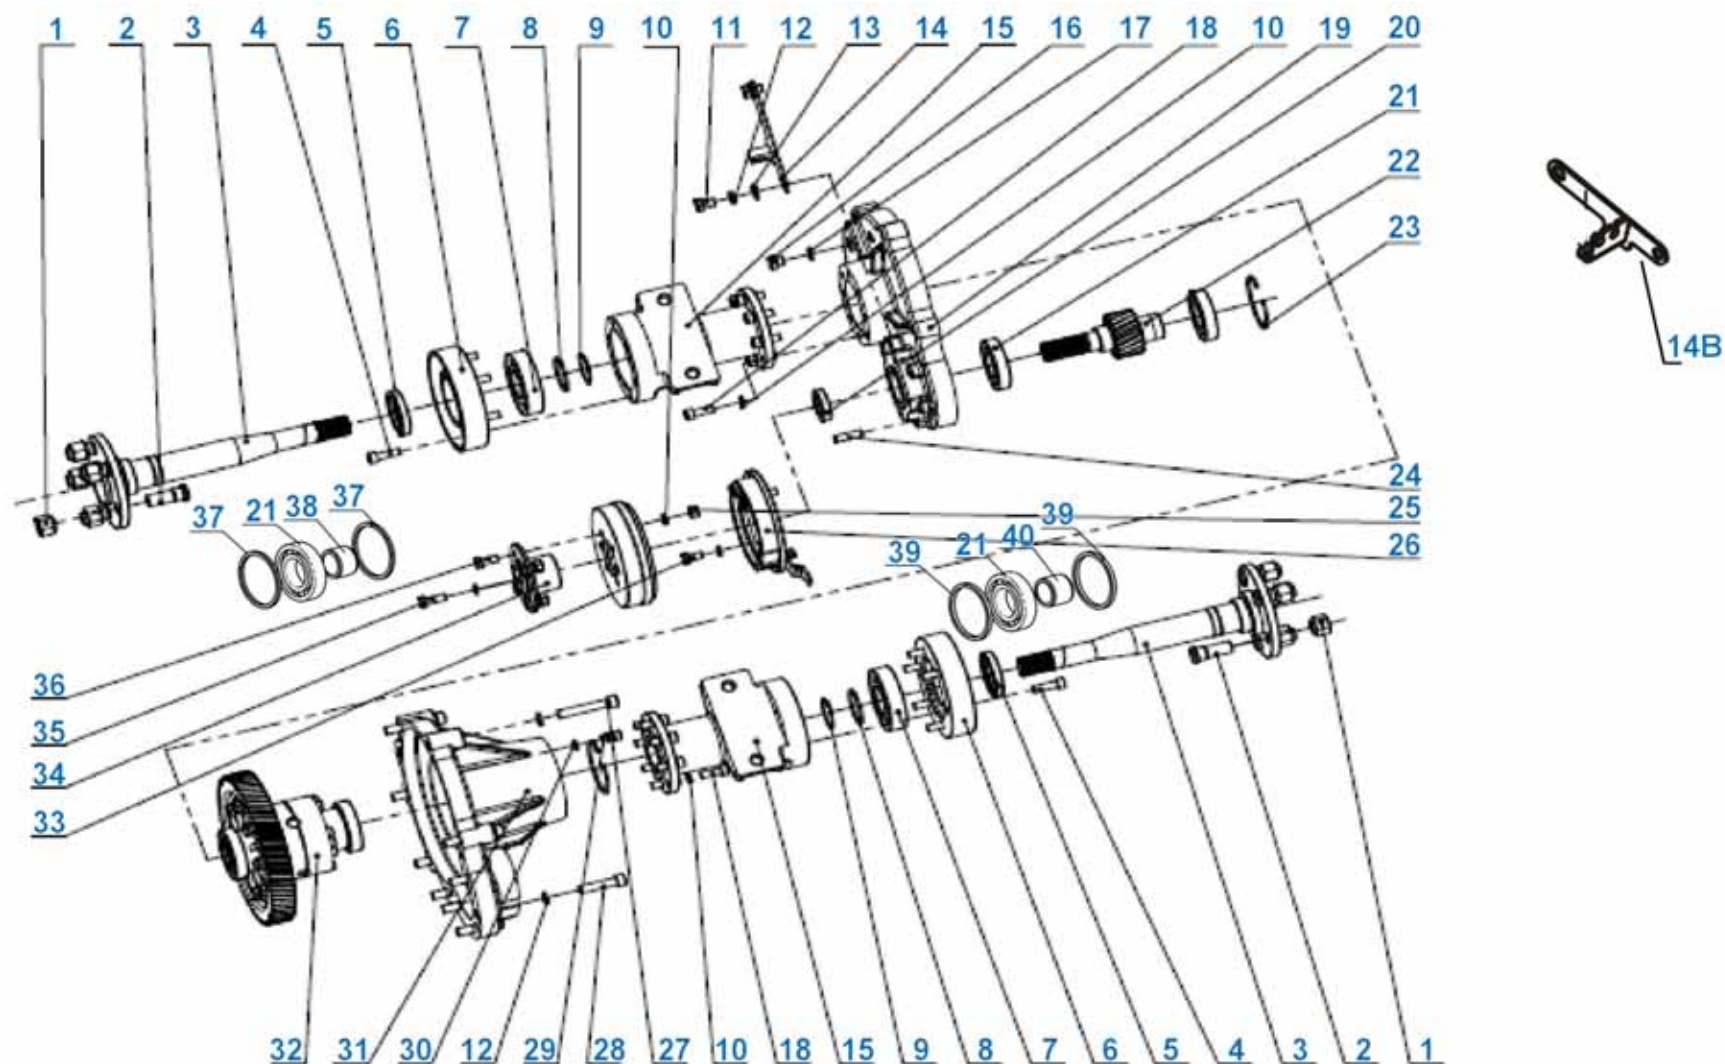

**Rear axle assembly parts list**


| Item | Part Number       | Part Name                          | Quantity | Remark |
|------|-------------------|------------------------------------|----------|--------|
| 26   | 1020-113000-G10   | Brake assembly                     | 1        |        |
| 27   | GT070P1-012075-02 | Bolt M12x75-10.9                   | 8        |        |
| 28   | GT070P1-012055-02 | Bolt M12x55                        | 2        |        |
| 29   | Q9001             | Deflation valve M8x1               | 1        |        |
| 30   | J000982-000010-00 | Washer 10                          | 1        |        |
| 31   | 1020-111002-G00   | Axle housing II                    | 1        |        |
| 32   | 1020-112000-G00   | Differential mechanism             | 1        |        |
| 33   | 005783-010030-01  | Bolt M10x20                        | 4        |        |
| 34   | 1020-114000-000   | Brake drum spline flange component | 1        |        |
| 35   | 005783-010030-01  | Bolt M10x30                        | 1        |        |
| 36   | 005783-010025-01  | Bolt M10x25-10.9                   | 4        |        |
| 37   | 1020-111015-000   | Bearing spacer 2                   | 2        |        |
| 38   | 1020-111014-000   | Bearing bush 2                     | 1        |        |
| 39   | 1020-111013-000   | Bearing spacer 1                   | 2        |        |
| 40   | 1020-111012-000   | Bearing bush 1                     | 1        |        |

## 2.3 Front axle assembly

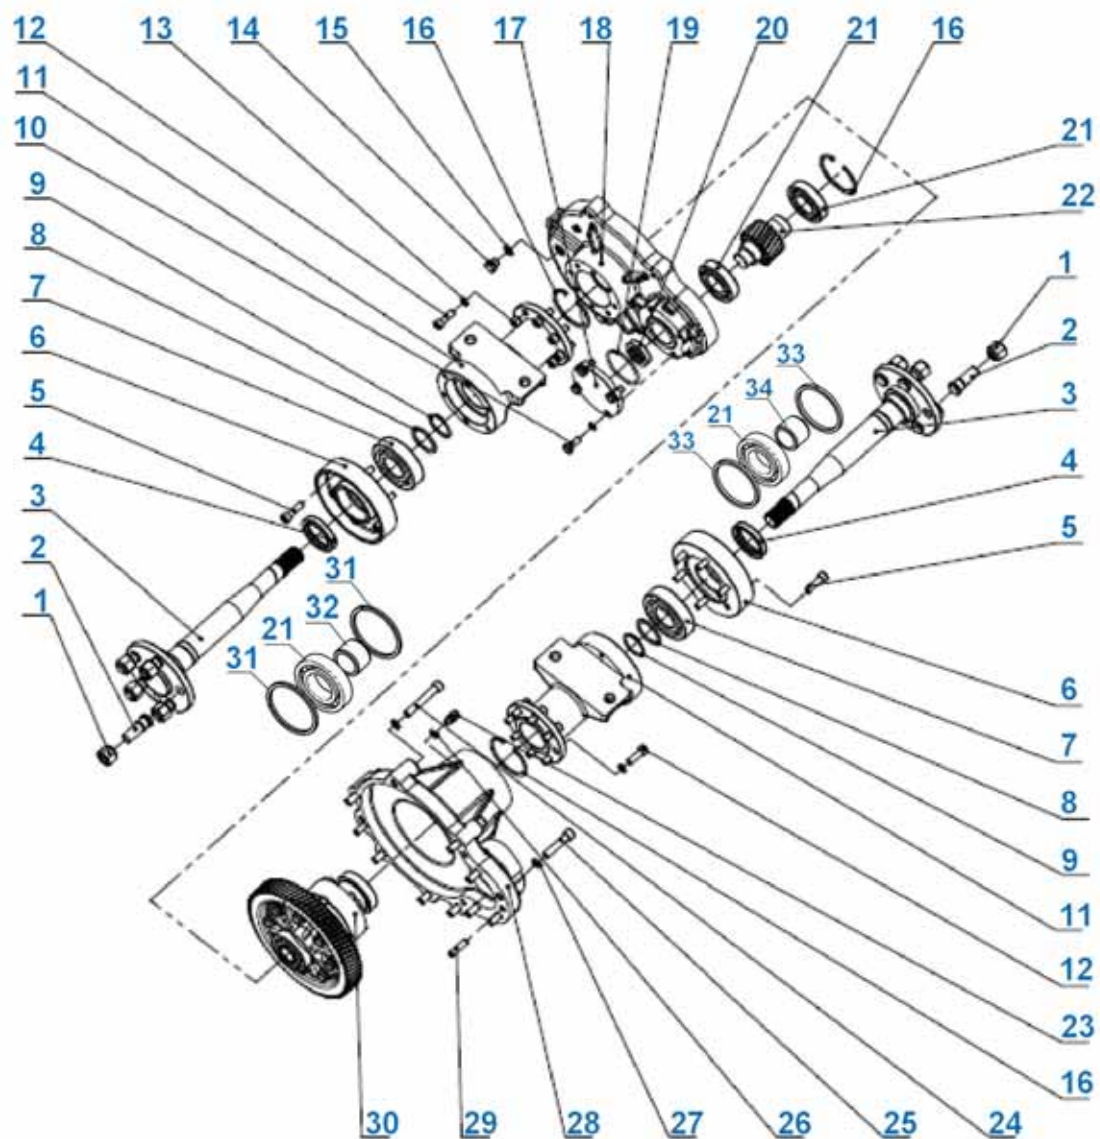

### Front axle assembly parts list


| Item | Part Number          | Part Name            | Quantity | Remark |
|------|----------------------|----------------------|----------|--------|
| 1    | 1020-111006-G0       | Rim nut              | 10       |        |
| 2    | 1020-111007-G00      | Rim bolt             | 10       |        |
| 3    | 1020-111005-G00      | Axle shaft           | 2        |        |
| 4    | GT13871-055007212-00 | Oil seal 55x72x12    | 2        |        |
| 5    | GT070P1-010035-02    | Bolt M10x35-10.9     | 12       |        |
| 6    | 1020-111004-G00      | Thimble seat         | 2        |        |
| 7    | GT00276-0006309-00   | Bearing 6309         | 2        |        |
| 8    | 1020-111011-G00      | Axle shaft washer    | 2        |        |
| 9    | GT894P1-000045-00    | Check ring 45        | 2        |        |
| 10   | 005783-010025-01     | Bolt M10x25-10.9     | 4        |        |
| 11   | 1020-111003-G00      | Sleeve               | 2        |        |
| 12   | GT070P1-010030-02    | Bolt M10x30-10.9     | 16       |        |
| 13   | GT00093-000010-00    | Washer 10            | 20       |        |
| 14   | J001000-0141P5-00    | Screw M14x1.5        | 2        |        |
| 15   | J000982-000014-00    | Washer 14            | 2        |        |
| 16   | GT893P1-00080-00     | Check ring 80        | 3        |        |
| 17   | 1020-111008-G00      | End cap              | 1        |        |
| 18   | 1020-111001-G00      | Axle housing I       | 1        |        |
| 19   | GT34521-00693P55-00  | O ring 69x3.55       | 1        |        |
| 20   | GT13871-030005012-00 | Oil seal 30x50x12    | 1        |        |
| 21   | GT00276-0006208-00   | Bearing 6208         | 2        |        |
| 22   | 1020-111010-G00      | Driving gear II      | 1        |        |
| 23   | Q9001                | Deflation valve M8x1 | 1        |        |
| 24   | GT070P1-012075-02    | Bolt M12x75-10.9     | 8        |        |
| 25   | GT070P1-012055-02    | Bolt M12x55-10.9     | 2        |        |

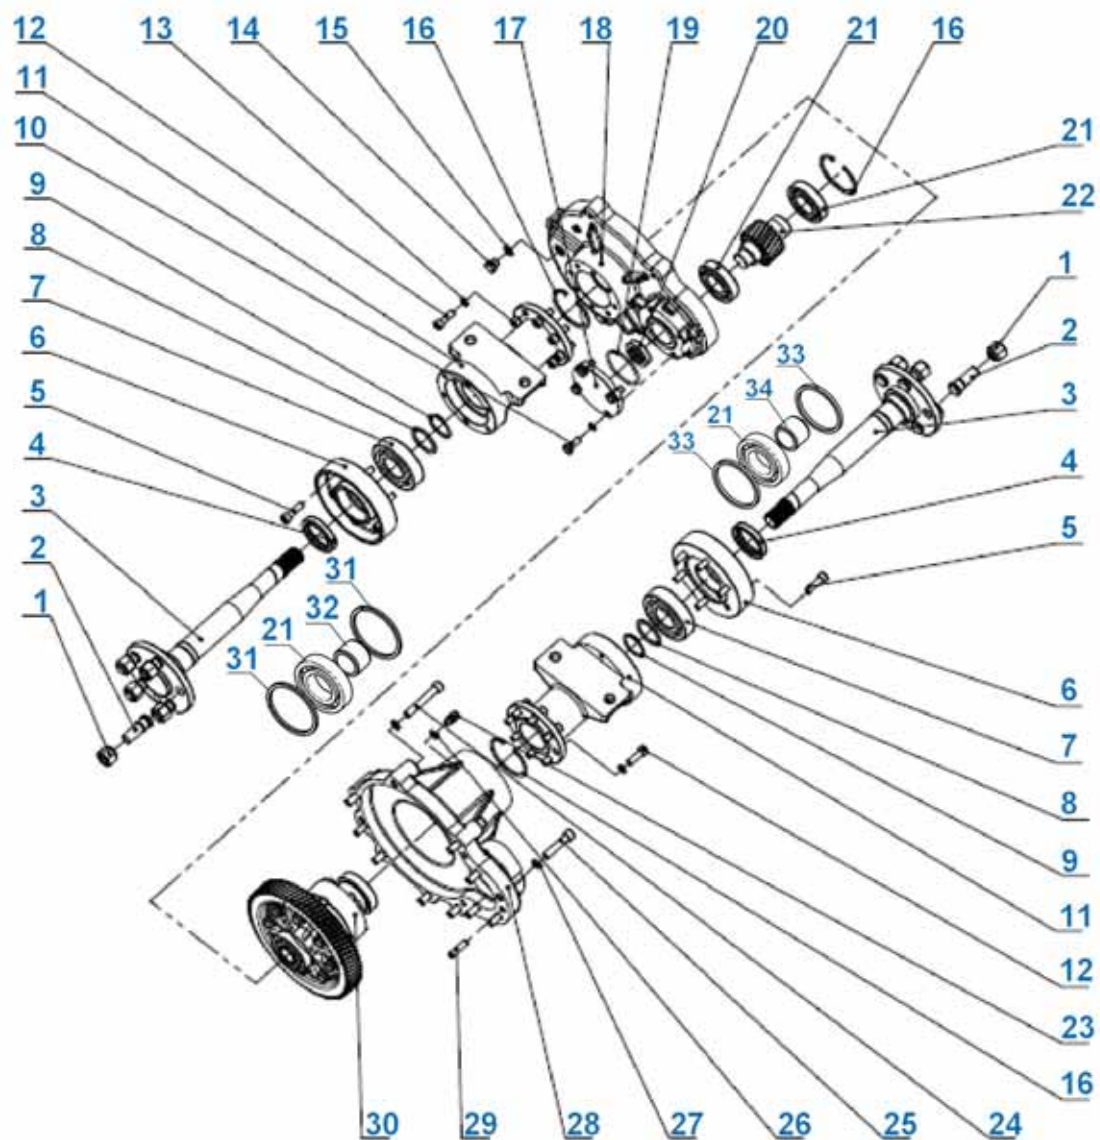

## Front axle assembly parts list


| Item | Part Number       | Part Name              | Quantity | Remark |
|------|-------------------|------------------------|----------|--------|
| 26   | J000982-000010-00 | Washer 10              | 1        |        |
| 27   | GT00093-000012-00 | Washer 12              | 12       |        |
| 28   | 1020-111002-G00   | Axle housing II        | 1        |        |
| 29   | G000119-010040-00 | Pin 10x40              | 2        |        |
| 30   | 1020-112000-G00   | Differential mechanism | 1        |        |
| 31   | 1020-111015-000   | Bearing spacer 2       | 2        |        |
| 32   | 1020-111014-000   | Bearing bush 2         | 1        |        |
| 33   | 1020-111013-000   | Bearing spacer 1       | 2        |        |
| 34   | 1020-111012-000   | Bearing bush 1         | 1        |        |

## 2.4 Differential mechanism assembly

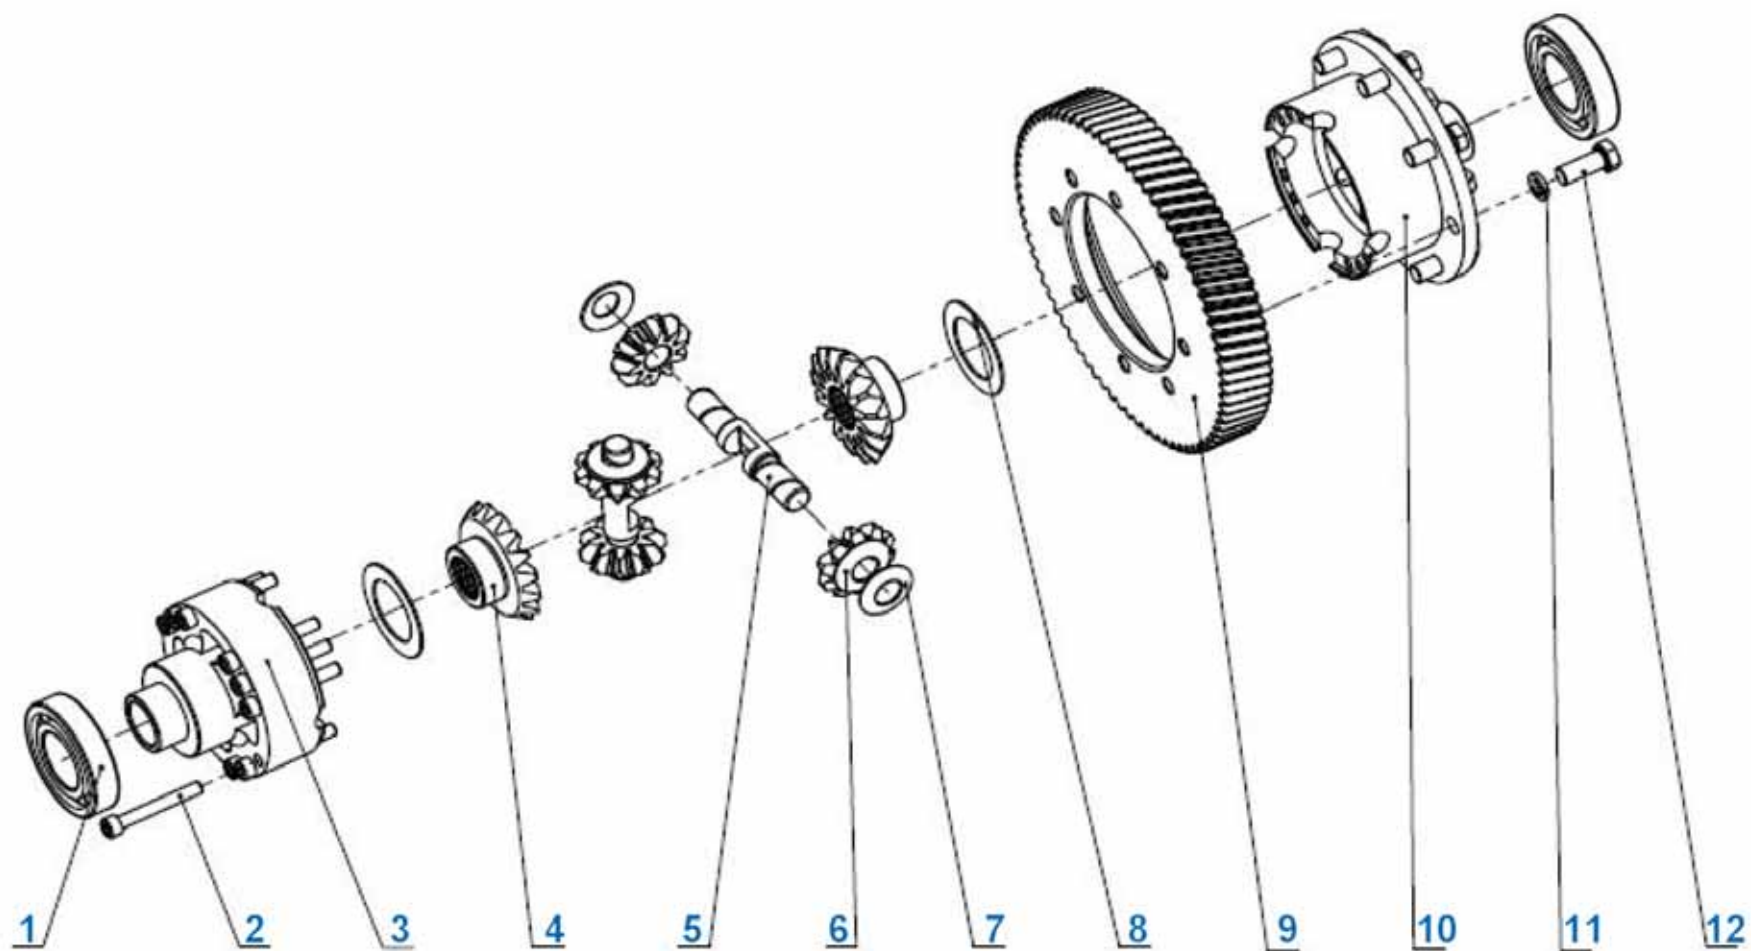


| Differential mechanism assembly list |                   |                                  |          |        |
|--------------------------------------|-------------------|----------------------------------|----------|--------|
| Item                                 | Part Number       | Part Name                        | Quantity | Remark |
| 1                                    | GB/T276-1994      | Bearing 6208                     | 2        |        |
| 2                                    | GT070P1-008060-00 | Bolt M8X60-10.9                  | 12       |        |
| 3                                    | 1020-112002-G00   | Right shell                      | 1        |        |
| 4                                    | 1020-112003-G00   | Axle shaft gear                  | 2        |        |
| 5                                    | 1020-112004-G00   | Differential mechanism hinge pin | 2        |        |
| 6                                    | 1020-112005-G00   | Planetary gear                   | 4        |        |
| 7                                    | 1020-112007-G00   | Planetary gear washer            | 4        |        |
| 8                                    | 1020-112008-G00   | Axle shaft gear washer           | 2        |        |
| 9                                    | 1020-112006-G00   | Driven gear                      | 1        |        |
| 10                                   | 1020-112001-G00   | Left shell                       | 1        |        |
| 11                                   | GT00093-000012-00 | Washer 12                        | 8        |        |
| 12                                   | GT5783-012030-01  | Bolt M12x30-10.9                 | 8        |        |

## 2.5 Tyre assembly (26x12-12AS)

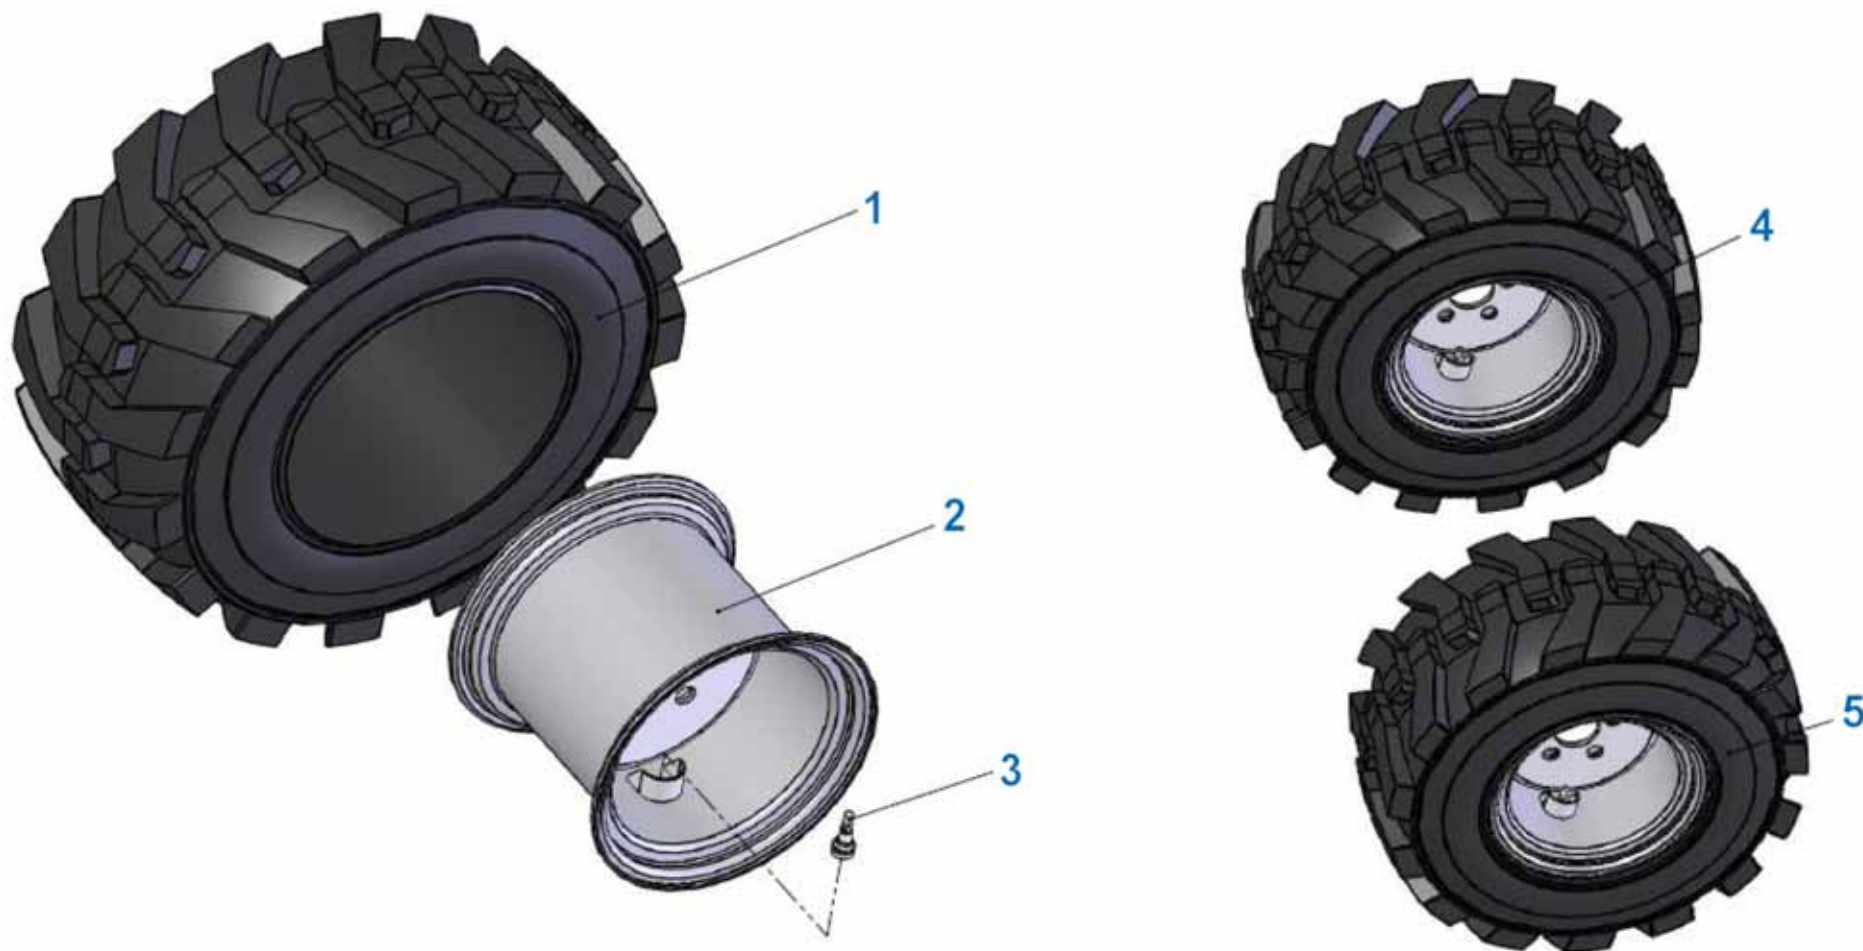



| Tyre assembly (26x12-12AS) parts list |                 |                     |          |        |
|---------------------------------------|-----------------|---------------------|----------|--------|
| Item                                  | Part Number     | Part Name           | Quantity | Remark |
| 1                                     | 26X12-12NHS     | Tyre                | 4        |        |
| 2                                     | 1130-180100-500 | Rim component       | 4        |        |
| 3                                     | 1130-101100-G00 | Valve core          | 4        |        |
| 4                                     | 1130-101000-G00 | Left tyre assembly  | 2        |        |
| 5                                     | 1130-102000-G00 | Right tyre assembly | 2        |        |

## 2.6 Tyre assembly (27x8.5-15NHS)

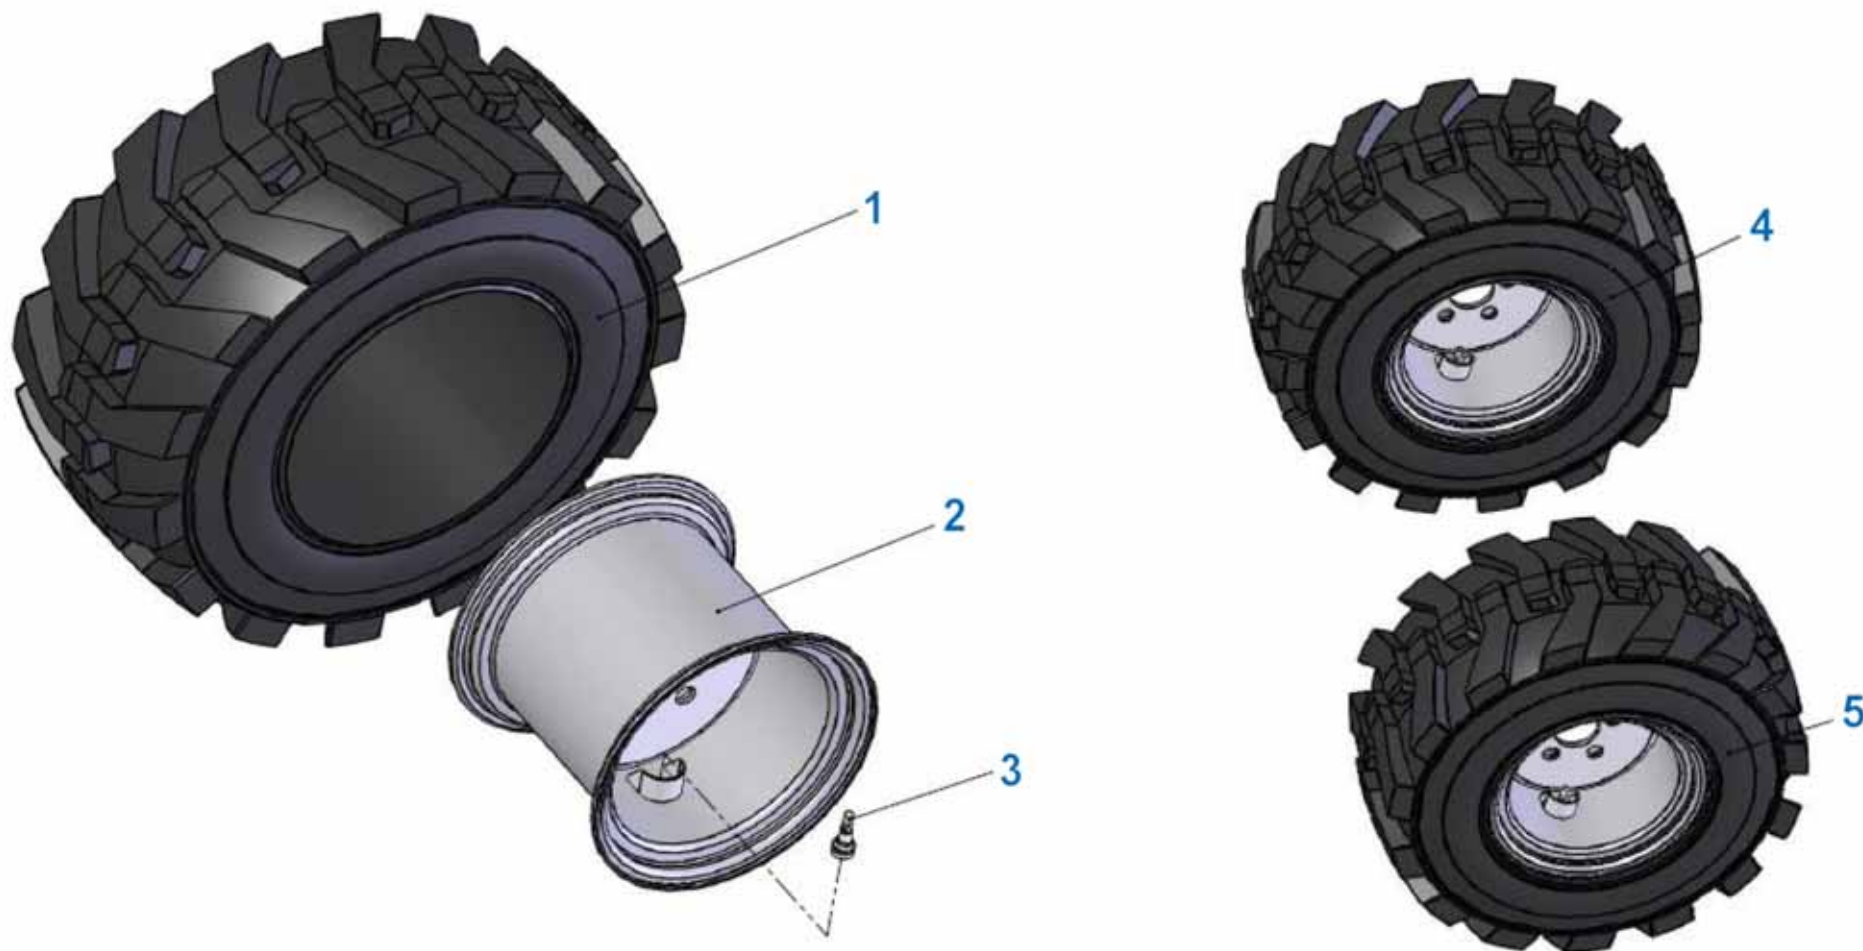

| Tyre assembly (27x8.5-15NHS) parts list |                 |                     |          |        |
|-----------------------------------------|-----------------|---------------------|----------|--------|
| Item                                    | Part Number     | Part Name           | Quantity | Remark |
| 1                                       | 27x8.5-15NHS    | Tyre                | 4        |        |
| 2                                       | 1130-180100-510 | Rim component       | 4        |        |
| 3                                       | 1130-101100-G00 | Valve core          | 4        |        |
| 4                                       | 1130-101000-G10 | Left tyre assembly  | 2        |        |
| 5                                       | 1130-102000-G10 | Right tyre assembly | 2        |        |

## 2.7 Brake assembly

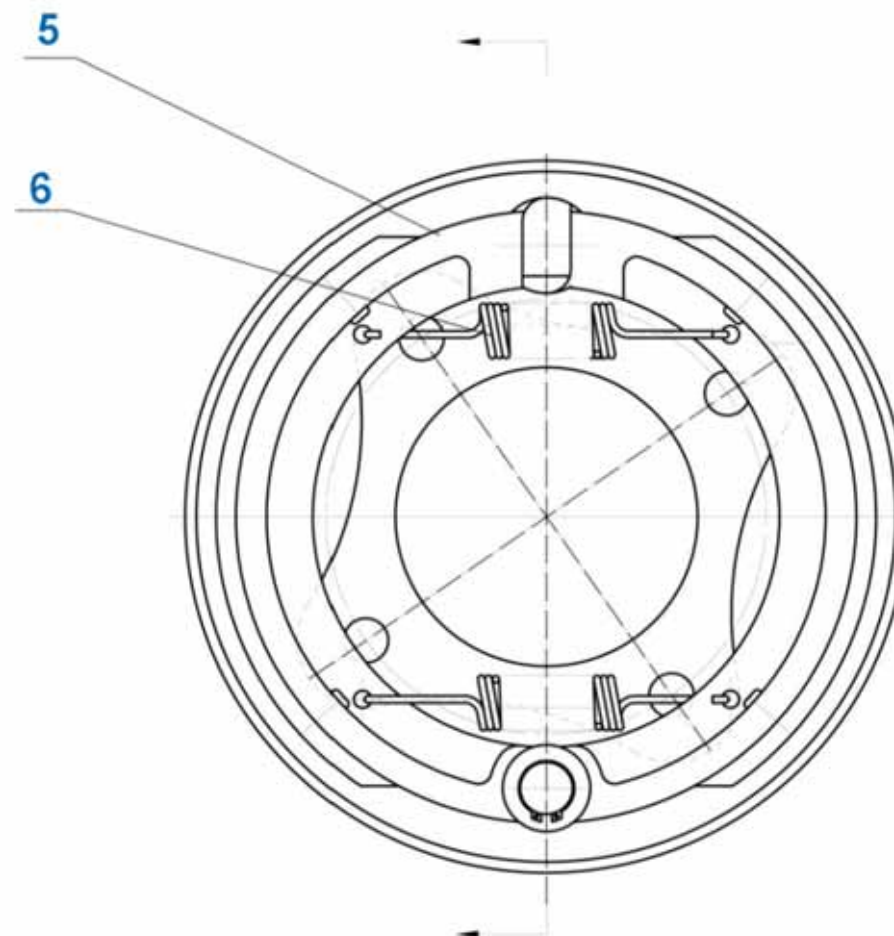
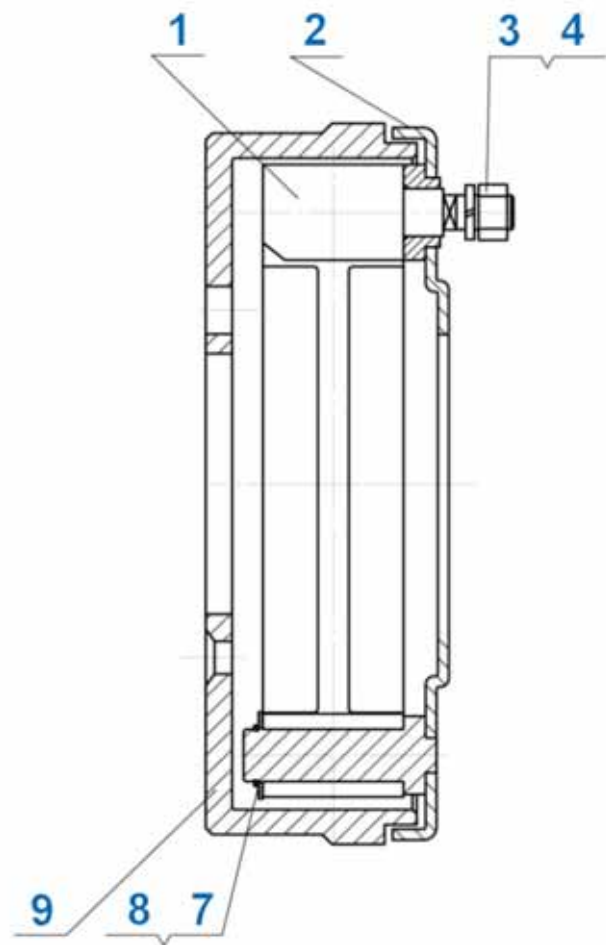


**Brake assembly parts list**

| Item | Part Number     | Part Name               | Quantity | Remark |
|------|-----------------|-------------------------|----------|--------|
| A    | 1020-113000-G10 | Brake assembly          | 1        |        |
| 1    | 1020-113001-G10 | Camshaft                | 1        |        |
| 2    | 1020-113100-G10 | Base plate assembly     | 1        |        |
| 3    | 006170 008001   | Nut M8                  | 1        |        |
| 4    | 000093 000081   | Spring washer 8         | 1        |        |
| 5    | 1020-113200-G10 | Friction plate assembly | 2        |        |
| 6    | 1020-113002-G10 | Return Spring           | 2        |        |
| 7    | 1020-113004-G10 | Flat washer 12          | 1        |        |
| 8    | 008941 000121   | Circlip for shaft 12    | 1        |        |
| 9    | 020-113003-G10  | Brake drum              | 1        |        |


### 3. POWER SYSTEM

#### 3.1 Power system mounting assembly

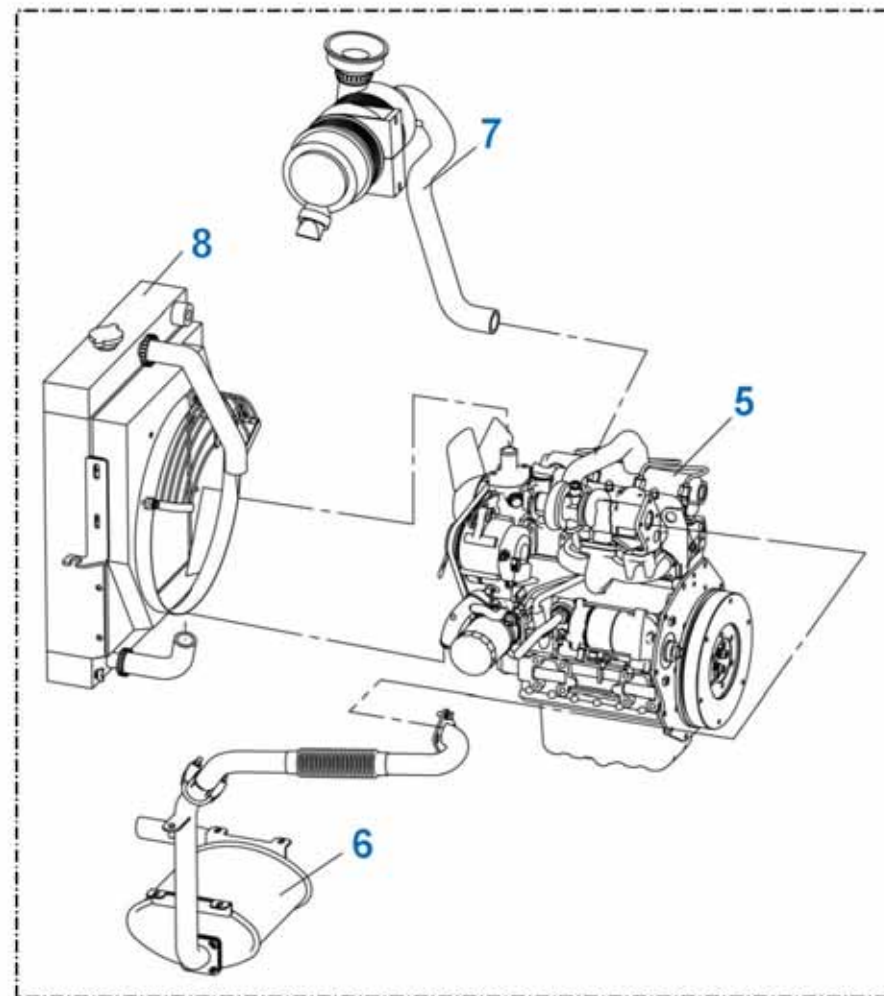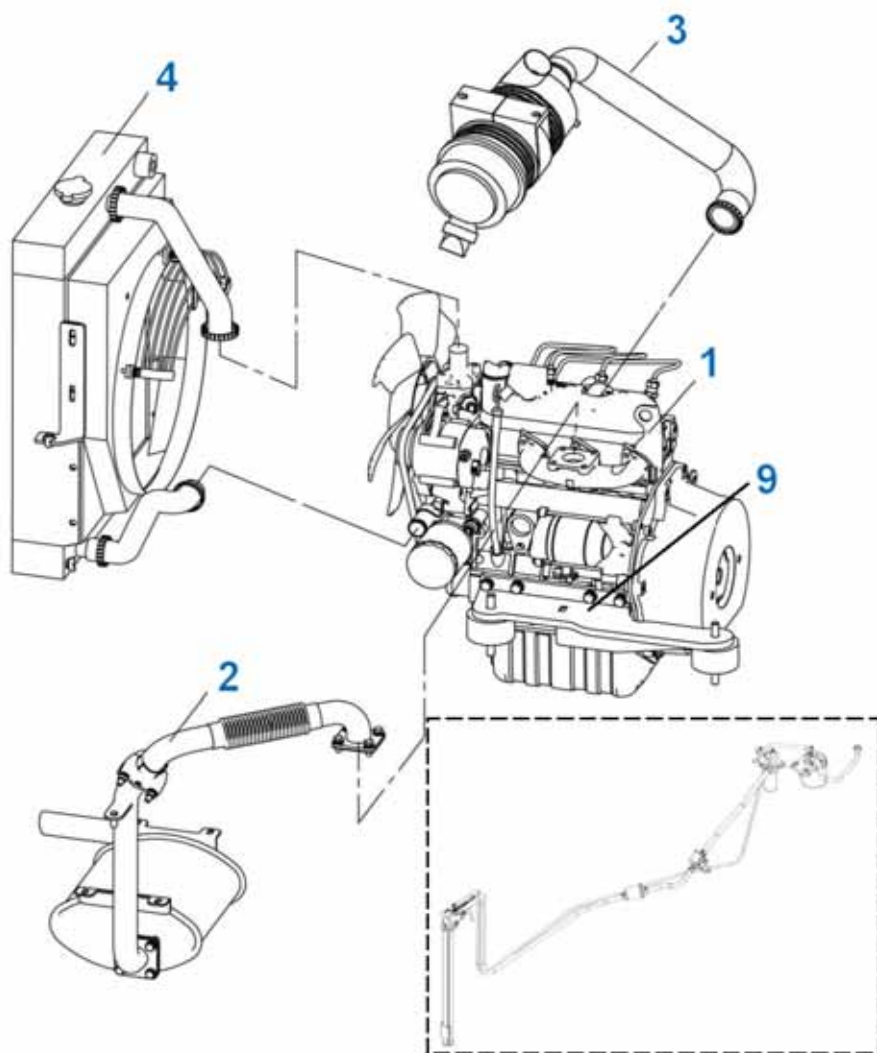


| Power system mounting assembly parts list |                 |                  |          |        |
|-------------------------------------------|-----------------|------------------|----------|--------|
| Item                                      | Part Number     | Part Name        | Quantity | Remark |
| 1                                         | 1130-310100-G00 | Engine           | 1        |        |
| 2                                         | 1130-320000-000 | Exhaust system   | 1        |        |
| 3                                         | 1130-330000-000 | Air inlet system | 1        |        |
| 4                                         | 1130-340000-000 | Cooling system   | 1        |        |
| 5                                         | 1130-310100-G50 | Engine           | 1        | Option |
| 6                                         | 1130-320000-500 | Exhaust system   | 1        | Option |
| 7                                         | 1130-330000-500 | Air inlet system | 1        | Option |
| 8                                         | 1130-340000-500 | Cooling system   | 1        | Option |
| 9                                         | 1130-350000-000 | Fuel system      | 1        |        |

## 3.2 Engine

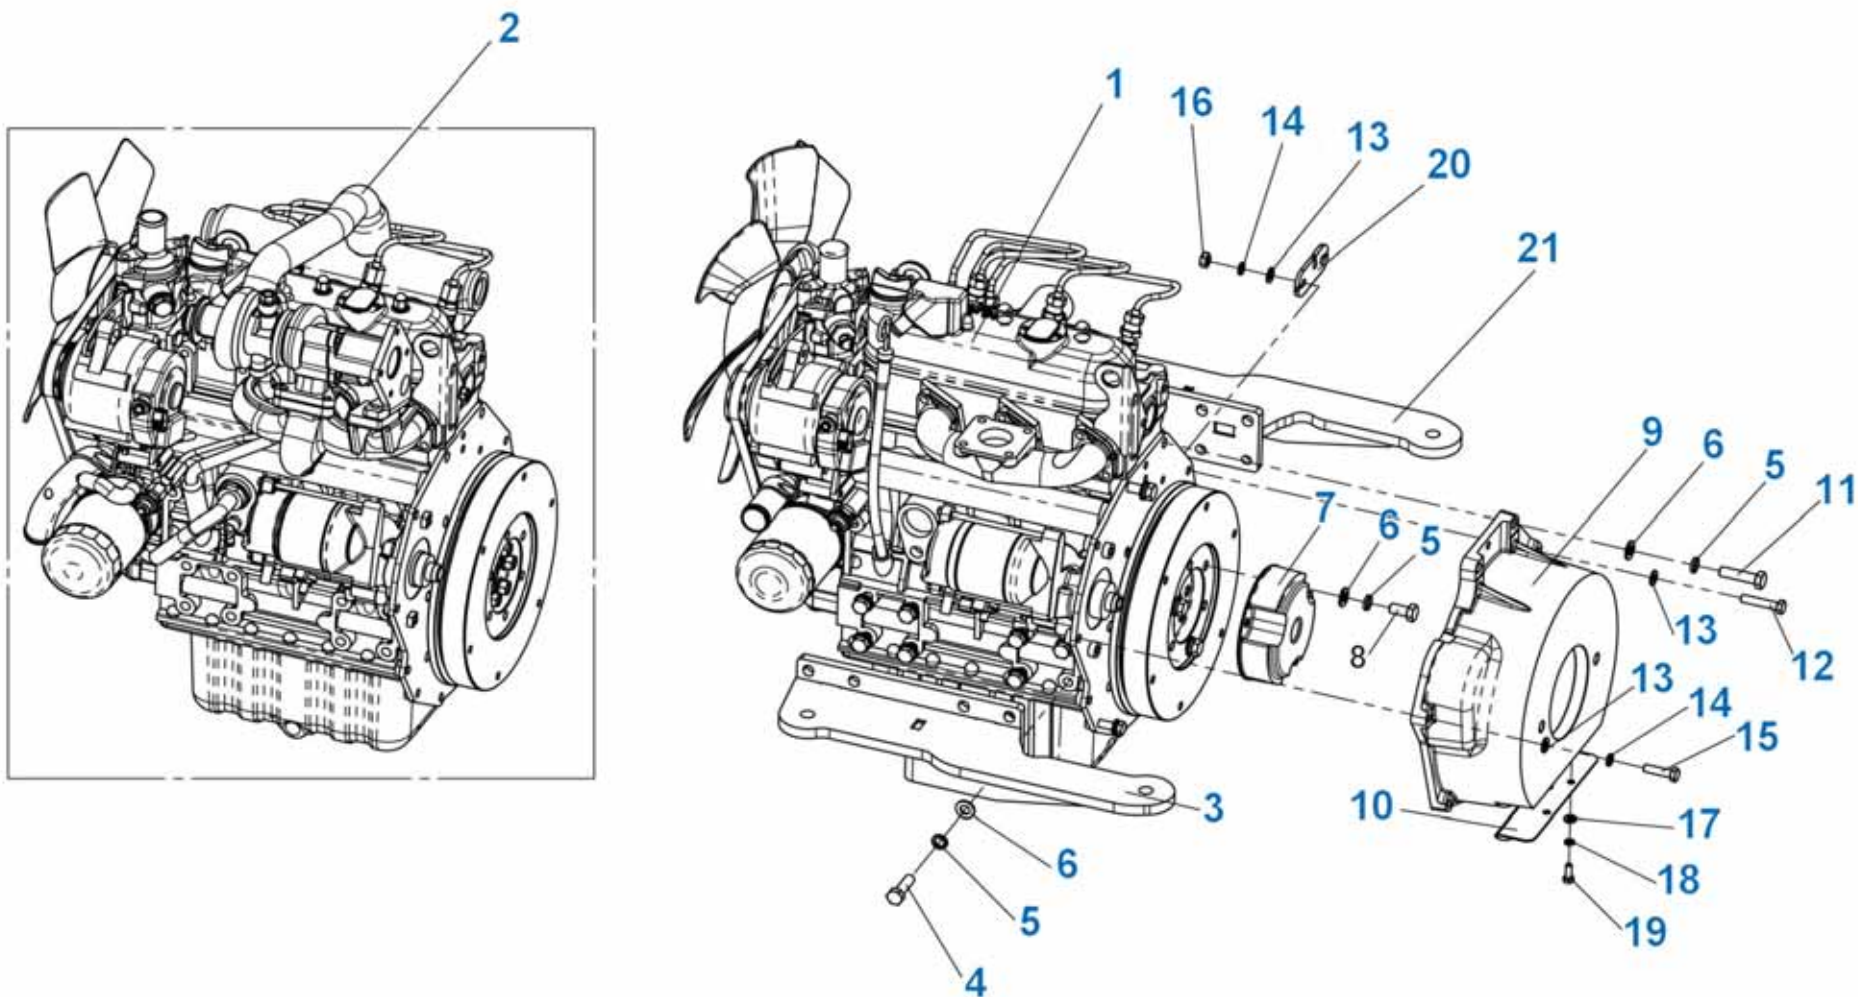

| Engine parts list |                   |                           |          |        |
|-------------------|-------------------|---------------------------|----------|--------|
| Item              | Part Number       | Part Name                 | Quantity | Remark |
| 1                 | 1130-310100-G00   | (D1105) Engine assembly   | 1        |        |
| 3                 | 1130-310600-000   | Engine right leg          | 1        |        |
| 4                 | GT05786-010035-00 | Bolt M10X1.25X35          | 16       |        |
| 5                 | GT00093-000010-00 | Washer 10                 | 21       |        |
| 6                 | 000971-000010-00  | Washer 10                 | 21       |        |
| 7                 | 1130-100700-G00   | Coupling                  | 1        |        |
| 8                 | GT05786-010025-00 | Bolt M10X1.25X25          | 3        |        |
| 9                 | 1020-310001-G00   | Clutch housing            | 1        |        |
| 10                | 1020-310003-000   | Clutch cover plate        | 1        |        |
| 11                | GT05786-010040-00 | Bolt M10X1.25X40          | 2        |        |
| 12                | 005783-008040-00  | Bolt M8X40                | 1        |        |
| 13                | 005783-008035-00  | Bolt M8X35                | 4        |        |
| 14                | GT00093-000008-00 | Washer 8                  | 5        |        |
| 15                | 000971-000008-00  | Washer 8                  | 6        |        |
| 16                | GT06170-000008-00 | Nut M8                    | 1        |        |
| 17                | 000971-000006-00  | Washer 6                  | 2        |        |
| 18                | GT00093-000006-00 | Washer 6                  | 2        |        |
| 19                | 005783-006015-00  | Bolt M6X15                | 2        |        |
| 20                | 1130-360001-000   | Accelerator cable bracket | 1        |        |
| 21                | 1130-310700-000   | Engine left leg           | 1        |        |


### 3.3 Exhaust system

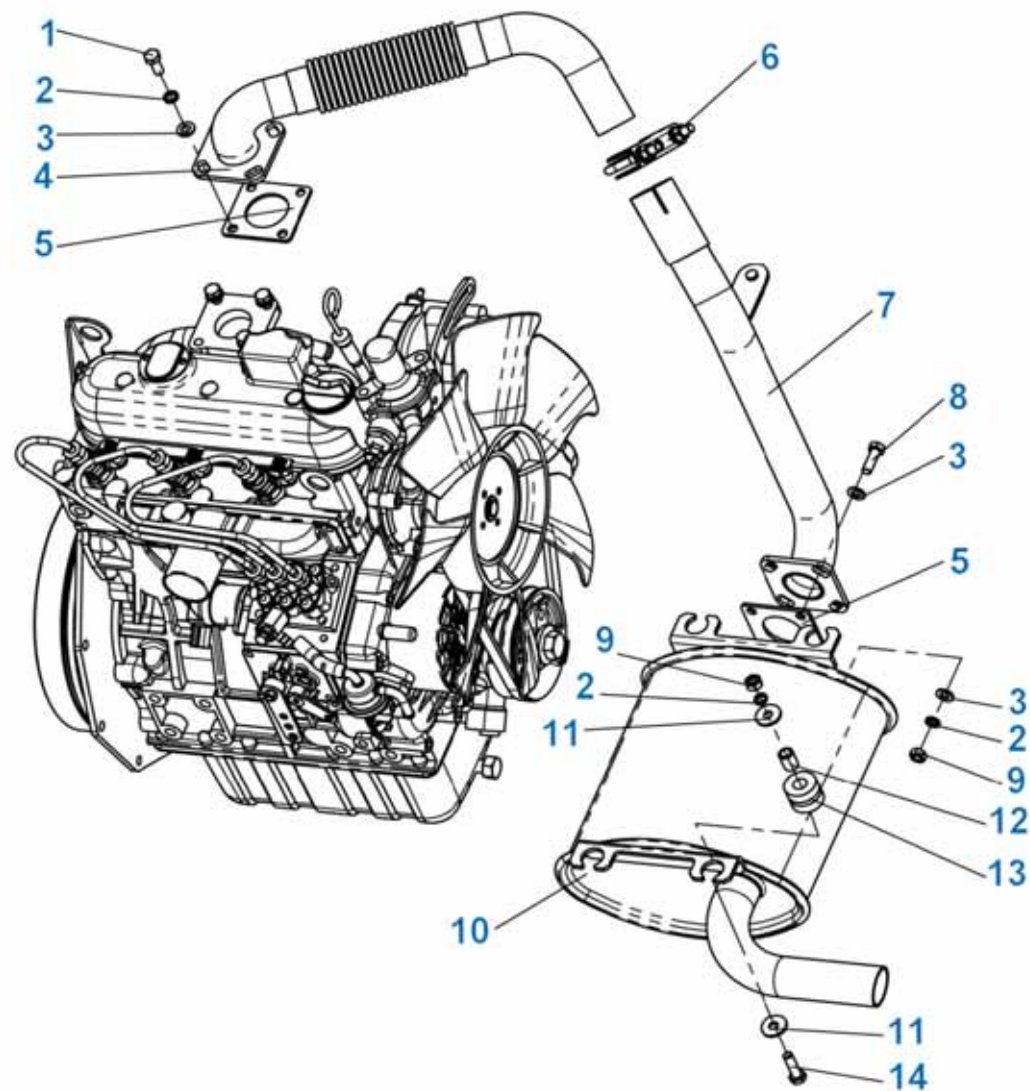

### Exhaust system parts list

| Item | Part Number       | Part Name                   | Quantity | Remark |
|------|-------------------|-----------------------------|----------|--------|
| 1    | 005783-008016-00  | Bolt M8X16                  | 4        |        |
| 2    | GT00093-000008-00 | Washer 8                    | 8        |        |
| 3    | 000971-000008-00  | Washer 8                    | 12       |        |
| 4    | 1130-320100-001   | Front exhaust pipe assembly | 1        |        |
| 5    | 1130-300407-G00   | Engine joint                | 2        |        |
| 6    | 1230-320400-G00   | Exhaust pipe clamp          | 1        |        |
| 7    | 1130-320200-002   | Rear exhaust pipe assembly  | 1        |        |
| 8    | 005783-008035-00  | Bolt M8X35                  | 4        |        |
| 9    | GT06170-000008-00 | Nut M8                      | 4        |        |
| 10   | 1130-320300-G01   | Muffler                     | 1        |        |
| 11   | GT00096-000008-00 | Washer 8                    | 4        |        |
| 12   | 1130-340007-G00   | Cover                       | 4        |        |
| 13   | 1130-340006-G00   | Shock pad                   | 4        |        |
| 14   | 005783-008030-00  | Bolt M8X30                  | 4        |        |


### 3.4 Air inlet system

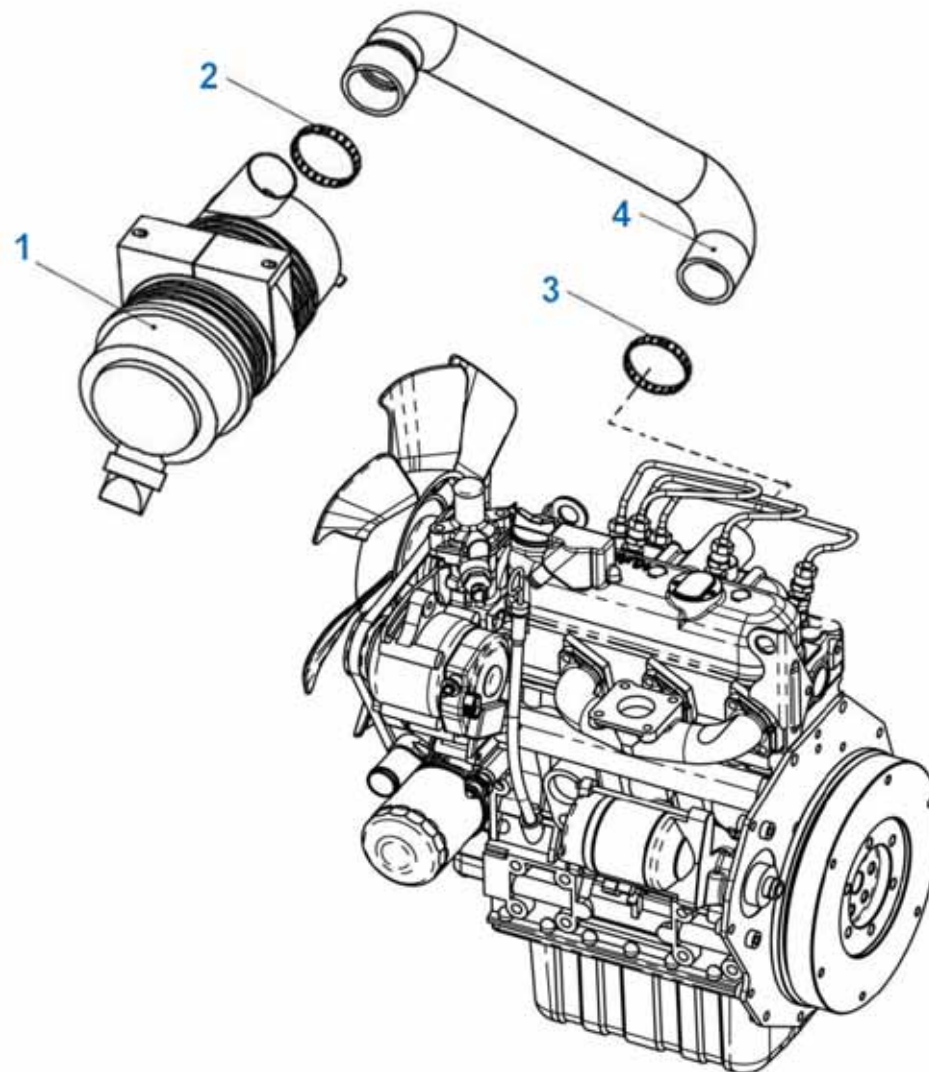

**Air inlet system parts list**

| Item | Part Number       | Part Name      | Quantity | Remark |
|------|-------------------|----------------|----------|--------|
| 1    | 1130-330100-G00   | Empty filter   | 1        |        |
| 2    | JT08870-054062-00 | Clamp          | 1        |        |
| 3    | JT08870-051059-00 | Clamp          | 1        |        |
| 4    | 1140-300003-G00   | Air inlet pipe | 1        |        |


### 3.5 Cooling system

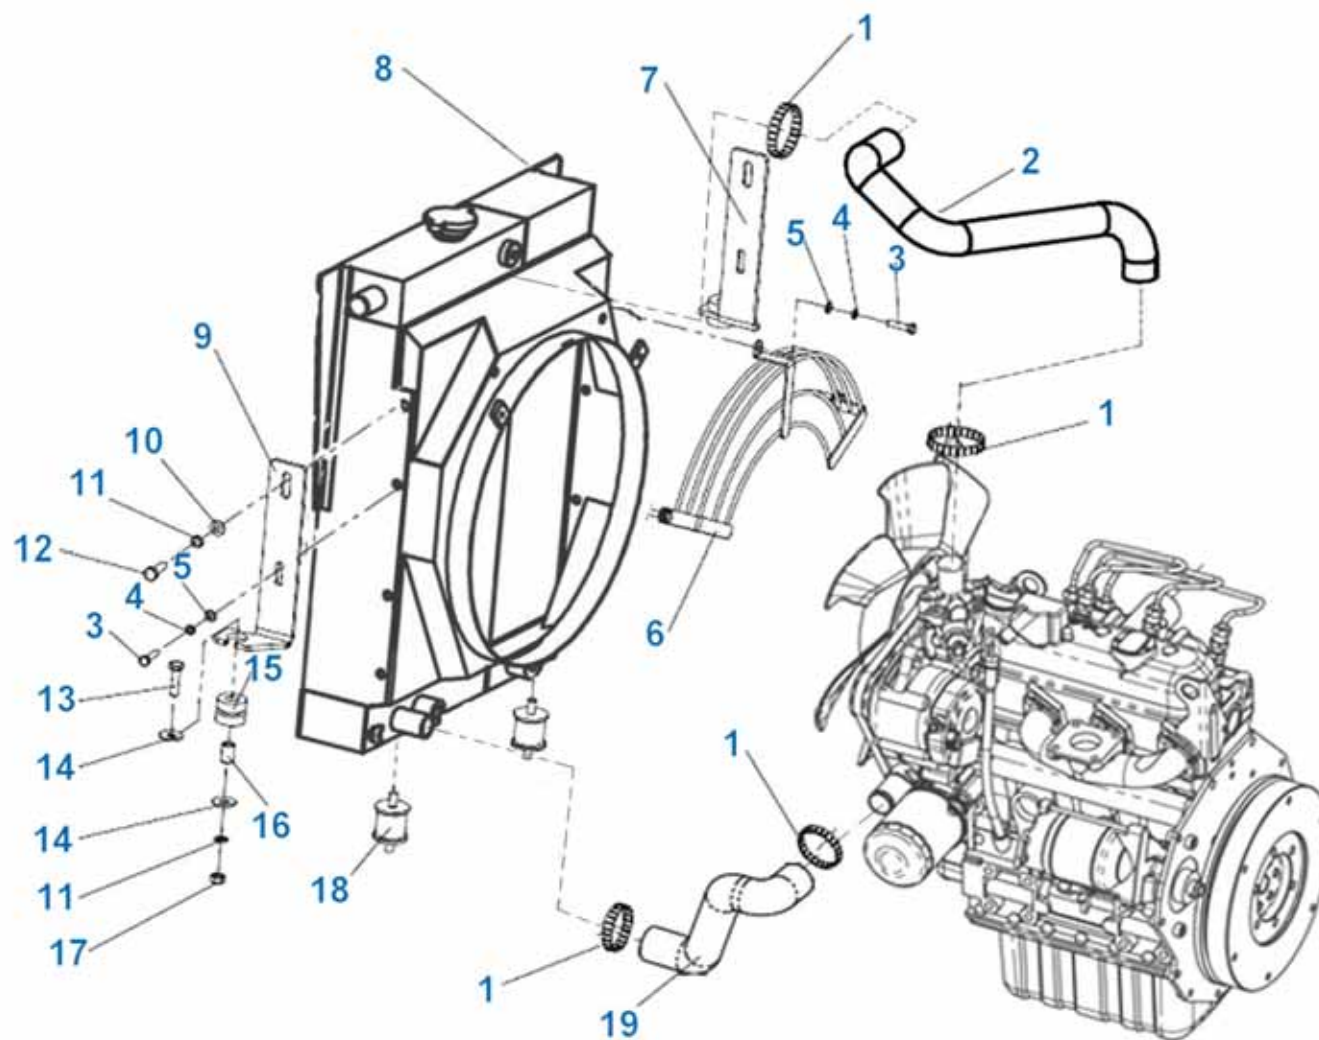

### Cooling system parts list

| Item | Part Number       | Part Name                    | Quantity | Remark |
|------|-------------------|------------------------------|----------|--------|
| 1    | JT08870-035040-00 | Hose clamp $\phi 35-\phi 40$ | 4        |        |
| 2    | 810-300008-G00    | Upper hose                   | 1        |        |
| 3    | 005783-006025-00  | Bolt M6X25                   | 3        |        |
| 4    | GT00093-000006-00 | Washer 6                     | 5        |        |
| 5    | 000971-000006-00  | Washer 6                     | 5        |        |
| 6    | 810-340300-000    | Radiator fan cover assembly  | 1        |        |
| 7    | 1130-340004-002   | Radiator left bracket        | 1        |        |
| 8    | 810-340100-G00    | Radiator assembly            | 1        |        |
| 9    | 1130-340005-002   | Radiator right bracket       | 1        |        |
| 10   | 000971-000008-00  | Washer 8                     | 2        |        |
| 11   | GT00093-000008-00 | Washer 8                     | 4        |        |
| 12   | 005783-008025-00  | Bolt M8X25                   | 2        |        |
| 13   | 005783-008045-00  | Bolt M8X45                   | 2        |        |
| 14   | GT00096-000008-00 | Washer 8                     | 4        |        |
| 15   | 1130-340006-G00   | Radiator up shock pad        | 2        |        |
| 16   | 1130-340007-G00   | Cover                        | 2        |        |
| 17   | GT06170-000008-00 | Nut 8                        | 2        |        |
| 18   | 1130-340001-G00   | Radiator shock pad           | 2        |        |
| 19   | 1130-300009-G00   | Drain pipe                   | 1        |        |
| -    | 130-300009-G50    | Drain pipe                   | 1        |        |


## 3.6 Fuel system

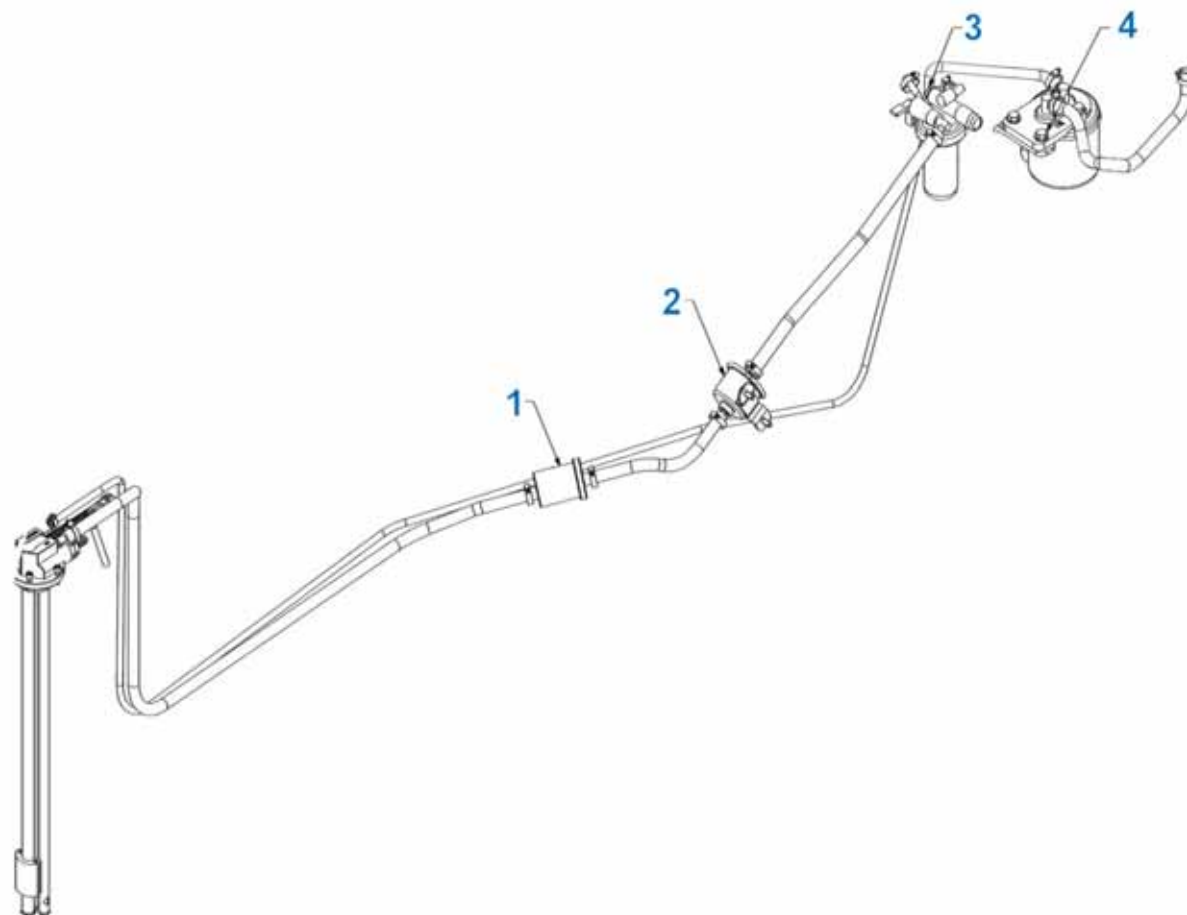

**Fuel system parts list**

| Item | Part Number     | Part Name           | Quantity | Remark |
|------|-----------------|---------------------|----------|--------|
| 1    | 1130-350100-G00 | Primary fuel filter | 1        |        |
| 2    | 1130-350200-G00 | Suction pump        | 1        |        |
| 3    | 1130-350400-G00 | Oil water separator | 1        |        |
| 4    | 1130-350300-G00 | Fuel filter         | 1        |        |

### 3.7 Power system


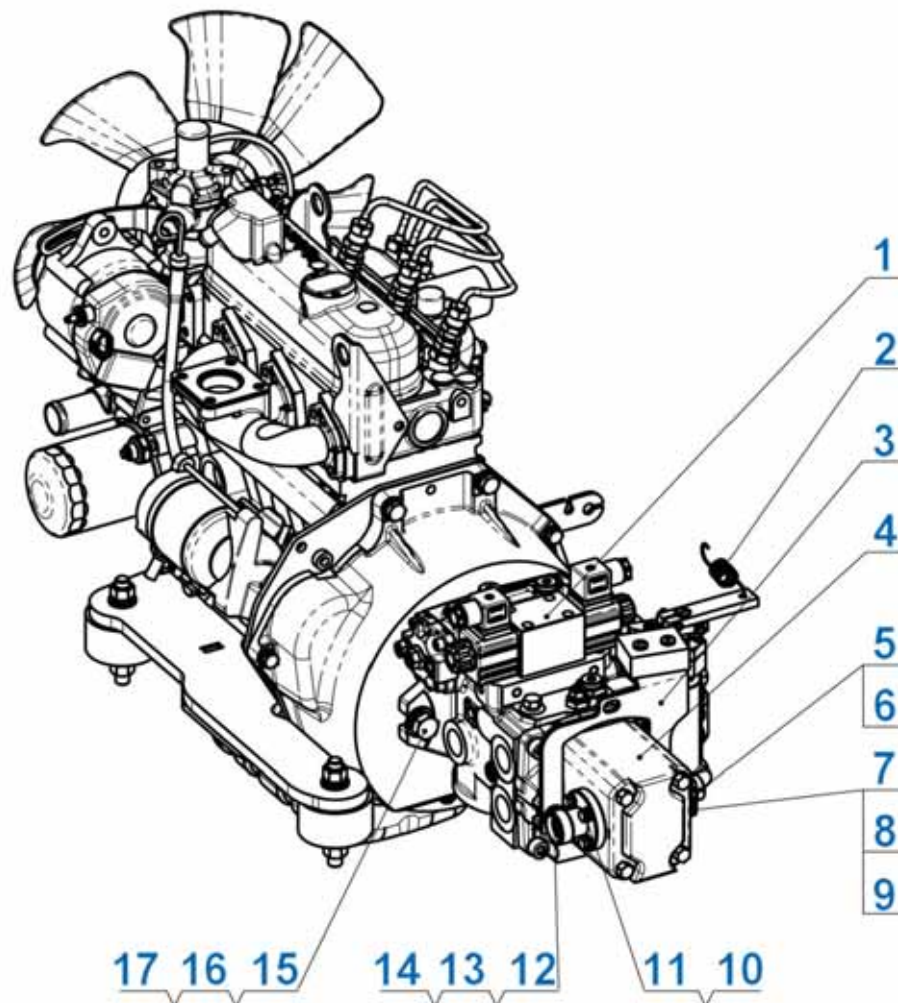


**Power system parts list**

| Item | Part Number     | Part Name                 | Quantity | Remark                    |
|------|-----------------|---------------------------|----------|---------------------------|
| 1    | 1130-100800-G00 | Plunger pump              | 1        | M4PV28-28 D235AR3BMVR-227 |
| 2    | 1130-100006-001 | Fretting return spring    | 1        |                           |
| 3    | 1130-700003-000 | Travel switch bracket     | 1        |                           |
| 4    | 1130-600900-G00 | Gear pump                 | 1        |                           |
| 5    | 1130-600201-000 | Gear pump oil outlet      | 1        |                           |
| 6    | 034521 200265   | O-ring 20x2.65            | 1        |                           |
| 7    | 005783 060201   | Hex head bolt 6x20-8.8    | 4        |                           |
| 8    | 000093 000061   | Spring washer 6           | 4        |                           |
| 9    | 000971 000061   | Flat washer 6             | 4        |                           |
| 10   | 1130-600101-000 | Gear pump oil inlet       | 1        |                           |
| 11   | 034521 250265   | O-ring 20x2.65            | 1        |                           |
| 12   | 005783 100302   | Hex head bolt M10x30-10.9 | 2        |                           |
| 13   | 000093 000101   | Spring washer 10          | 2        |                           |
| 14   | 000971 000101   | Flat washer 10            | 2        |                           |
| 15   | 005783 140401   | M14x40-8.8                | 2        |                           |
| 16   | 000093 000141   | Spring washer 14          | 2        |                           |
| 17   | 000971 000141   | Flat washer 14            | 2        |                           |



## 4. VEHICLE SYSTEM

### 4.1 Vehicle system general assembly

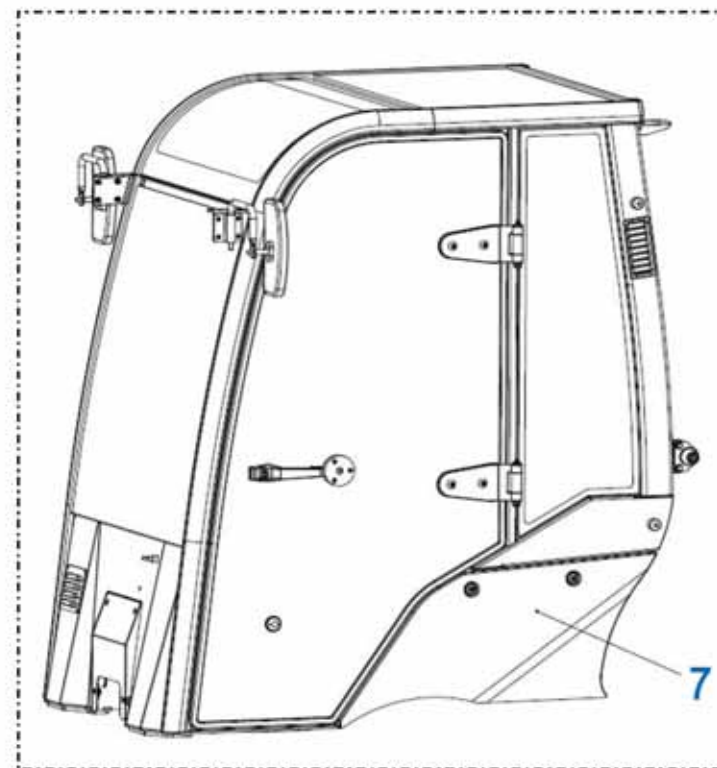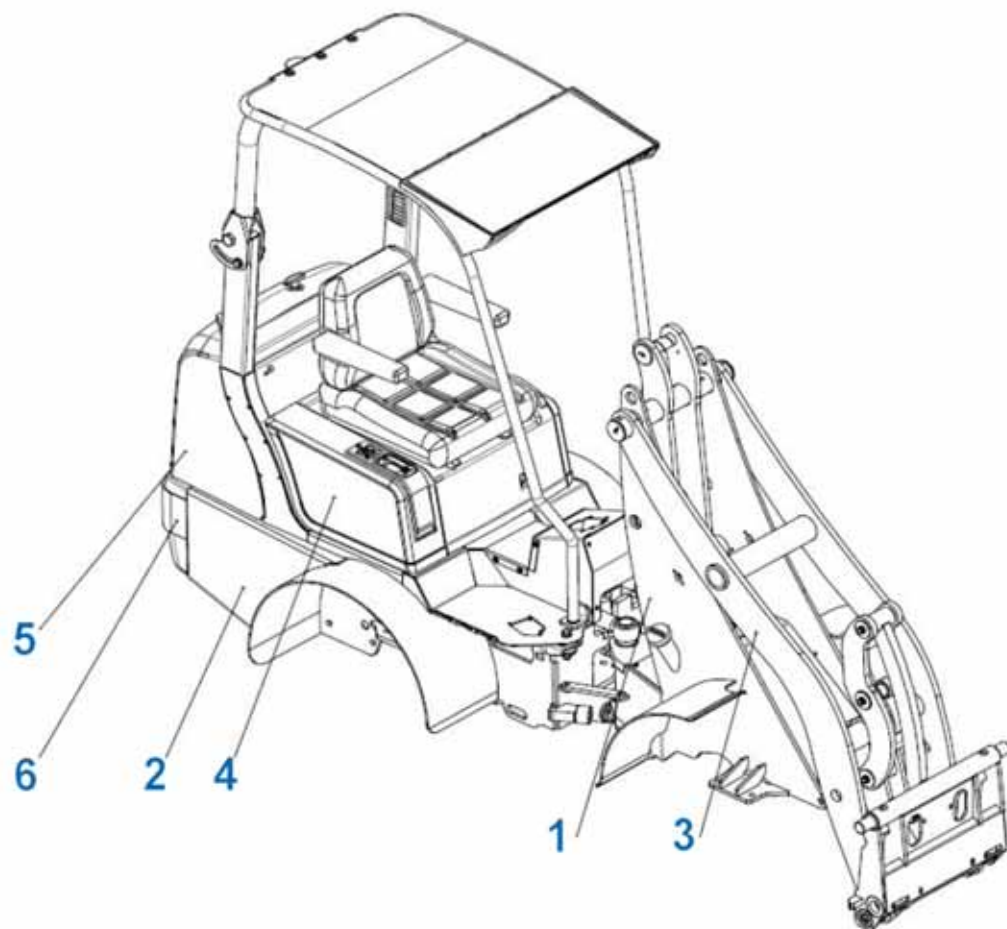



| Vehicle system general assembly assy parts list |                 |                      |          |        |
|-------------------------------------------------|-----------------|----------------------|----------|--------|
| Item                                            | Part Number     | Part Name            | Quantity | Remark |
| 1                                               | 810-410000-000  | Front chassis        | 1        | 2.9m   |
|                                                 | 1140-410000-503 | Front chassis        | 1        | 2.6m   |
|                                                 | 810-410000-010  | Front chassis        | 1        | 2.1m   |
| 2                                               | 1140-420000-510 | Rear chassis         | 1        |        |
| 3                                               | 810-430000-000  | Working device       | 1        | 2.9m   |
| -                                               | 1130-430000-503 | Working device       | 1        | 2.6m   |
| -                                               | 810-430000-010  | Working device       | 1        | 2.1m   |
| 4                                               | 810-440000-000  | Bonnet component     | 1        |        |
| 5                                               | 810-445000-000  | Rear bonnet assembly | 1        |        |
| 6                                               | 1130-440006-G60 | Counterweight        | 1        |        |
| 7                                               | 810-440000-200  | Cab assembly         | 1        |        |

## 4.2 Front chassis

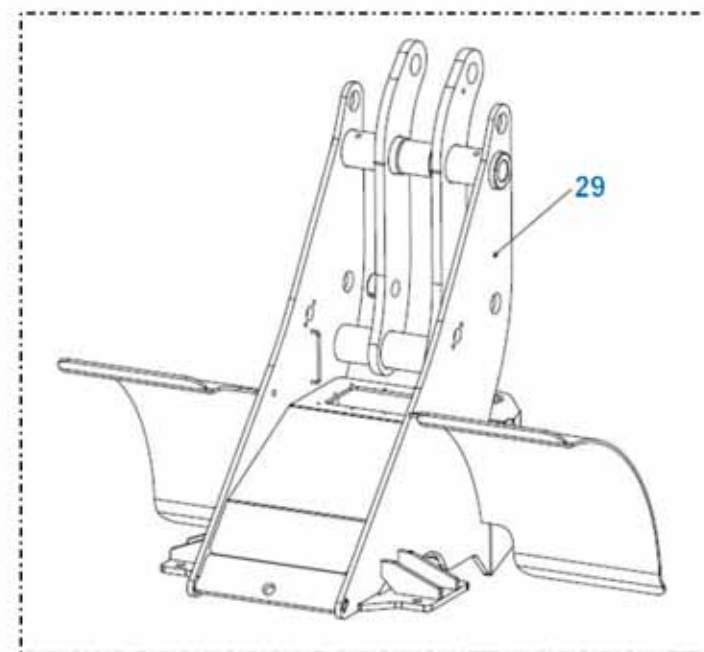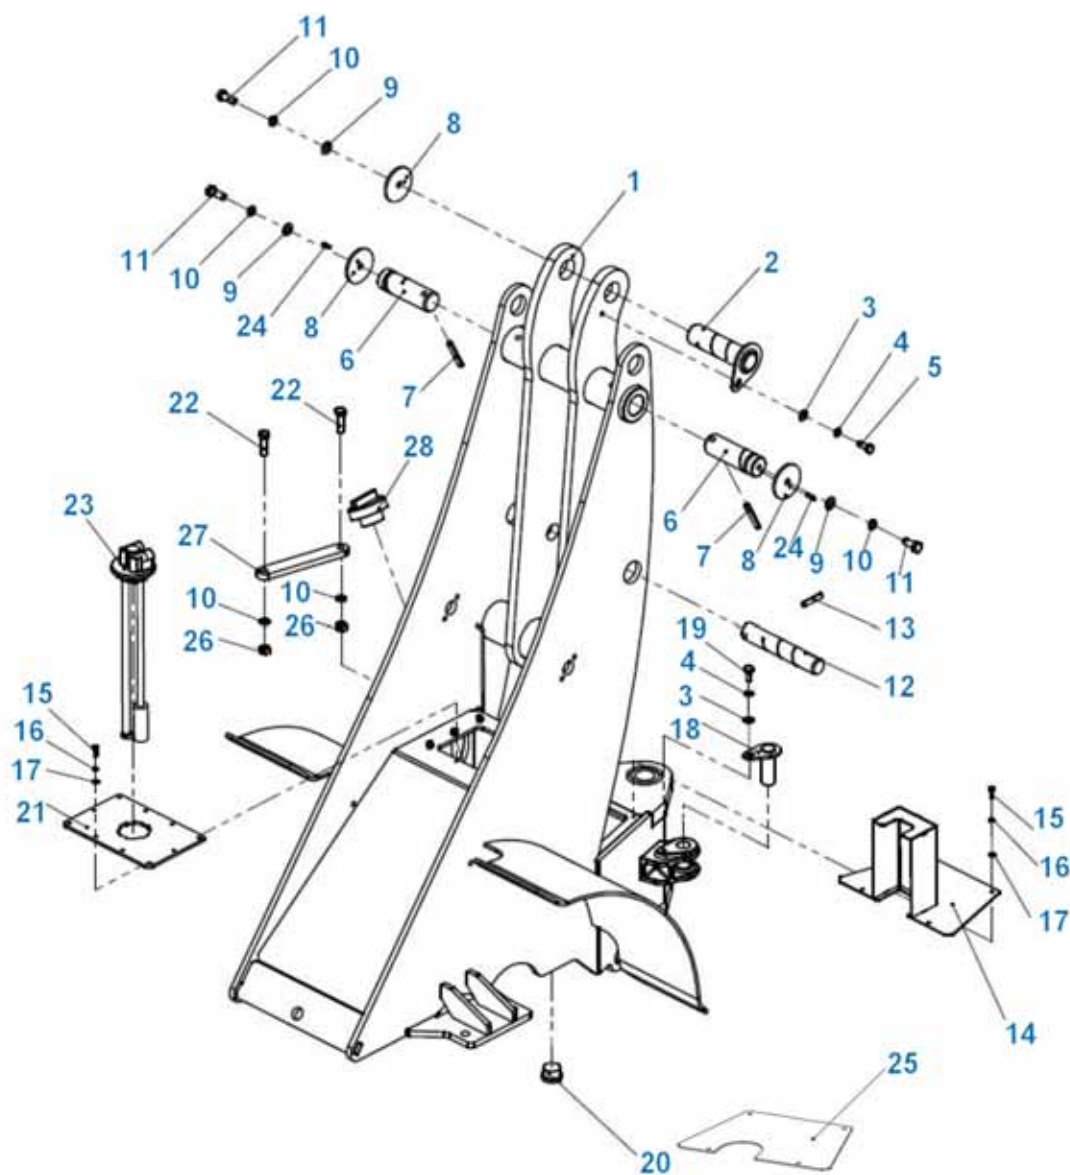


**Front chassis assy parts list**

| Item | Part Number        | Part Name                         | Quantity | Remark |
|------|--------------------|-----------------------------------|----------|--------|
| 1    | 810-410000-010     | Front chassis                     | 1        | 2.1m   |
| -    | 1140-410000-503    | Front chassis                     | 1        | 2.6m   |
| -    | 810-410000-000     | Front chassis                     | 1        | 2.9m   |
| 2    | 1130-410200-000    | Hinge pin assembly                | 1        |        |
| 3    | 000971-000010-00   | Washer 10                         | 6        |        |
| 4    | GT00093-000010-00  | Washer 10                         | 6        |        |
| 5    | GT5783-010030-00   | Bolt M10x30                       | 1        |        |
| 6    | 1130-410102-000    | Hinge pin                         | 2        |        |
| 7    | GT879P1-010070-00  | Elastic cylindrical pin 10 x 70mm | 2        |        |
| 8    | 1130-400015-000    | Washer                            | 3        |        |
| 9    | 000971-000012-00   | Washer 12                         | 3        |        |
| 10   | GT0093-000012-00   | Washer 12                         | 3        |        |
| 11   | GT5783-012030-00   | Bolt M12x30                       | 3        |        |
| 12   | 1130-400004-000    | Hinge pin                         | 1        |        |
| 13   | GT879P1-010050-00  | Elastic cylindrical pin 10 x 50mm | 1        |        |
| 14   | 1130-400800-000    | Oil filter cover plate            | 1        |        |
| 15   | 005783-006016-00   | Bolt M6X16                        | 14       |        |
| 16   | 000971-000006-00   | Washer 6                          | 14       |        |
| 17   | GT000093-000006-00 | Washer 6                          | 14       |        |
| 18   | 1130-200100-000    | Hinge pin assembly                | 1        |        |
| 19   | GT5783-010020-00   | Bolt M10x20                       | 1        |        |
| 20   | 1130-400008-G00    | Fuel tank G1                      | 1        |        |
| 21   | 1130-410035-510    | Fuel tank cover plate             | 1        |        |
| 22   | GT5783-012040-00   | Bolt M12x40                       | 2        |        |

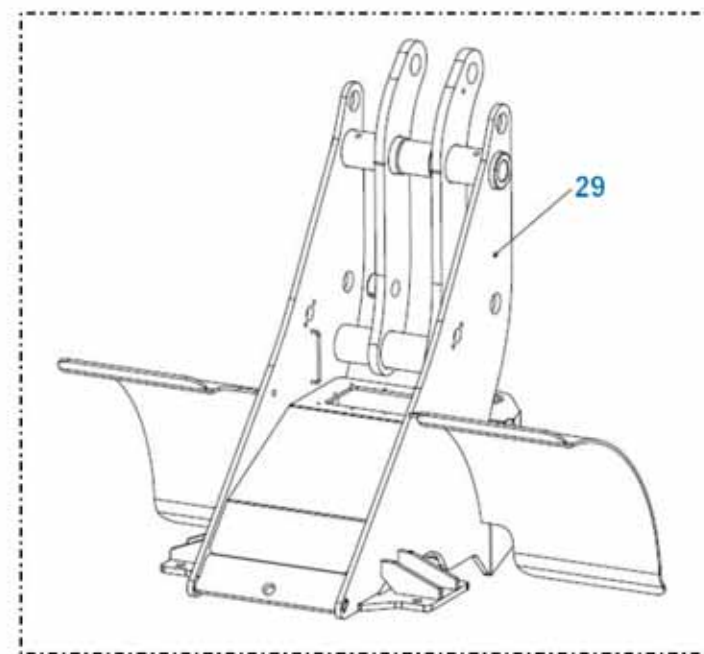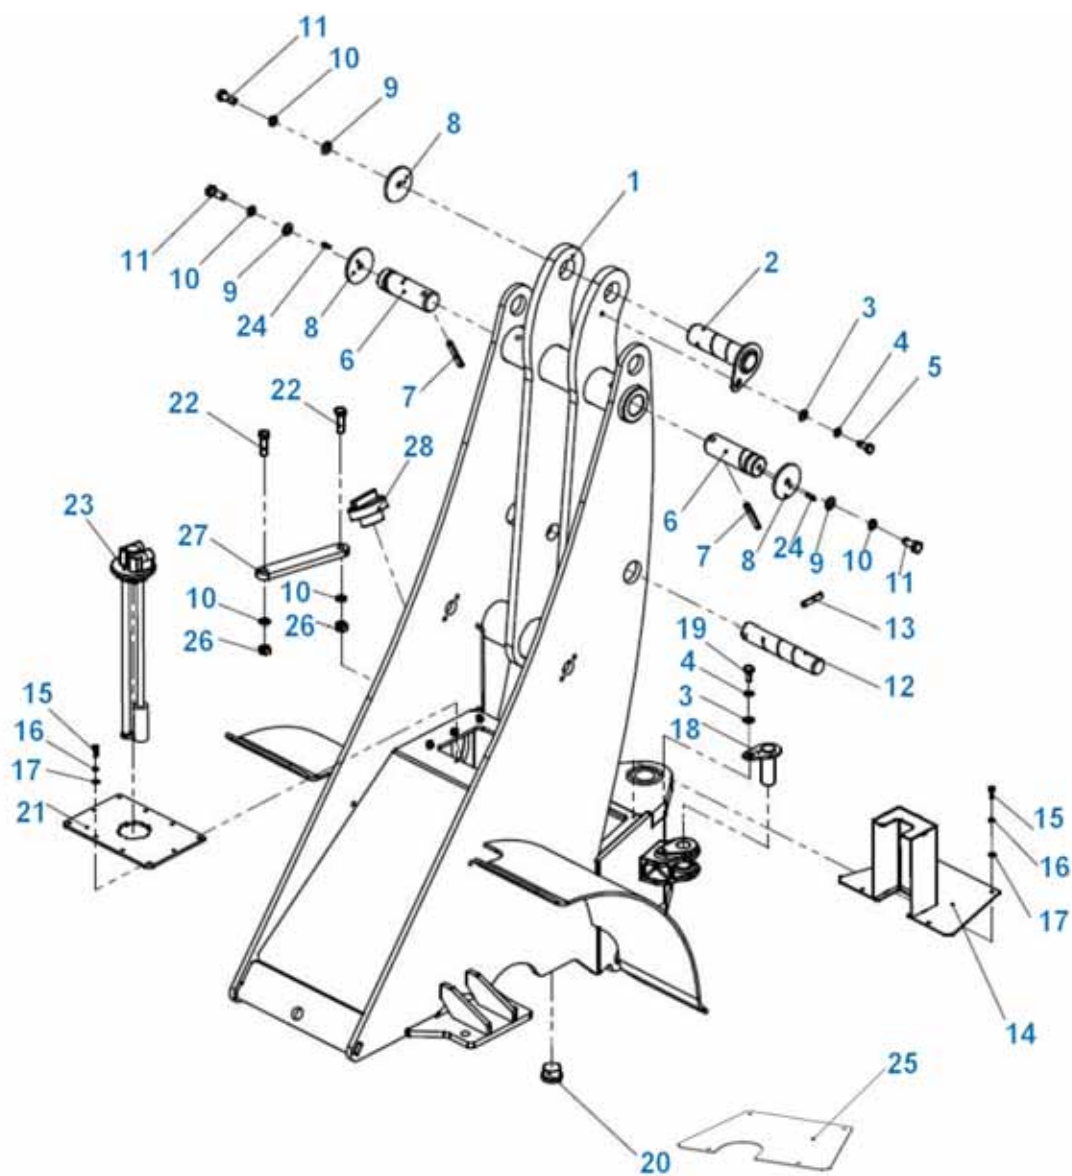


| Front chassis assy parts list |                   |                         |          |                                        |
|-------------------------------|-------------------|-------------------------|----------|----------------------------------------|
| Item                          | Part Number       | Part Name               | Quantity | Remark                                 |
| 23                            | 1130-701500-G01   | Fuel sensor             | 1        | 2.9m                                   |
|                               | 1130-701500-G03   | Fuel sensor             | 1        | 2.6m                                   |
|                               | 810-701500-G10    | Fuel sensor             | 1        | 2.1m                                   |
| 24                            | GT879P1-005020-00 | Cylindrical pin 5x20    | 2        |                                        |
| 25                            | 810-400801-010    | Cover plate             | 1        | 2.6m, 2.9m                             |
|                               | 810-413003-010    | Cover plate             | 1        | 2.1m                                   |
| 26                            | GT06170-000012-00 | Hexagon nut M12-8       | 6        |                                        |
| 27                            | 1130-435000-000   | Connecting rod assembly | 1        |                                        |
| 28                            | 1130-410034-G00   | Fuel filler cap         | 1        |                                        |
| 29                            | 810-413000-010    | Front chassis           | 1        | Lifting height 2.1m with six-way valve |
|                               | 810-413000-000    | Front chassis           | 1        | Lifting height 2.9m with six-way valve |
|                               | 1140-413000-503   | Front chassis           | 1        | Lifting height 2.6m with six-way valve |

## 4.3 Rear chassis

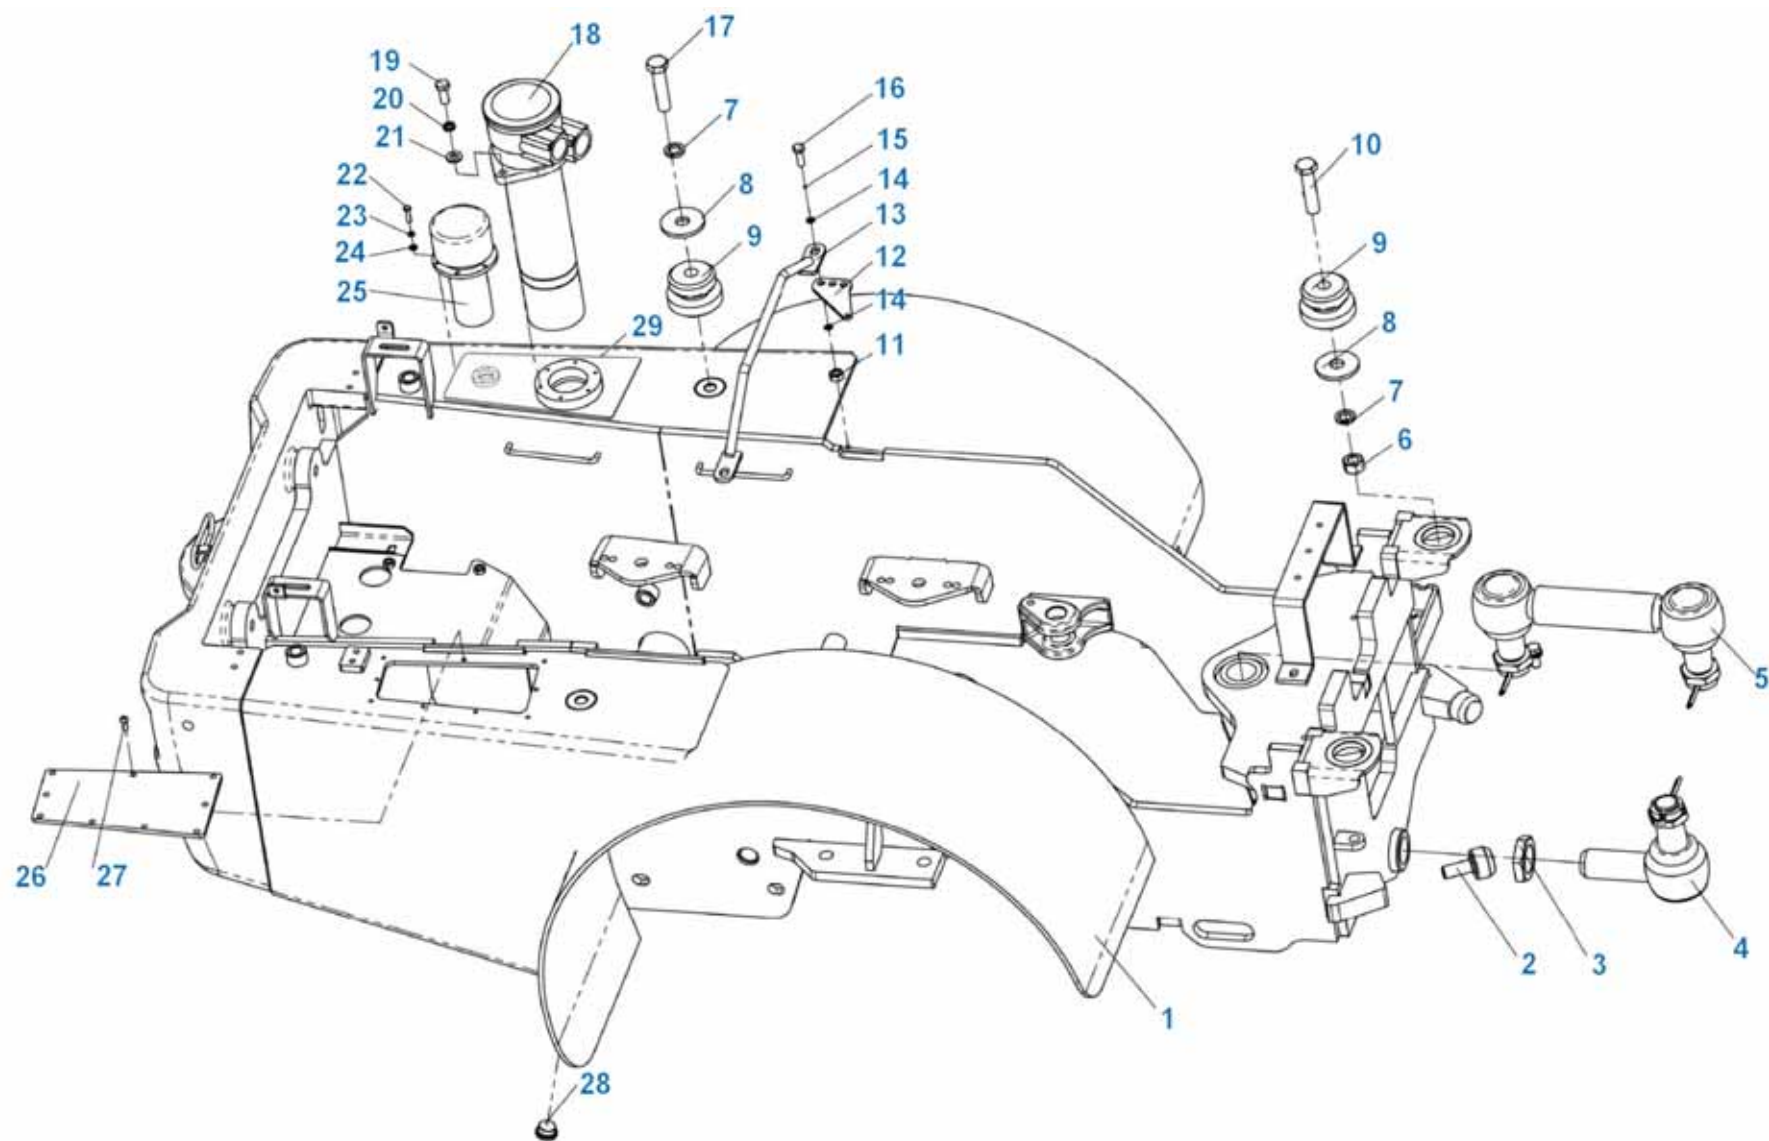

**Rear chassis assy parts list**




| Item | Part Number       | Part Name                               | Quantity | Remark         |
|------|-------------------|-----------------------------------------|----------|----------------|
| 1    | 1140-420000-510   | Rear chassis component                  | 1        |                |
| -    | 1140-420000-001   | Rear chassis component                  | 1        | Narrow fenders |
| 2    | 1130-400900-001   | Limited block                           | 2        |                |
| 3    | GT06173-000038-01 | Thin nut M38X1.5                        | 1        |                |
| 4    | 1130-400100-000   | Unilateral spherical hinge component    | 1        |                |
| 5    | 1130-400200-000   | Bidirectional spherical hinge component | 1        |                |
| 6    | GT889P1-000016-00 | Lock nut M16                            | 2        |                |
| 7    | GT00093-000016-00 | Washer 16                               | 4        |                |
| 8    | GT05287-000016-00 | Extra large washer 16                   | 4        |                |
| 9    | 1130-400800-G00   | Canopy shock pad                        | 4        |                |
| 10   | GT05782-016080-00 | Bolt M16X80                             | 2        |                |
| 11   | GT889P1-000008-00 | Lock nut M8                             | 2        |                |
| 12   |                   | This part has been canceled             |          |                |
| 13   | 1140-700200-000   | Harness bracket assembly                | 1        |                |
| 14   | 000971-000008-00  | Washer 8                                | 4        |                |
| 15   | GT00093-000008-00 | Washer 8                                | 2        |                |
| 16   | 005783-008025-00  | Bolt M8X25                              | 2        |                |
| 17   | GT05782-016070-00 | Bolt M16X70                             | 2        |                |
| 18   | 1130-600700-G00   | Oil absorbing and returning filter      | 1        |                |
| 19   | 005783-010025-00  | Bolt M10X25                             | 2        |                |
| 20   | GT00093-000010-00 | Washer 10                               | 6        |                |
| 21   | 000971-000010-00  | Washer 10                               | 6        |                |
| 22   | 005783-005016-00  | Bolt M5X16                              | 6        |                |
| 23   | GT00093-000005-00 | Washer 5                                | 6        |                |
| 24   | 000971-000005-00  | Washer 5                                | 6        |                |
| 25   | 1130-600800-G00   | Prepressing air filter                  | 1        |                |

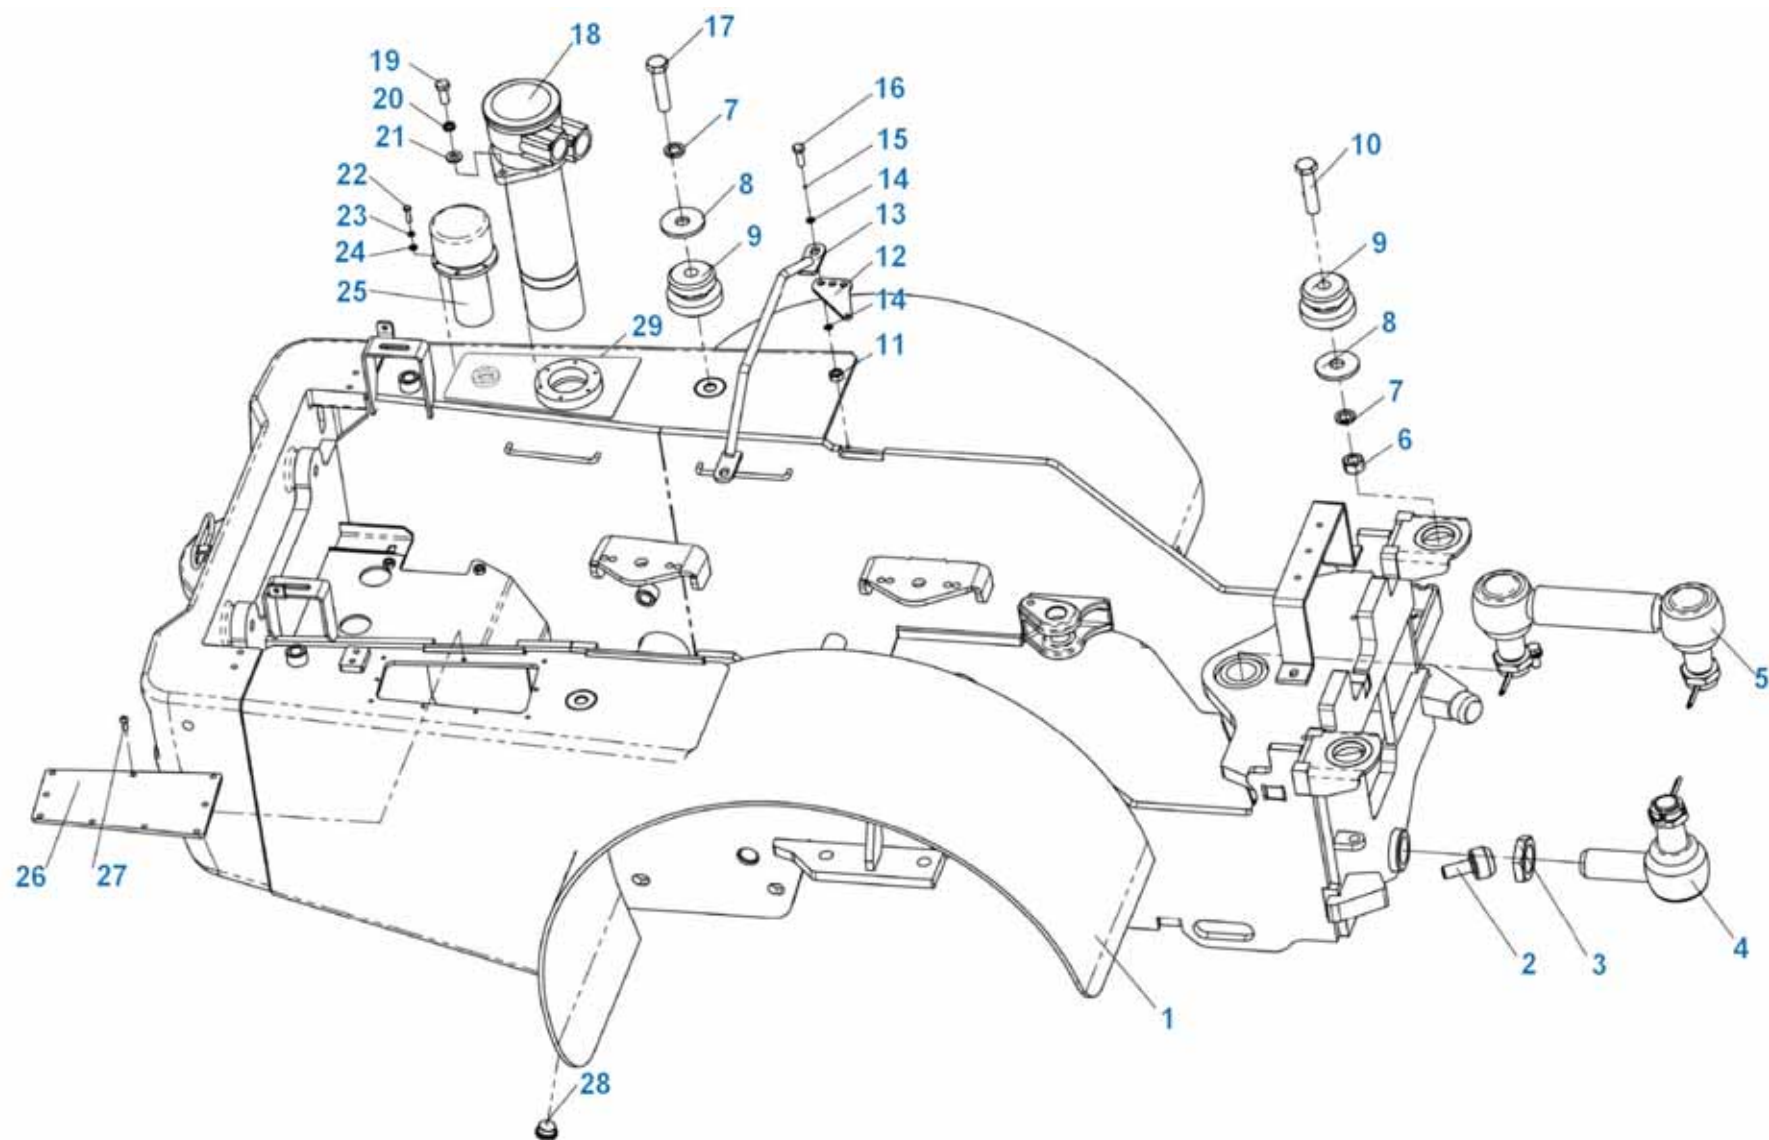

**Rear chassis assy parts list**




| Item                                                                                                                | Part Number       | Part Name                               | Quantity | Remark |
|---------------------------------------------------------------------------------------------------------------------|-------------------|-----------------------------------------|----------|--------|
| 26                                                                                                                  | 1140-401100-510   | Hydraulic oil tank cover plate          | 1        |        |
| 27                                                                                                                  | GT070P2-006016-00 | Hexagon socket button head screws M6X16 | 9        |        |
| 28                                                                                                                  | 1130-400008-G00   | G1 oil tank plug                        | 2        |        |
| 29                                                                                                                  | 1130-401200-000   | Left oil tank cover plagte assembly     | 1        |        |
| Note: Fender for 1140-420012-001 (front fender), 1140-420014-001 (right fender) rear frame for narrow fender models |                   |                                         |          |        |

## 4.4 Working device

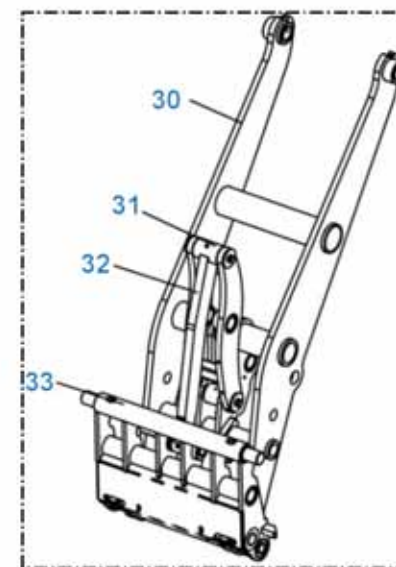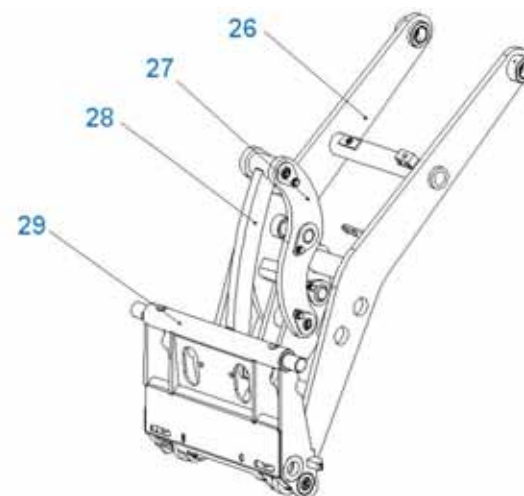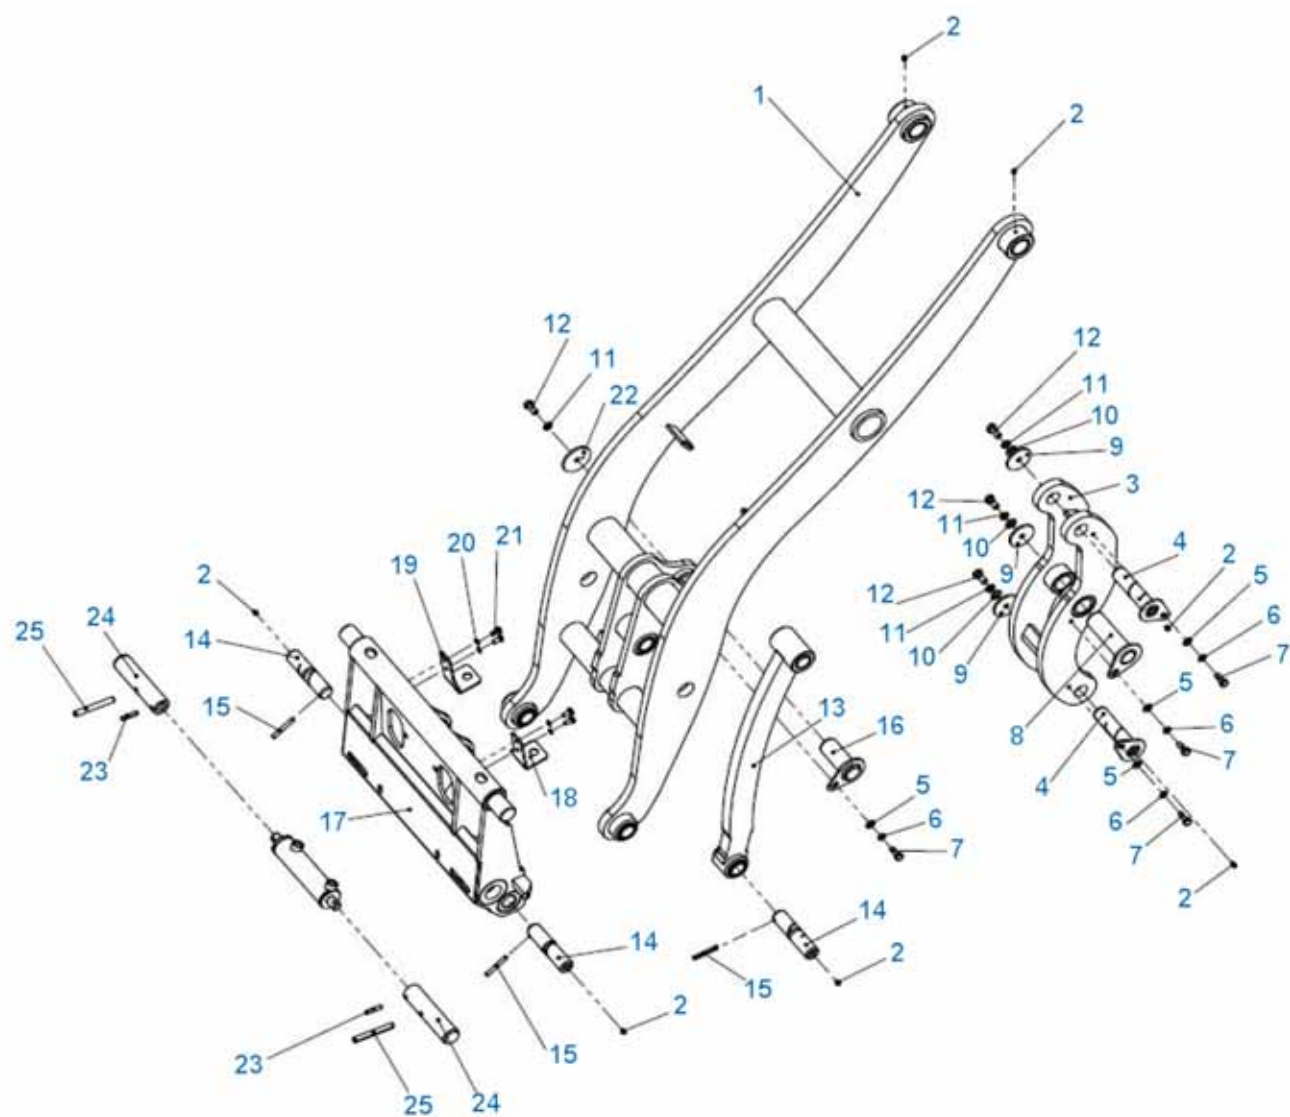

**Working device assy parts list**


| Item | Part Number        | Part Name                            | Quantity | Remark                               |
|------|--------------------|--------------------------------------|----------|--------------------------------------|
| 1    | 810-431000-000     | Arm assembly                         | 1        | 2.9m                                 |
| 2    | J1970-P1-006000-00 | M6 straight through oil pressure cup | 9        |                                      |
| 3    | 810-433000-000     | Crank arm assembly                   | 1        | 2.9m                                 |
| 4    | 1130-430200-001    | Hinge pin assembly                   | 2        |                                      |
| 5    | 000971-000010-00   | Washer 10                            | 4        |                                      |
| 6    | GT00093-000010-00  | Washer 10                            | 4        |                                      |
| 7    | 005783-010025-00   | Bolt M10X25                          | 4        |                                      |
| 8    | 1130-430300-001    | Hinge pin assembly                   | 1        |                                      |
| 9    | 1130-400012-000    | Spacer                               | 3        |                                      |
| 10   | 000971-000012-00   | Washer 12                            | 5        |                                      |
| 11   | GT00093-000012-00  | Washer 12                            | 5        |                                      |
| 12   | 005783-012030-00   | Bolt M12X30                          | 5        |                                      |
| 13   | 810-435000-000     | Connecting rod assembly              | 1        | 2.9m                                 |
| 14   | 1130-400016-001    | Hinge pin                            | 3        |                                      |
| 15   | GT879P1-0008060-00 | Pin 8X60                             | 3        |                                      |
| 16   | 1130-430100-000    | Hinge pin assembly                   | 1        |                                      |
| 17   | 810-432000-000     | Quickhitch assembly                  | 1        | 2.9m                                 |
| -    | 1130-432000-520    | Quickhitch assembly                  |          | 2.9m                                 |
| -    | 1130-432000-512    | Quickhitch assembly                  |          | 2.9m                                 |
| 18   | 1130-430002-502    | Hose mount plate                     | 1        | 1130-430003-502 (for four-way valve) |
| 19   | 1130-430001-502    | Hose mount plate                     | 1        | 1130-430003-502 (for four-way valve) |
| 20   | GT00093-000008-00  | Washer 8                             | 4        |                                      |
| 21   | 005783-008016-00   | Bolt M8X16                           | 4        |                                      |
| 22   | 1130-400015-000    | Spacer                               | 1        |                                      |
| 23   | GT119P1-008040-00  | Pin 8X40                             | 2        |                                      |

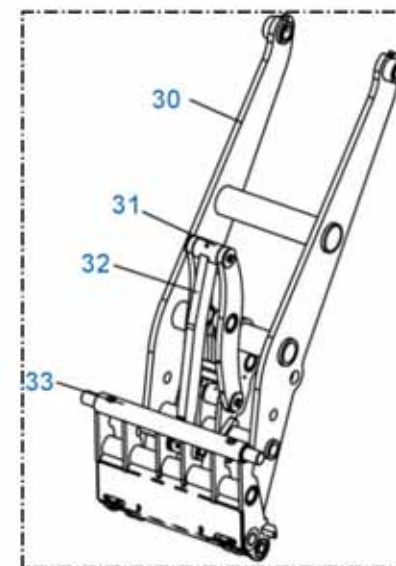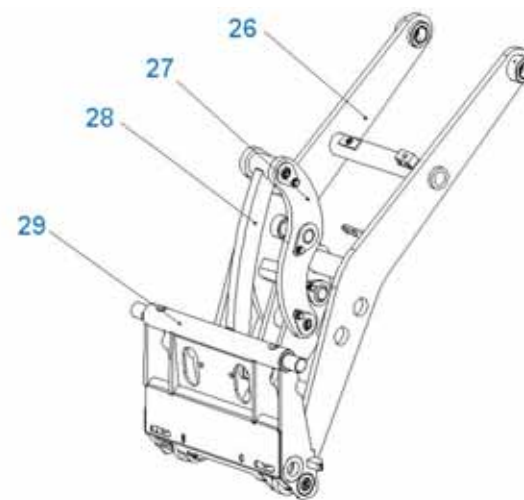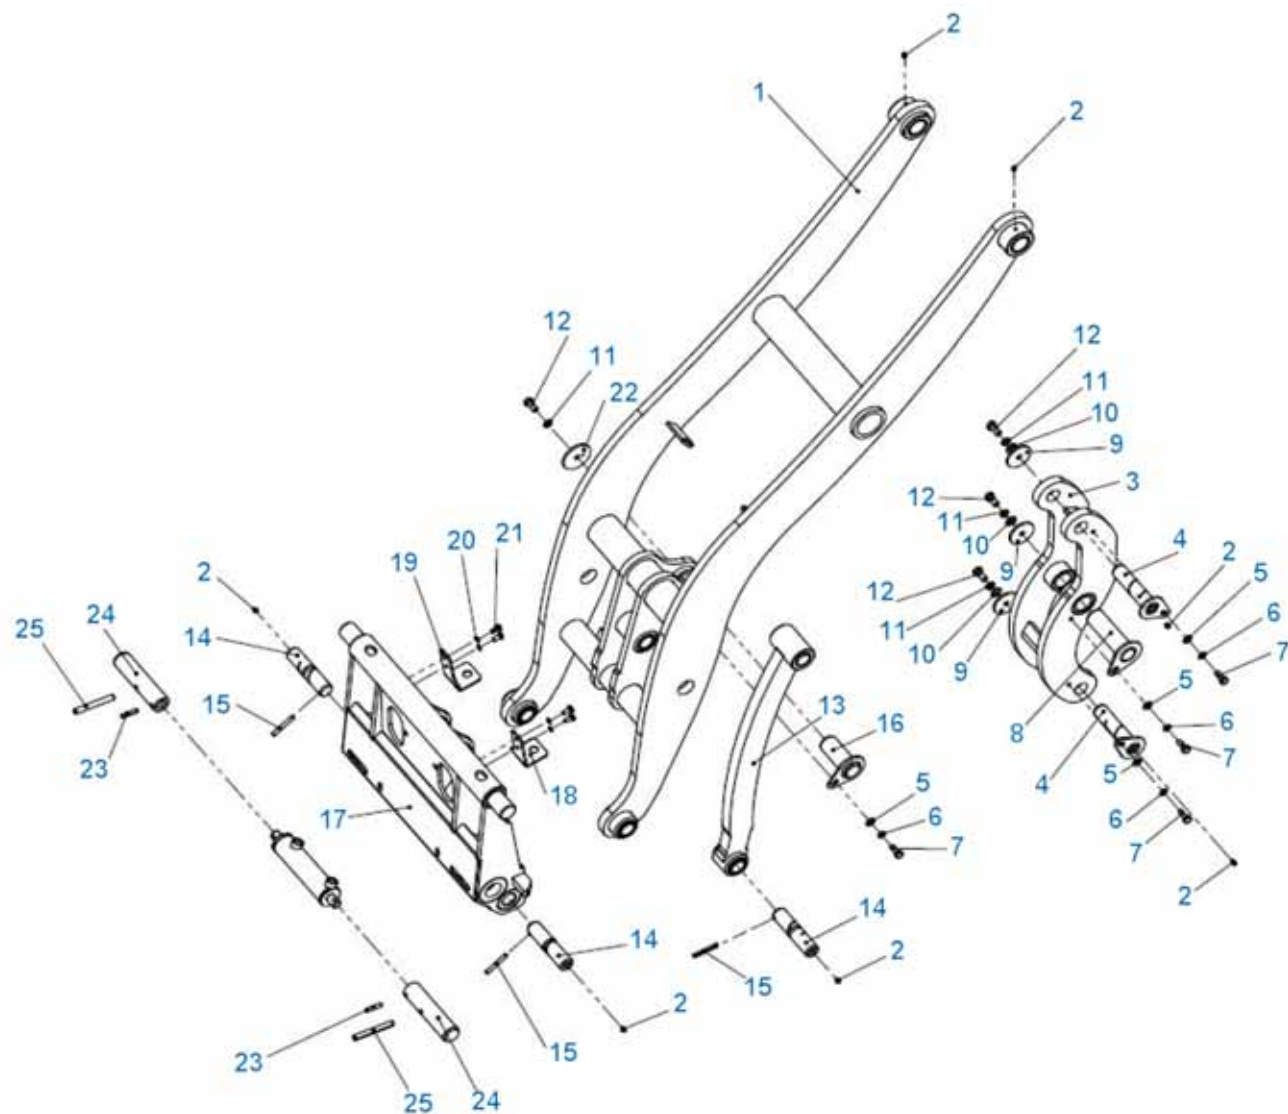

**Working device assy parts list**


| Item | Part Number       | Part Name               | Quantity | Remark                                     |
|------|-------------------|-------------------------|----------|--------------------------------------------|
| 24   | 1130-400014-000   | Hinge pin               | 2        |                                            |
| -    | 1130-400014-520   | Hinge pin               | 2        | European                                   |
| -    | 130-400014-512    | Hinge pin               | 2        | Sweden                                     |
| 25   | GT119P1-012100-00 | Pin 12X100              | 2        |                                            |
| 26   | 810-431000-010    | Arm assembly            | 1        | 2.1m                                       |
| 27   | 810-433000-010    | Crank arm assembly      | 1        | 2.1m                                       |
| 28   | 810-435000-010    | Connecting rod assembly | 1        | 2.1m                                       |
| 29   | 810-432000-000    | Quickhitch assembly     | 1        | 2.1m                                       |
| 30   | 1130-431000-503   | Arm assembly            | 1        | 2.6m                                       |
| 31   | 1130-433000-503   | Crank arm assembly      | 1        | 2.6m                                       |
| 32   | 1130-435000-503   | Connecting rod assembly | 1        | 2.6m                                       |
| 33   | 810-432000-000    | Quickhitch assembly     | 1        | 2.6m                                       |
| -    | 810-431100-010    | Arm                     | 1        | Lifting height 2.1m with six-way valve jib |
| -    | 1130-431100-502   | Arm                     | 1        | Lifting height 2.6m with six-way valve jib |
| -    | 810-431100-000    | Arm                     | 1        | Lifting height 2.9m with six-way valve jib |

## 4.5 Canopy mounting assembly

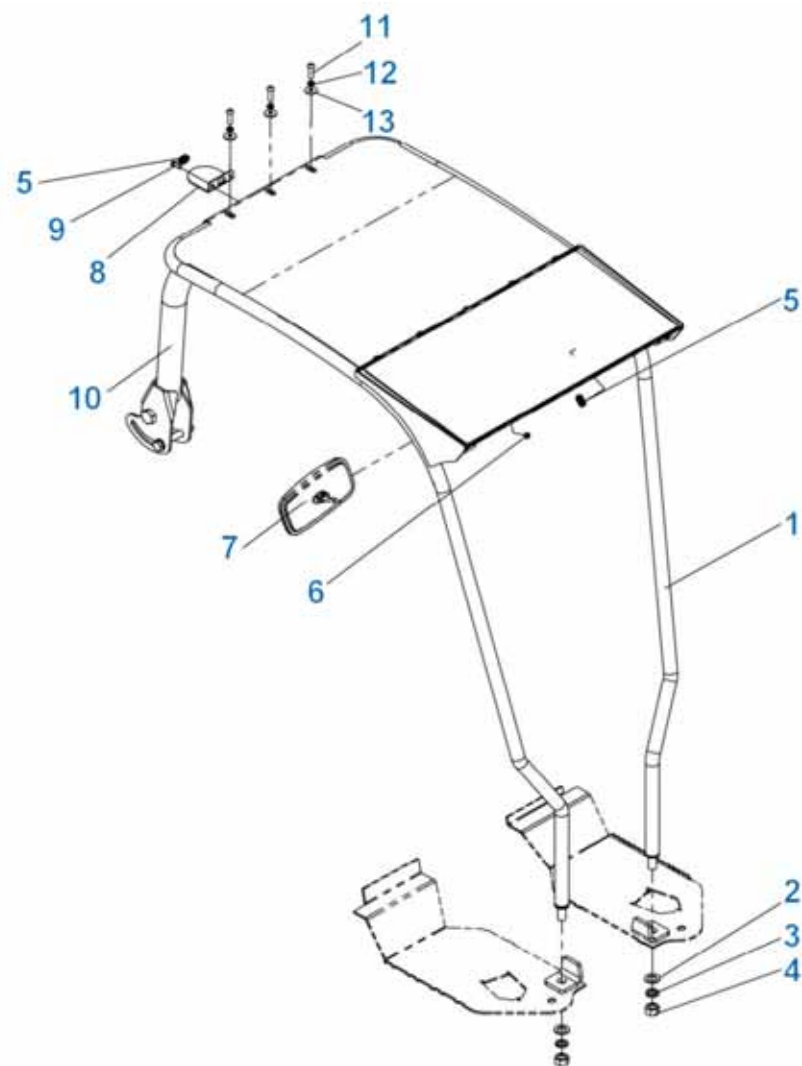


| Canopy mounting assembly parts list |                 |                                              |          |        |
|-------------------------------------|-----------------|----------------------------------------------|----------|--------|
| Item                                | Part Number     | Part Name                                    | Quantity | Remark |
| 1                                   | 810-444000-000  | Front leg assembly of canopy                 | 1        |        |
| 2                                   | 000971 000201   | Flat washer 20                               | 2        |        |
| 3                                   | 000093 000201   | Spring washer 20                             | 2        |        |
| 4                                   | 006170 020001   | Hexagon nut M20-8                            | 2        |        |
| 5                                   | K30G00 540005   | Head lamp coil                               | 3        |        |
| 6                                   | 006170 008001   | Hexagon nut M8-8                             | 2        |        |
| 7                                   | 1130-440700-G00 | Reflector                                    | 1        |        |
| 8                                   | 810-440012-000  | Beacon bracket                               | 1        |        |
| 9                                   | 005783 080201   | Hexagon bolt 6x20-8.8                        | 2        |        |
| 10                                  | 810-443000-000  | U bracket                                    | 1        |        |
| 11                                  | 000702 100351   | Hexagon socket button head screws M10x35-8.8 | 3        |        |
| 12                                  | 000093 000101   | Spring washer 10                             | 3        |        |
| 13                                  | 000096 000101   | Big washer 10                                | 3        |        |

## 4.6 Canopy base mounting assembly

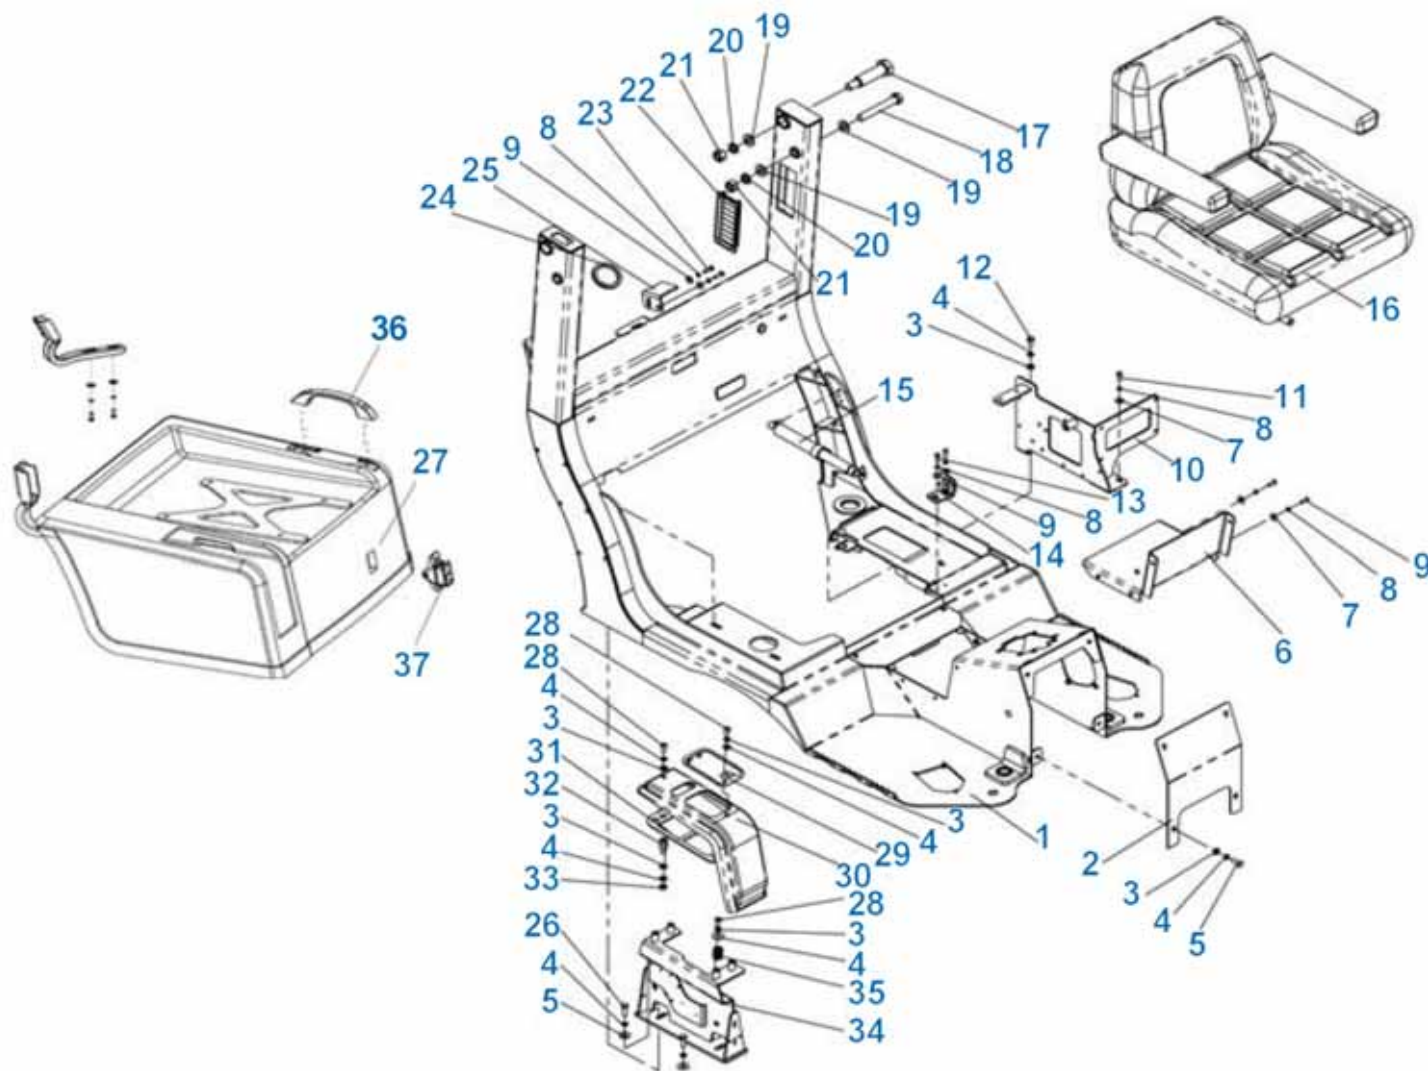


| Canopy base mounting assembly parts list |                 |                                             |          |        |
|------------------------------------------|-----------------|---------------------------------------------|----------|--------|
| Item                                     | Part Number     | Part Name                                   | Quantity | Remark |
| 1                                        | 810-441000-000  | Bonnet welding assembly                     | 1        |        |
| 2                                        | 1140-440003-000 | Front blanking plate                        | 1        |        |
| 3                                        | 000971 000081   | Flat washer 8                               | 12       |        |
| 4                                        | 000093 000081   | Spring washer 8                             | 10       |        |
| 5                                        | 005783 080201   | Hexagonal bolt M8x20-8.8                    | 12       |        |
| 6                                        | 810-440002-000  | Rear blanking plate                         | 1        |        |
| 7                                        | 000096 000061   | Big washer 6                                | 6        |        |
| 8                                        | 000093 000061   | Spring washer 6                             | 6        |        |
| 9                                        | 000702 060161   | Hexagon socket button head screws M6x16-8.8 | 6        |        |
| 10                                       | 810-440300-000  | Mounting bracket component                  | 1        |        |
| 11                                       | 005783 060161   | Hexagonal head bolt M6x16-8.8               | 1        |        |
| 12                                       | 005783 080161   | Hexagonal head bolt M8x16-8.8               | 1        |        |
| 13                                       | 000702 060201   | Hexagon socket button head screws M6x20-8.8 | 2        |        |
| 14                                       | 810-446000-000  | Latch hook fixed assembly                   | 1        |        |
| 15                                       | 810-470400-G00  | Seat air spring                             | 1        |        |
| 16                                       | 1130-440100-G00 | Seat                                        | 1        |        |
| 17                                       | 1130-400023-000 | Rear bend pipe fixing bolt                  | 1        |        |
| 18                                       | 005780 161101   | Hexagon bolt M16x110-4.8                    | 2        |        |
| 19                                       | 000971 000161   | Flat washer 16                              | 4        |        |
| 20                                       | 000093 000161   | Spring washer 16                            | 4        |        |
| 21                                       | 006170 016001   | Hexagon nut M16-8                           | 4        |        |
| 22                                       | 810-440009-000  | Inlet air louver                            | 1        |        |
| 23                                       | 005783 060201   | Hexagon bolt 6x20-8.8                       | 2        |        |
| 24                                       | 810-440011-000  | Air inlet retainer                          | 1        |        |
| 25                                       | 810-440004-000  | Lock limited plate                          | 1        |        |

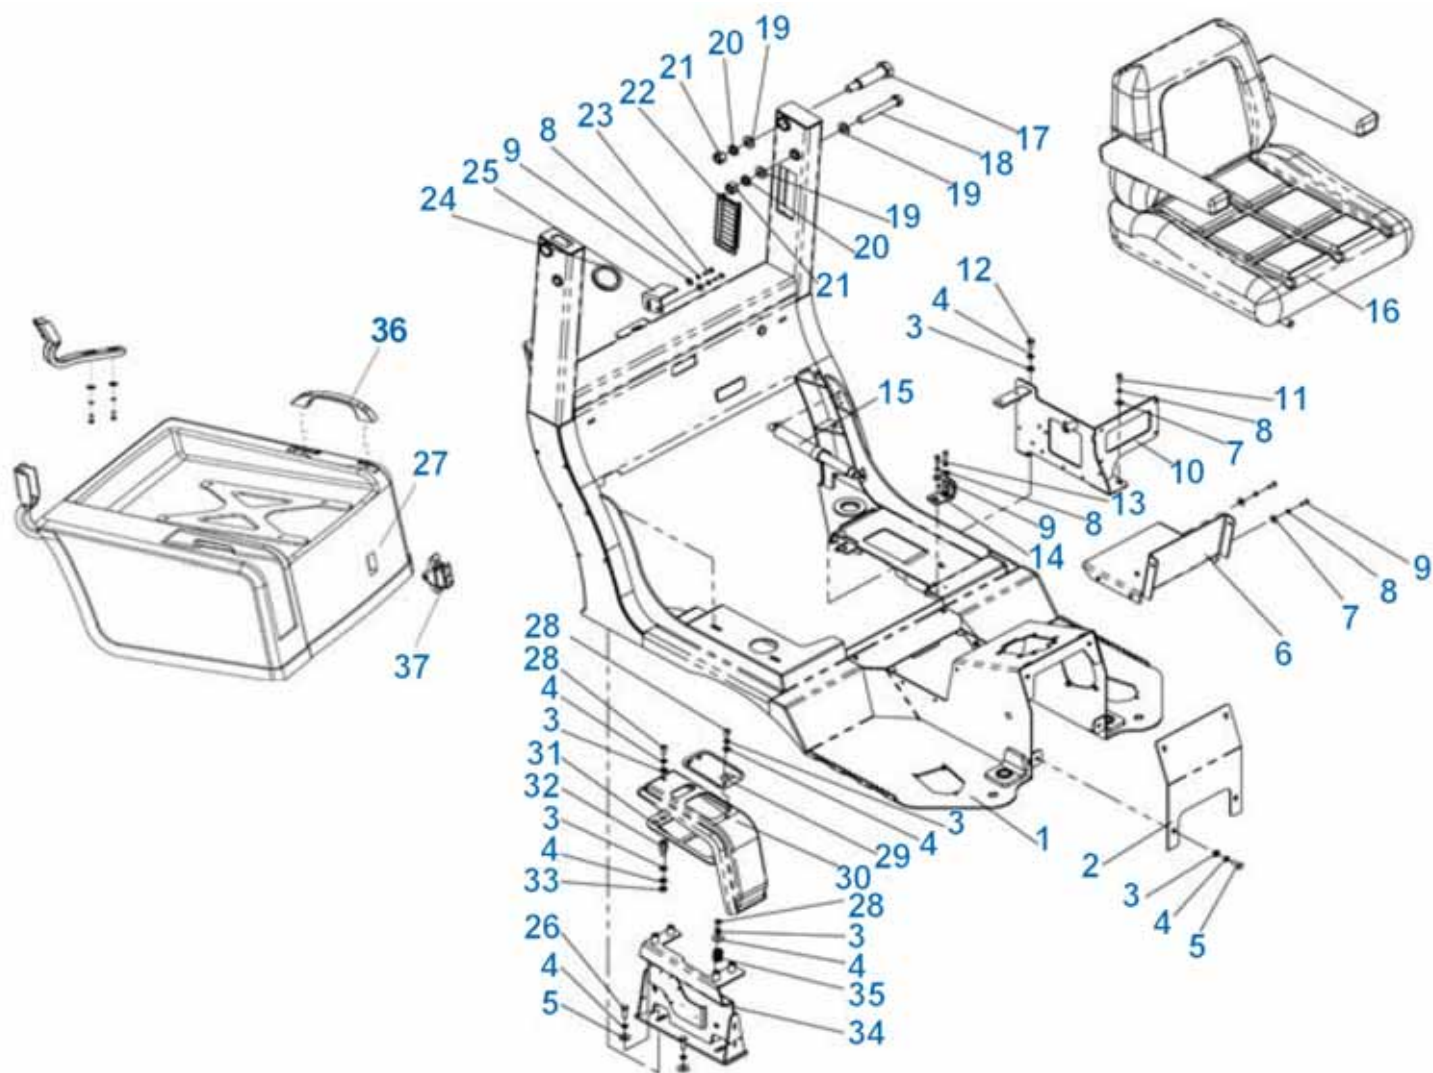

| Canopy base mounting assembly parts list |                |                                            |          |        |
|------------------------------------------|----------------|--------------------------------------------|----------|--------|
| Item                                     | Part Number    | Part Name                                  | Quantity | Remark |
| 26                                       | 005783 080251  | Hexagon bolt M8x25-8.8                     | 1        |        |
| 27                                       | 810-442000-000 | Bonnet assembly                            | 1        |        |
| 28                                       | 000702 080161  | Hexagon socket button head screw M8x16-8.8 | 1        |        |
| 29                                       | 810-440014-000 | Baffle ring                                | 1        |        |
| 30                                       | 810-440003-000 | Multitandem valve cover                    | 1        |        |
| 31                                       | 810-448001-000 | Multitandem valve plate                    | 1        |        |
| 32                                       | 810-448002-000 | Studs                                      | 1        |        |
| 33                                       | 006170 008001  | Hexagon nut M8-8                           | 4        |        |
| 34                                       | 810-447000-000 | Multitandem valve mount base component     | 1        |        |
| 35                                       | 810-440008-000 | Spring                                     | 4        |        |
| 36                                       | E25G00 520006  | Battery box handle                         | 1        |        |
| 37                                       | 810-442100-000 | Bonnet lock                                | 1        |        |


## 4.7 Rear bonnet

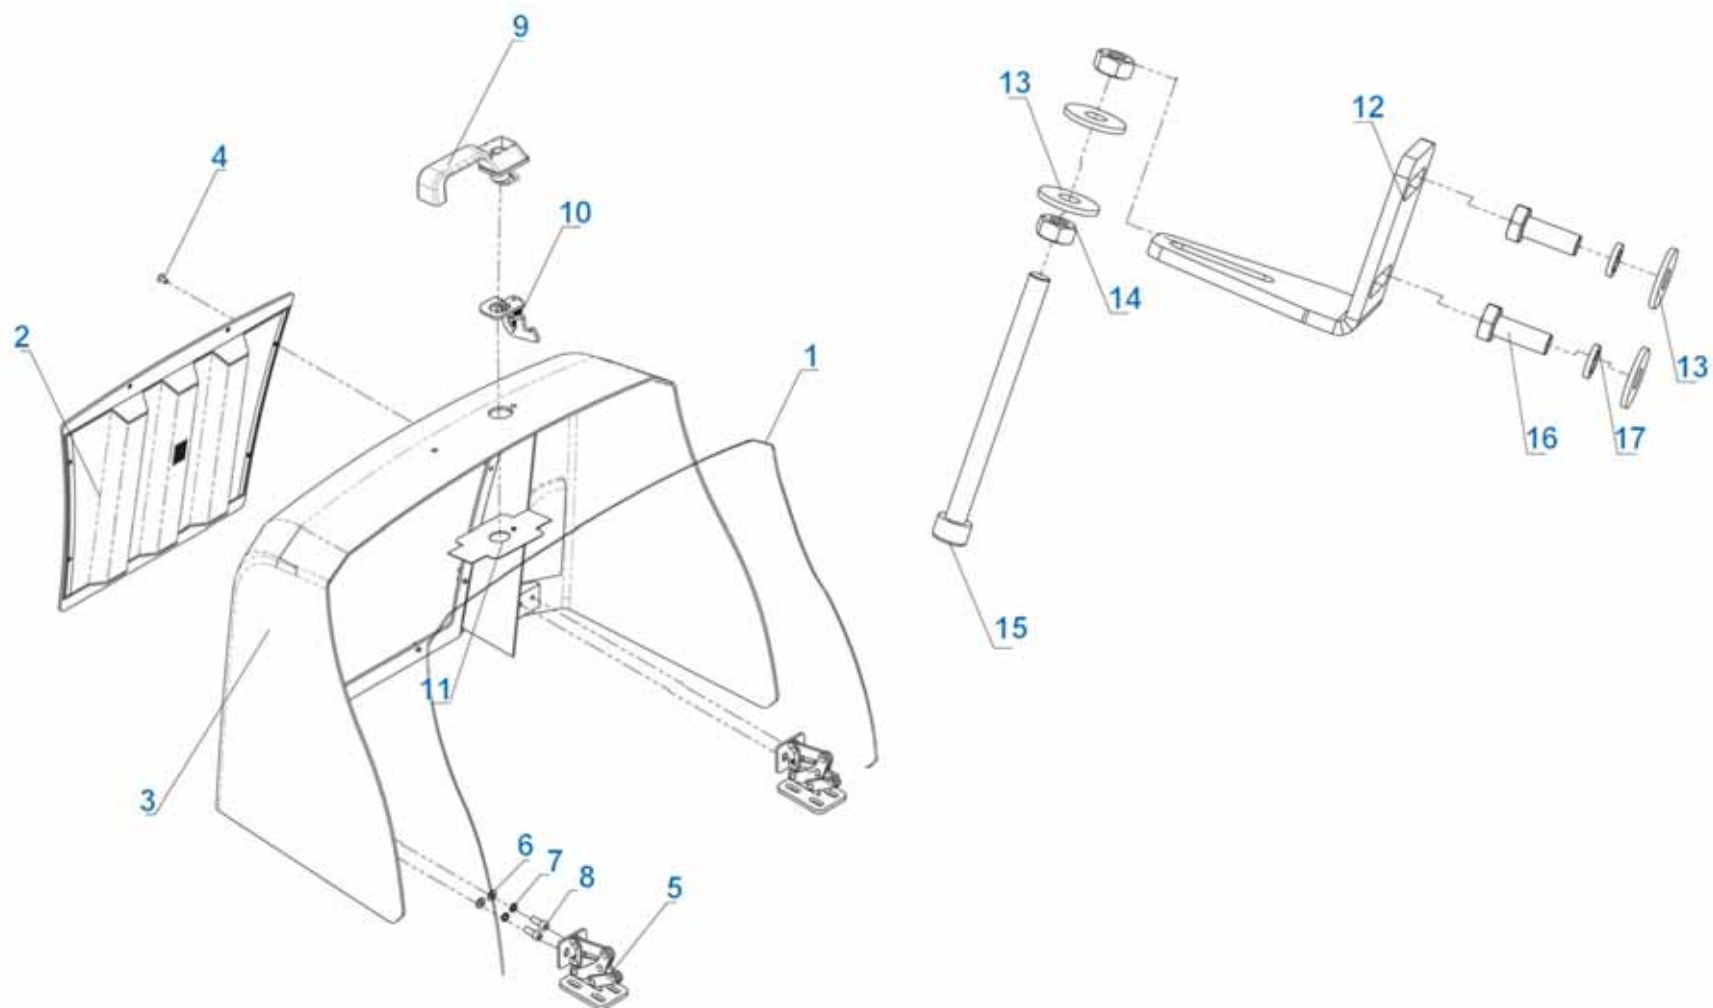

**Rear bonnet parts list**

| Item | Part Number        | Part Name                                        | Quantity | Remark |
|------|--------------------|--------------------------------------------------|----------|--------|
| 1    | 1130-445001-G00    | Strip                                            | 1        |        |
| 2    | 810-445300-000     | Rear protecting net assembly                     | 1        |        |
| 3    | 810-440501-538     | Bonnet                                           | 1        |        |
| 4    | GT070P3-006012-00  | Hexagon socket countersunk head screws M6x12-8.8 | 8        |        |
| 5    | 1130-445200-010    | Bonnet hinge                                     | 2        |        |
| 6    | 000971 000081      | Flat washer 8                                    | 4        |        |
| 7    | GT00093-000008-00  | Spring washer 8                                  | 4        |        |
| 8    | GT070P1-008020-00  | Hexagon socket button head screws M8x20-8.8      | 4        |        |
| 9    | 810-445600-538     | New tail cover lock handle                       | 1        |        |
| 10   | 850-440003-538     | Latch hook assembly                              | 1        |        |
| 11   | 810-445001-000     | Tail cover embedded parts                        | 1        |        |
| 12   | 810-440004-538     | Lock tongue mounting plate                       | 1        |        |
| 13   | 000096 000061      | Big washer 6                                     | 4        |        |
| 14   | GT06170-000006-00  | Hexagon nut M6-8                                 | 2        |        |
| 15   | GT070P1-006075-00  | Hexagon socket button head screws M6X75-8.8      | 1        |        |
| 16   | GT057981-006016-00 | Hexagonal head bolt M6X16-4.8                    | 2        |        |
| 17   | GT00093-000006-00  | Spring washer 6                                  | 2        |        |


## 4.8 Bonnet hinge

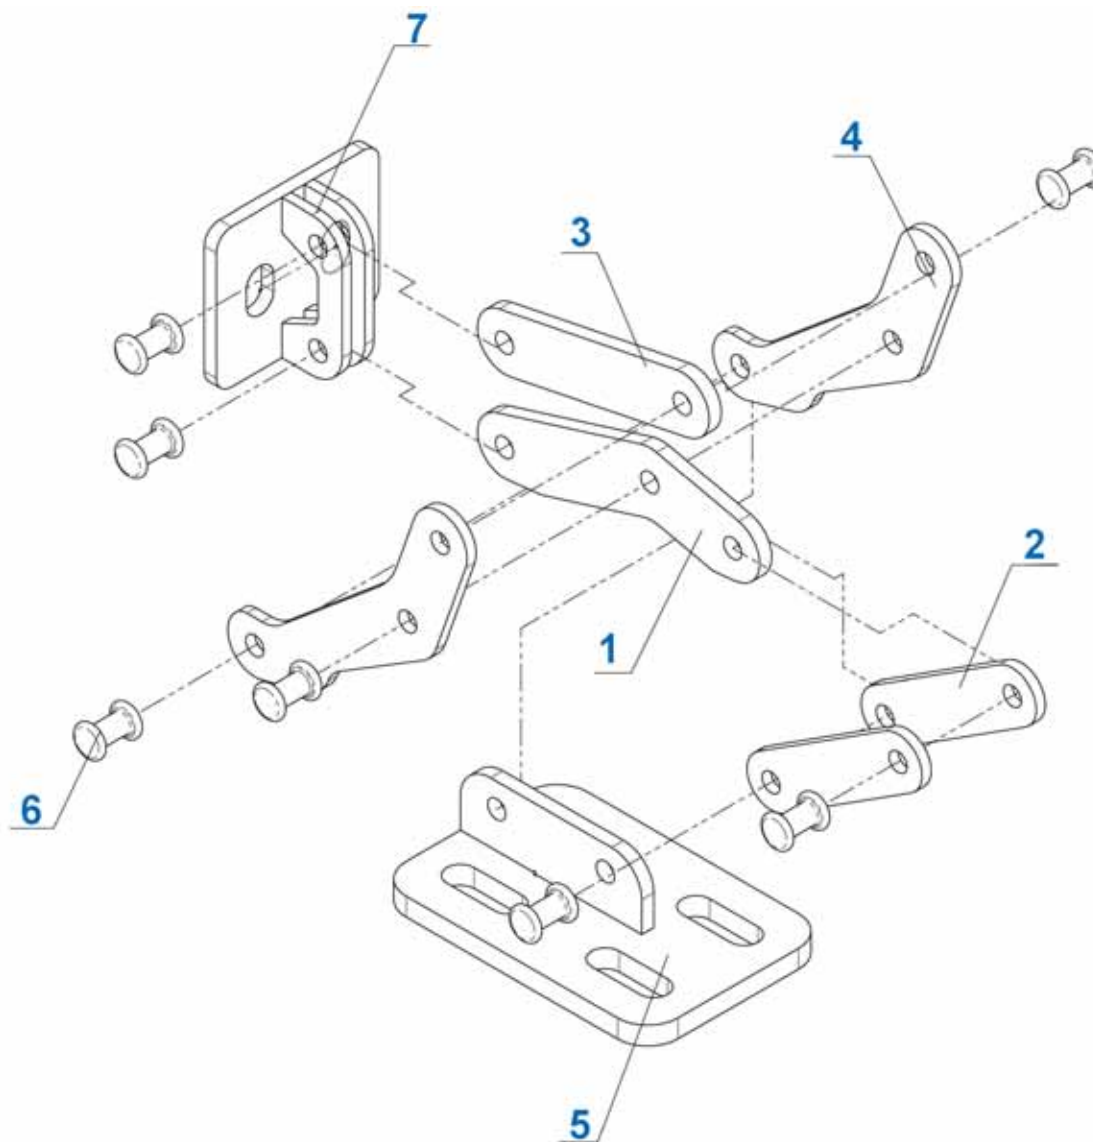

**Bonnet hinge parts list**

| Item | Part Number     | Part Name                      | Quantity | Remark |
|------|-----------------|--------------------------------|----------|--------|
| 1    | 1130-445203-010 | Connection plate III           | 1        |        |
| 2    | 1130-445202-010 | Connection plate II            | 2        |        |
| 3    | 1130-445204-010 | Connection plate IV            | 1        |        |
| 4    | 1130-445201-010 | Connection plate I             | 2        |        |
| 5    | 1130-445220-010 | Hinge base                     | 1        |        |
| 6    | 1130-442004-000 | Rivet $\phi 6$                 | 7        |        |
| 7    | 1130-445210-010 | Tail cover hinge mounting seat | 1        |        |


## 4.9 Counterweight

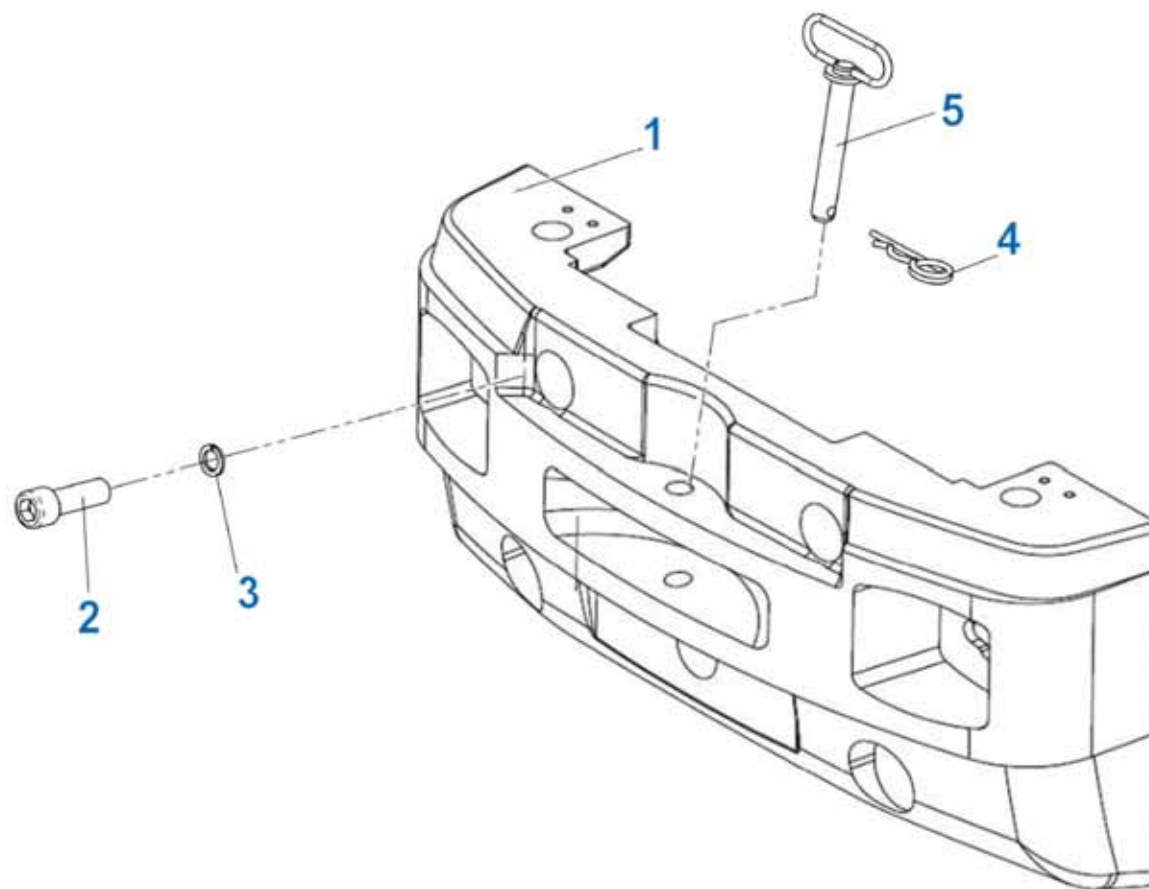

**Counterweight parts list**

| Item | Part Number       | Part Name            | Quantity | Remark |
|------|-------------------|----------------------|----------|--------|
| 1    | 1130-440006-G60   | Counterweight        | 1        |        |
| 2    | 005783-016060-00  | Bolt M16X60          | 3        |        |
| 3    | GT00093-000016-00 | Washer 16            | 3        |        |
| 4    | 1130-440010-G00   | Elastic cotter d1=φ4 | 1        |        |
| 5    | 1130-440900-000   | Towing plug          | 1        |        |


## 4.10 Cab mounting assembly I

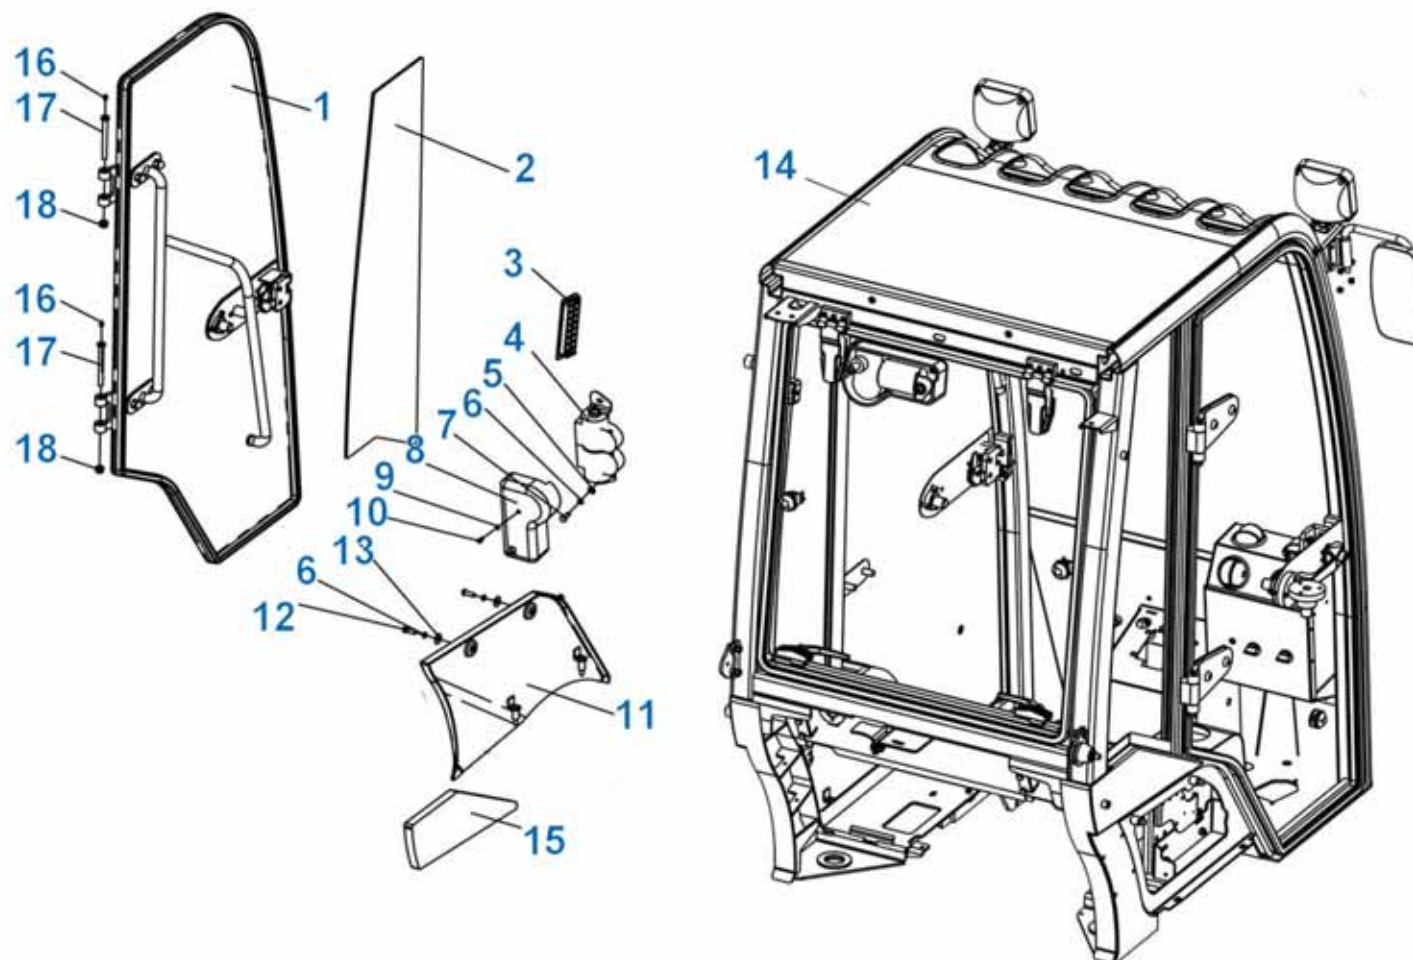

**Cab mounting assembly I parts list**


| Item | Part Number       | Part Name                                   | Quantity | Remark |
|------|-------------------|---------------------------------------------|----------|--------|
| 1    | 810-473000-200    | Left door assembly                          | 1        |        |
| 2    | 810-470002-300    | Rear side window                            | 1        |        |
| 3    | 810-440009-000    | Air inlet louver                            | 1        |        |
| 4    | zd1430-70sq       | Wiper motor assembly                        | 1        |        |
| 5    | 000971 000081     | Flat washer 8                               | 1        |        |
| 6    | 000093 000081     | Spring washer 8                             | 3        |        |
| 7    | 005783 080201     | Hexagonal head bolt M8x20-8.8               | 1        |        |
| 8    | 1140-474009-003   | Wiper cover                                 | 1        |        |
| 9    | 000093 000061     | Spring washer 6                             | 1        |        |
| 10   | 000702 060121     | Hexagon socket button head screws M6x12-8.8 | 1        |        |
| 11   | 810-440300-G00    | Cab left side plate                         | 1        |        |
| 12   | 000702 080251     | Hexagon socket button head screws M8x25-8.8 | 2        |        |
| 13   | 000096 000081     | Big washer 8                                | 2        |        |
| 14   | 810-441000-300    | Bonnet welded parts                         | 1        |        |
| 15   | 810-440018-100    | Side sound-proof pad                        | 1        |        |
| 16   | J7940P1-006000-00 | Oil cup M6                                  | 2        |        |
| 17   | 1140-470402-003   | Hinge pin                                   | 2        |        |
| 18   | 008891 010001     | Non-metal inserts hexagon lock nut          | 2        |        |

## 4.11 Cab mounting assembly II

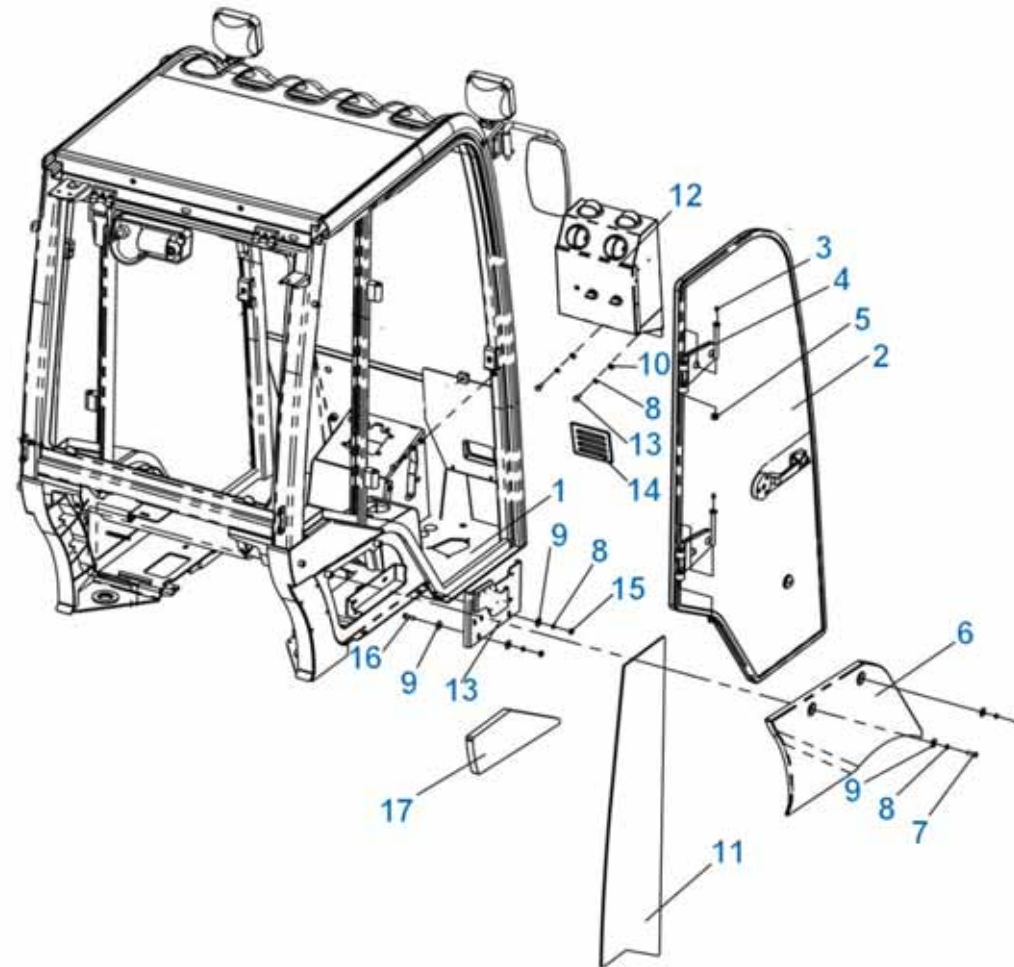


| Cab mounting assembly II parts list |                   |                                             |          |        |
|-------------------------------------|-------------------|---------------------------------------------|----------|--------|
| Item                                | Part Number       | Part Name                                   | Quantity | Remark |
| 1                                   | 810-441000-300    | Bonnet assemble and weld parts              | 1        |        |
| 2                                   | 810-472000-200    | Side door assembly                          | 1        |        |
| 3                                   | J7940P1-006000-00 | Oil cup M6                                  | 2        |        |
| 4                                   | 1140-470402-003   | Hinge pin                                   | 2        |        |
| 5                                   | 008891 010001     | Non-metal inserts hexagon lock nut          | 2        |        |
| 6                                   | 810-440100-G00    | Cab right side plate                        | 1        |        |
| 7                                   | 000702 080251     | Hexagon socket button head screws M8x25-8.8 | 2        |        |
| 8                                   | 000093 000081     | Spring washer 8                             | 4        |        |
| 9                                   | 000096 000081     | Big washer 8                                | 4        |        |
| 10                                  | 000971 000081     | Flat washer 8                               | 2        |        |
| 11                                  | 810-470002-300    | Rear side window                            | 1        |        |
| 12                                  | zc_asm111219A     | Heater (ventilation)                        | 1        |        |
| 13                                  | 005783 080161     | Hexagonal head bolt M8x16-8.8               | 2        |        |
| 14                                  | HDY-A             | Louver style gap                            | 1        |        |
| 15                                  | 006170 008001     | Hexagon nut M8-8                            | 2        |        |
| 16                                  | 005783 080252     | Hexagon bolt M8x25-10.9                     | 2        |        |
| 17                                  | 810-440018-100    | Side sound-proof pad                        | 1        |        |

## 4.12 Cab mounting assembly III

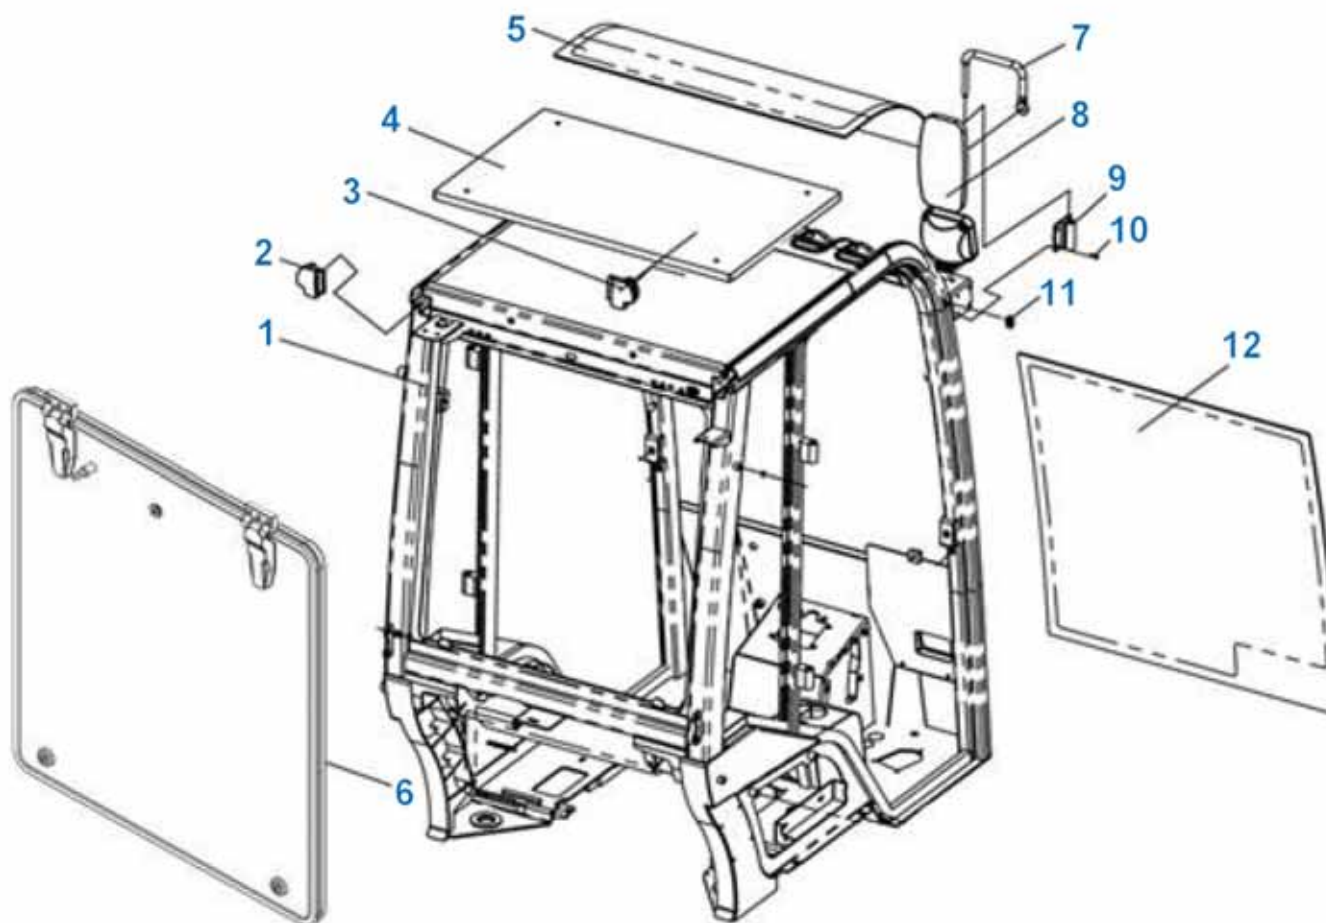


| Cab mounting assembly III parts list |                 |                                             |          |        |
|--------------------------------------|-----------------|---------------------------------------------|----------|--------|
| Item                                 | Part Number     | Part Name                                   | Quantity | Remark |
| 1                                    | 810-441000-300  | Canopy weld component                       | 1        |        |
| 2                                    | K30000 540004   | Left square tube trim                       | 1        |        |
| 3                                    | K30000 540008   | Right square tube trim                      | 1        |        |
| 4                                    | 810-440016-100  | Top sound-proof cotton                      | 1        |        |
| 5                                    | 810-470001-200  | Top glass cover                             | 1        |        |
| 6                                    | 810-474000-300  | Rear window assembly                        | 1        |        |
| 7                                    | 1230-470005-000 | Mirror bracket                              | 2        |        |
| 8                                    | 1230-470300-G00 | Mirror                                      | 2        |        |
| 9                                    | 1230-470006-000 | Mirror support base                         | 2        |        |
| 10                                   | 000702 060161   | Hexagon socket button head screws M6x16-8.8 | 4        |        |
| 11                                   | K30G00 540005   | Headlamp coil                               | 2        |        |
| 12                                   | 810-470003-200  | Front windshield                            | 1        |        |

## 4.13 Cab mounting assembly IV

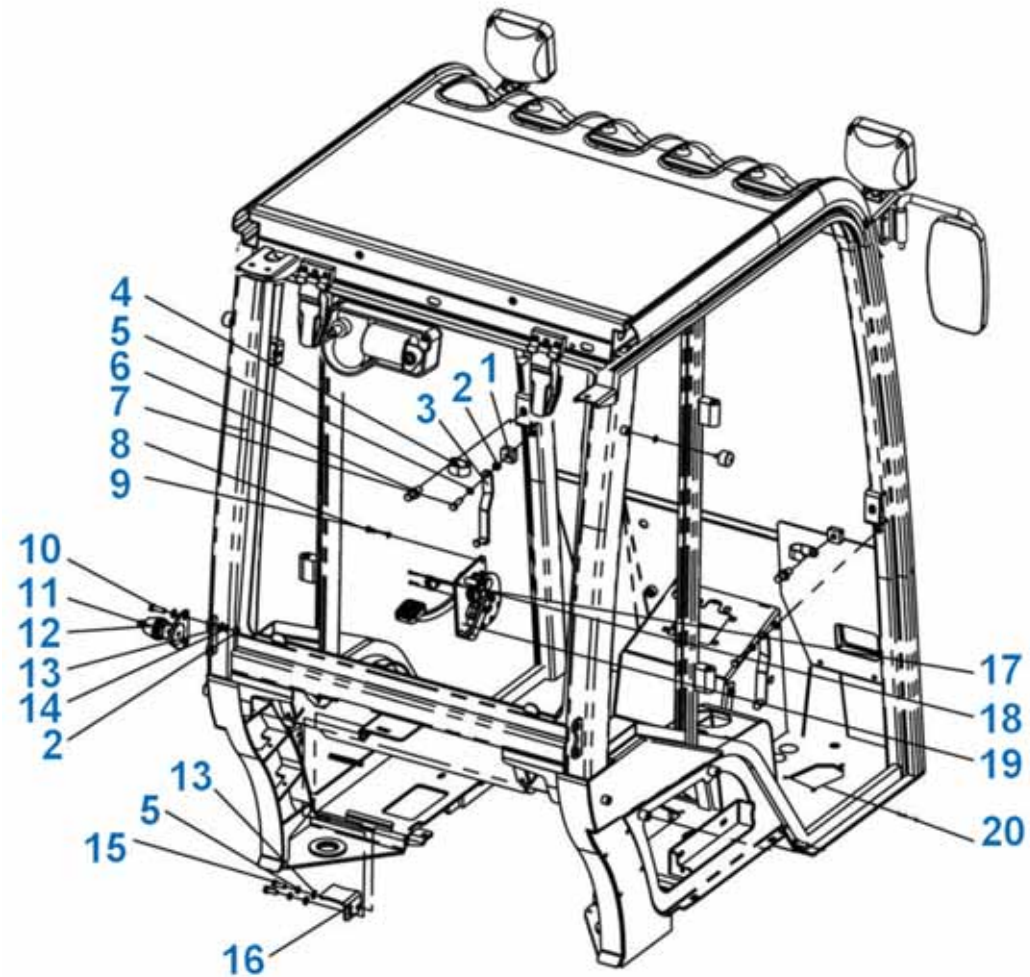


| Cab mounting assembly IV parts list |                 |                                       |          |        |
|-------------------------------------|-----------------|---------------------------------------|----------|--------|
| Item                                | Part Number     | Part Name                             | Quantity | Remark |
| 1                                   | 1230-472007-000 | Screw base                            | 2        |        |
| 2                                   | 006170 008001   | Hexagon nut M8-8                      | 6        |        |
| 3                                   | 1140-470100-003 | Cab left side plate                   | 2        |        |
| 4                                   | 1230-472006-000 | Guard board                           | 2        |        |
| 5                                   | 000093 000081   | Spring washer 8                       | 4        |        |
| 6                                   | 1230-472009-G00 | Door lock spring bolt                 | 2        |        |
| 7                                   | 005783 080252   | Hexagonal head bolt M8x25-10.9        | 2        |        |
| 8                                   | 005783 060121   | Hexagonal head bolt M6x12-8.8         | 2        |        |
| 9                                   | 000093 000061   | Spring washer 6                       | 2        |        |
| 10                                  | 005783 080251   | Hexagonal head bolt M8x25-8.8         | 4        |        |
| 11                                  | 1140-440700-003 | Door latch assembly                   | 2        |        |
| 12                                  | 810-470005-100  | Lock cylinder bracket plate           | 2        |        |
| 13                                  |                 | This part has been canceled           |          |        |
| 14                                  | 000093 000081   | Spring washer 8                       | 4        |        |
| 15                                  |                 | This part has been canceled           |          |        |
| 16                                  |                 | This part has been canceled           |          |        |
| 17                                  | 000818 030161   | Cross recess pan head screw M3x16-4.8 | 2        |        |
| 18                                  | XV-156-1C25     | Micro switch                          | 1        |        |
| 19                                  | 1130-500800-200 | Parking brake component               | 1        |        |
| 20                                  | 810-441000-300  | Canopy weld component                 | 1        |        |

## 4.14 Cab mounting assembly V

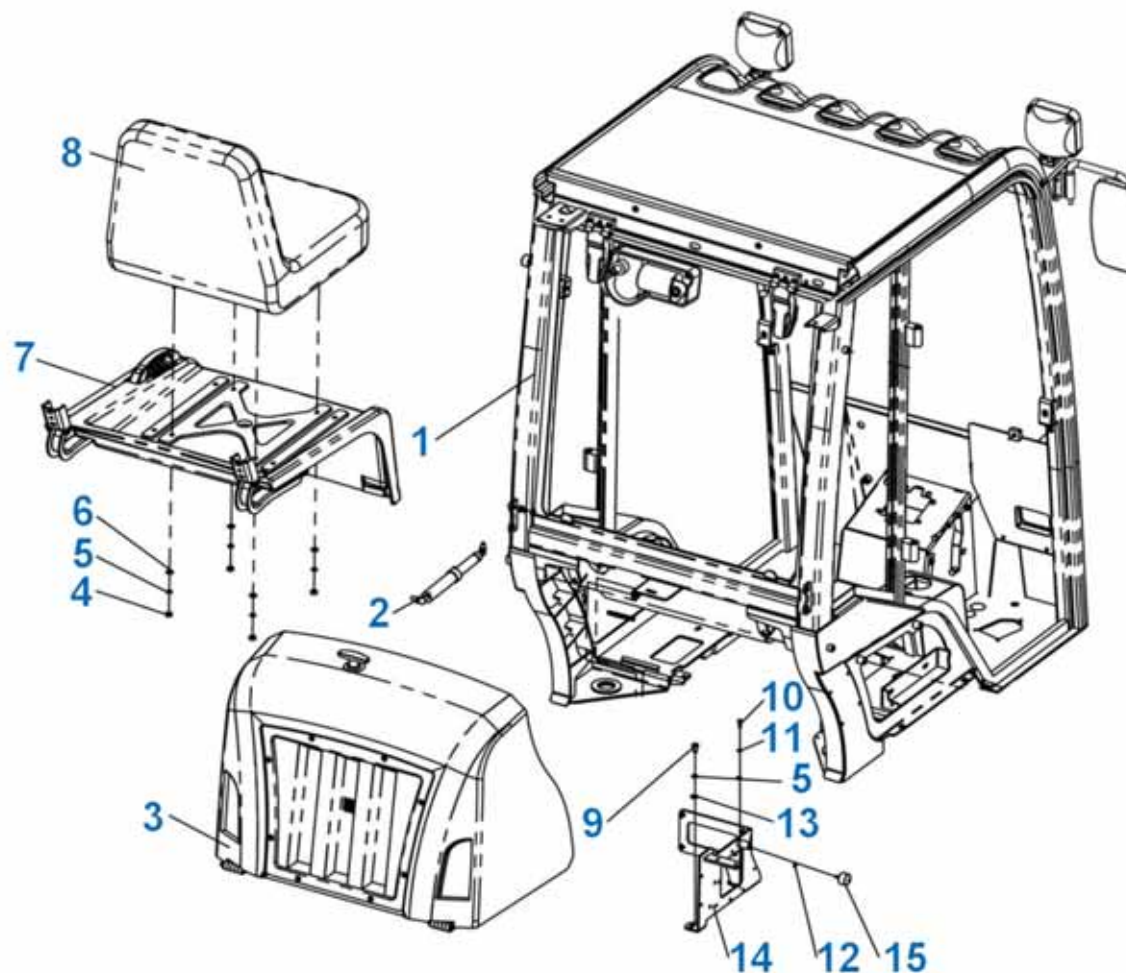


| Cab mounting assembly V parts list |                  |                                             |          |        |
|------------------------------------|------------------|---------------------------------------------|----------|--------|
| Item                               | Part Number      | Part Name                                   | Quantity | Remark |
| 1                                  | 810-441000-100   | Canopy weld component                       | 1        |        |
| 2                                  | 810-470400-G00   | Air spring L=400                            | 1        |        |
| 3                                  | 810-445000-000   | Bonnet assembly                             | 1        |        |
| 4                                  | 006170 008001    | Hexagon nut M8-8                            | 4        |        |
| 5                                  | 000093 000081    | Spring washer 8                             | 6        |        |
| 6                                  | 000971-000008-00 | Washer 8                                    | 1        |        |
| 7                                  | 810-442000-100   | Bonnet mounting assembly                    | 1        |        |
| 8                                  | 1130-440100-G00  | Seat (SC1)                                  | 1        |        |
| 9                                  | 005783 080161    | Hexagonal head bolt M8x16-8.8               | 2        |        |
| 10                                 | 000702 060161    | Hexagon socket button head screws M6x16-8.8 | 2        |        |
| 11                                 | 000093 000061    | Spring washer 6                             | 2        |        |
| 12                                 | GB/T6172.1-2000  | M6 thin nut                                 | 2        |        |
| 13                                 | 000971 000081    | Flat washer 8                               | 2        |        |
| 14                                 | 810-440300-000   | Mounting bracket component                  | 1        |        |
| 15                                 | 1130-445400-G00  | Shock pad assembly                          | 3        |        |

## 4.15 Rear window assembly

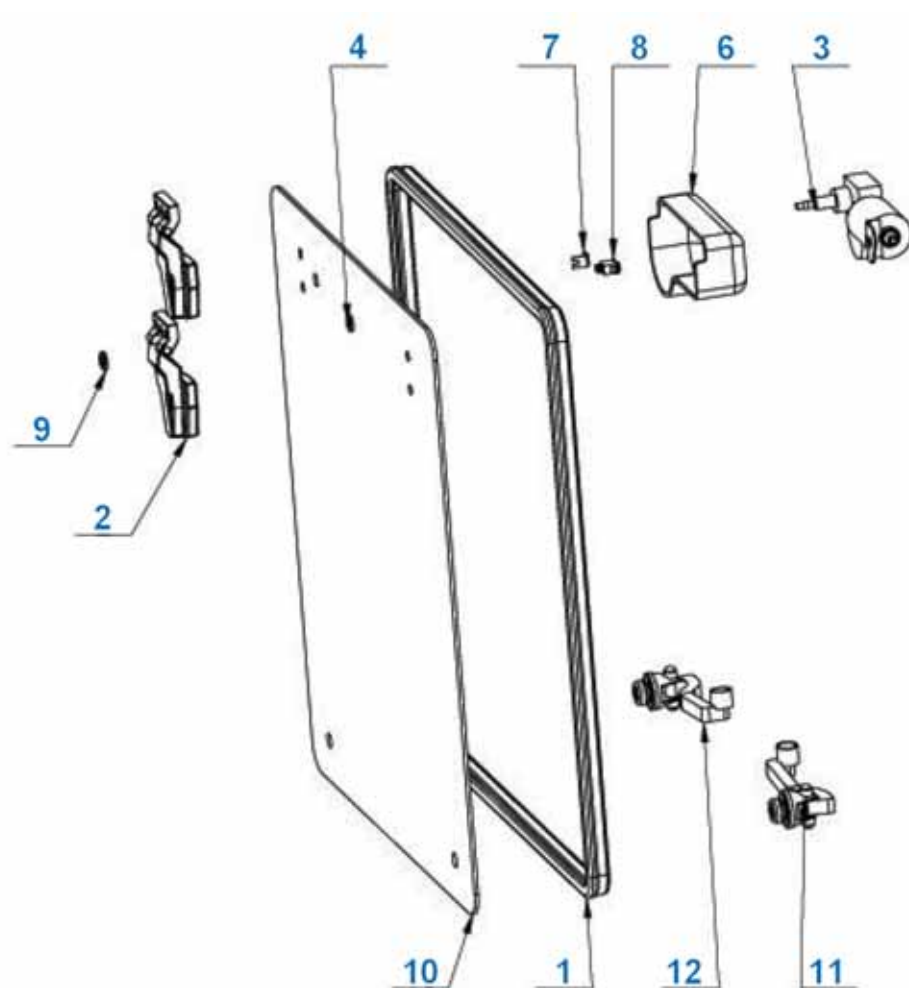

| Rear window assembly parts list |                 |                            |          |        |
|---------------------------------|-----------------|----------------------------|----------|--------|
| Item                            | Part Number     | Part Name                  | Quantity | Remark |
| 1                               | 810-474003-100  | Seal                       | 1        |        |
| 2                               | K30G00 585300   | Rear window hinge assembly | 2        |        |
| 3                               | 1140-474011-G00 | Rear wiper (ZD1430-009W)   | 1        |        |
| 4                               | 1230-472003-000 | Rubber pad                 | 1        |        |
| 5                               | 810-474008-100  | Wiper rubber pad           | 1        |        |
| 6                               | 1140-474009-003 | Wiper cover                | 1        |        |
| 7                               | 1140-474010-003 | Fixed plate                | 1        |        |
| 8                               | KEL-601A204     | Switch                     | 1        |        |
| 9                               | 1230-472005-000 | Gasket                     | 1        |        |
| 10                              | 810-470004-300  | Rear window                | 1        |        |
| 11                              | DS542-2L        | Rear window handle         | 1        |        |
| 12                              | DS542-2R        | Rear window handle         | 1        |        |


## 4.16 Left door assembly

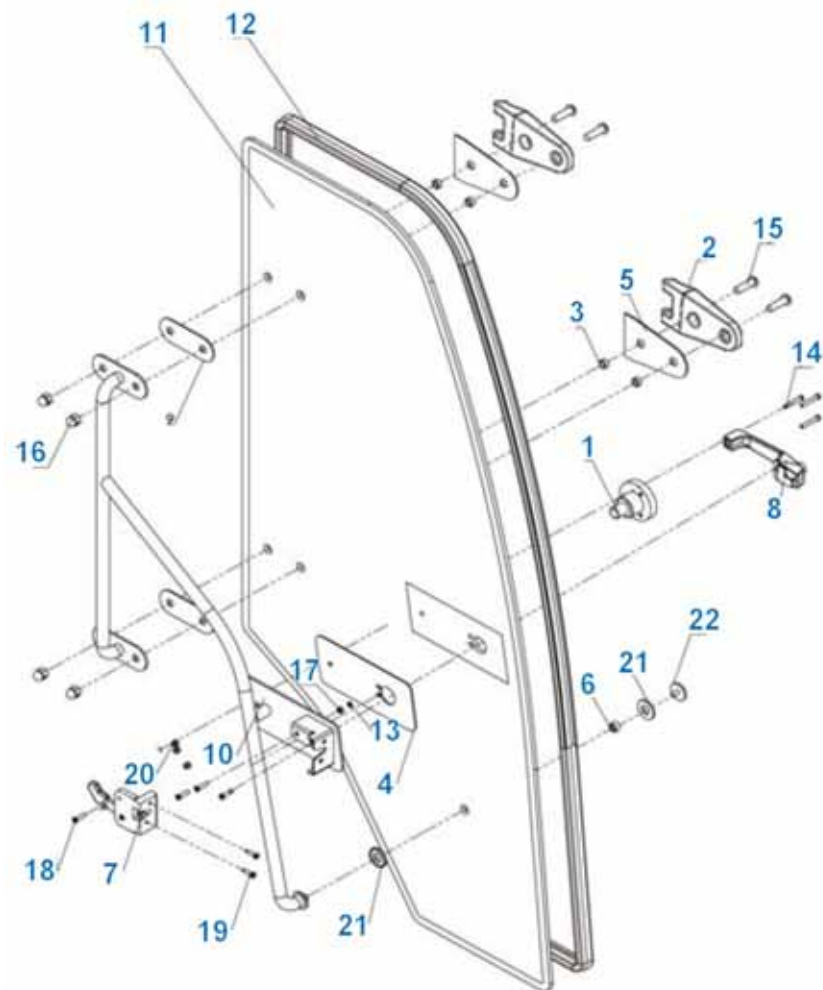

### Left door assembly parts list

| Item | Part Number       | Part Name                                        | Quantity | Remark |
|------|-------------------|--------------------------------------------------|----------|--------|
| 1    | 1140-440600-003   | Door latch assembly                              | 1        |        |
| 2    | 850-470501-200    | Hinge plate assembly                             | 2        |        |
| 3    | 850-472005-200    | Nylon sleeve                                     | 4        |        |
| 4    | 1140-472004-003   | Rubber pad                                       | 1        |        |
| 5    | 1140-472005-003   | Cab hinge rubber pad                             | 2        |        |
| 6    | 1140-472006-003   | Sleeve 2                                         | 1        |        |
| 7    | 1230-470601-G00   | Left lock                                        | 1        |        |
| 8    | 1230-470602-G00   | Handle parts                                     | 1        |        |
| 9    | 1230-472002-000   | Rubber pad                                       | 2        |        |
| 10   | 1230-473100-500   | Left door lock fixed plate assembly              | 1        |        |
| 11   | 810-472001-200    | Side door glass                                  | 1        |        |
| 12   | 810-473001-200    | Seal strip                                       | 1        |        |
| 13   | GT00093-000006-00 | Spring washer 6                                  | 1        |        |
| 14   | GT00702-006040-00 | Hexagon socket button head screws M6X40          | 3        |        |
| 15   | GT00702-012045-00 | Hexagon socket button head screws M12X45         | 4        |        |
| 16   | GT00923-000012-00 | Acorn nut M12                                    | 4        |        |
| 17   | GT06170-000006-00 | Hexagon nut M6-8                                 | 1        |        |
| 18   | GT08191-006025-00 | M6x25-4.8 cross recessed countersunk head screw  | 4        |        |
| 19   | GT819P2-006020-00 | M6X20 cross recessed countersunk head screw      | 2        |        |
| 20   | GT889P1-000006-00 | Type 1 non-metallic insert hexagonal lock nut M6 | 3        |        |
| 21   | K30G00 580302     | Fixed glass rubber pad                           | 2        |        |
| 22   | K30G00 585202     | Glass fixed bolt                                 | 1        |        |


## 4.17 Right door assembly

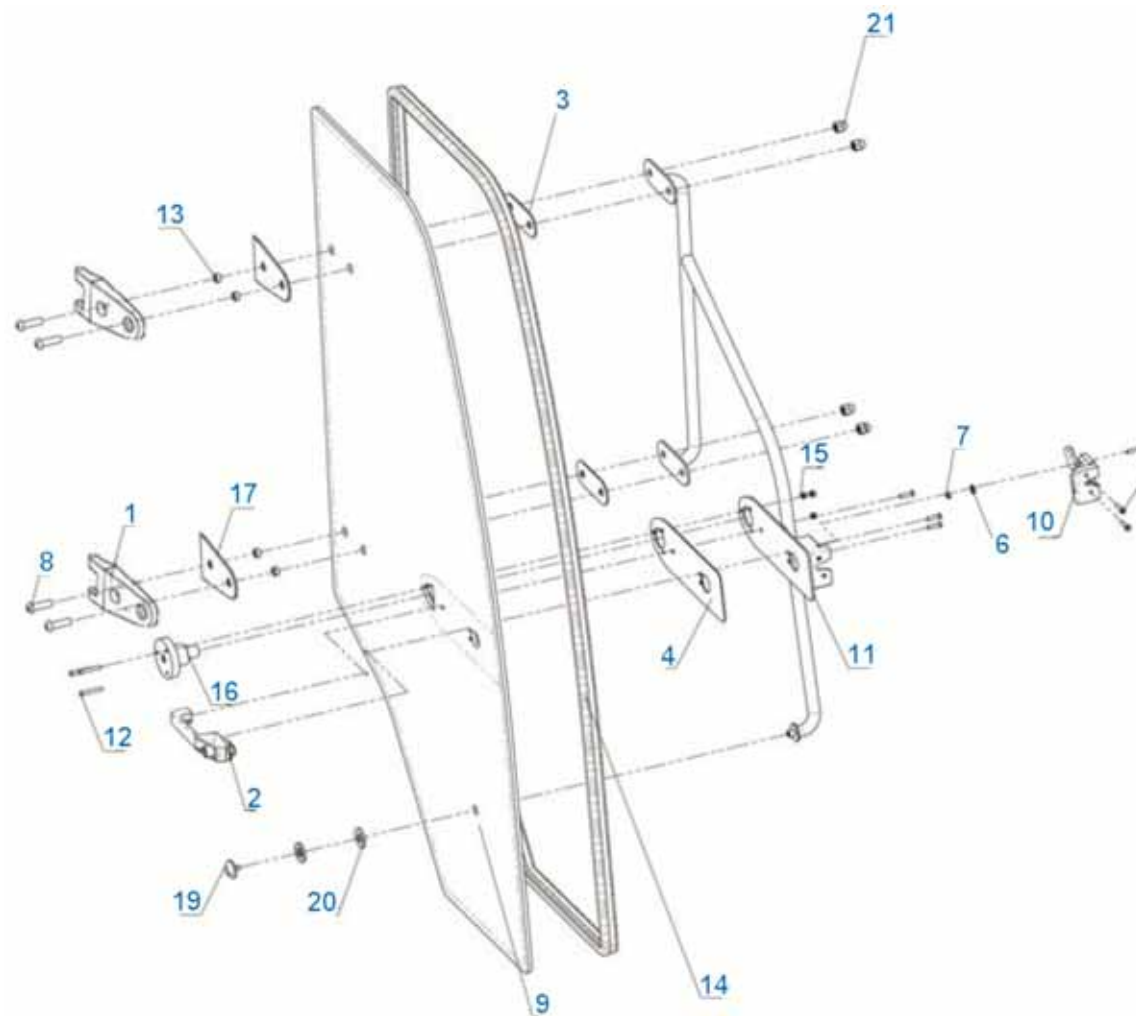

### Right door assembly parts list

| Item | Part Number       | Part Name                                       | Quantity | Remark |
|------|-------------------|-------------------------------------------------|----------|--------|
| 1    | 850-470501-200    | Hinge plate assembly                            | 2        |        |
| 2    | 1230-470602-G00   | Handle parts                                    | 1        |        |
| 3    | 1230-472002-000   | Rubber pad                                      | 2        |        |
| 4    | 1140-472004-003   | Rubber pad                                      | 1        |        |
| 5    | 000819 060251     | M6x25-4.8 cross recessed countersunk head screw | 6        |        |
| 6    | GT00093-000006-00 | Spring washer 6                                 | 1        |        |
| 7    | GT06170-000006-00 | Hexagon nut M6-8                                | 1        |        |
| 8    | GT00702-012045-00 | Hexagon socket button head screws M12X45        | 4        |        |
| 9    | 810-472001-200    | Side door glass                                 | 1        |        |
| 10   | 1230-470603-G00   | Right lock                                      | 1        |        |
| 11   | 1230-472100-500   | Right door fixed plate assembly                 | 1        |        |
| 12   | GT00702-006040-00 | Hexagon socket button head screws M6X40         | 3        |        |
| 13   | 850-472005-200    | Nylon sleeve                                    | 4        |        |
| 14   | 810-472008-200    | Seal strip                                      | 1        |        |
| 15   | GT889P1-000006-00 | Type 1 nonmetal inserts hexagon lock nut M6     | 3        |        |
| 16   | 1140-440600-003   | Latch base assembly                             | 1        |        |
| 17   | 1140-472005-003   | Cab hinge rubber pad                            | 2        |        |
| 18   | K30G00 585202     | Glass fixed bolt                                | 1        |        |
| 19   | 000971 000061     | Flat washer 6                                   | 4        |        |
| 20   | K30G00 580302     | Fixed glass rubber pad                          | 2        |        |
| 21   | GT00923-000012-00 | Acorn nut M12                                   | 4        |        |


## 4.18 Bonnet mounting assembly

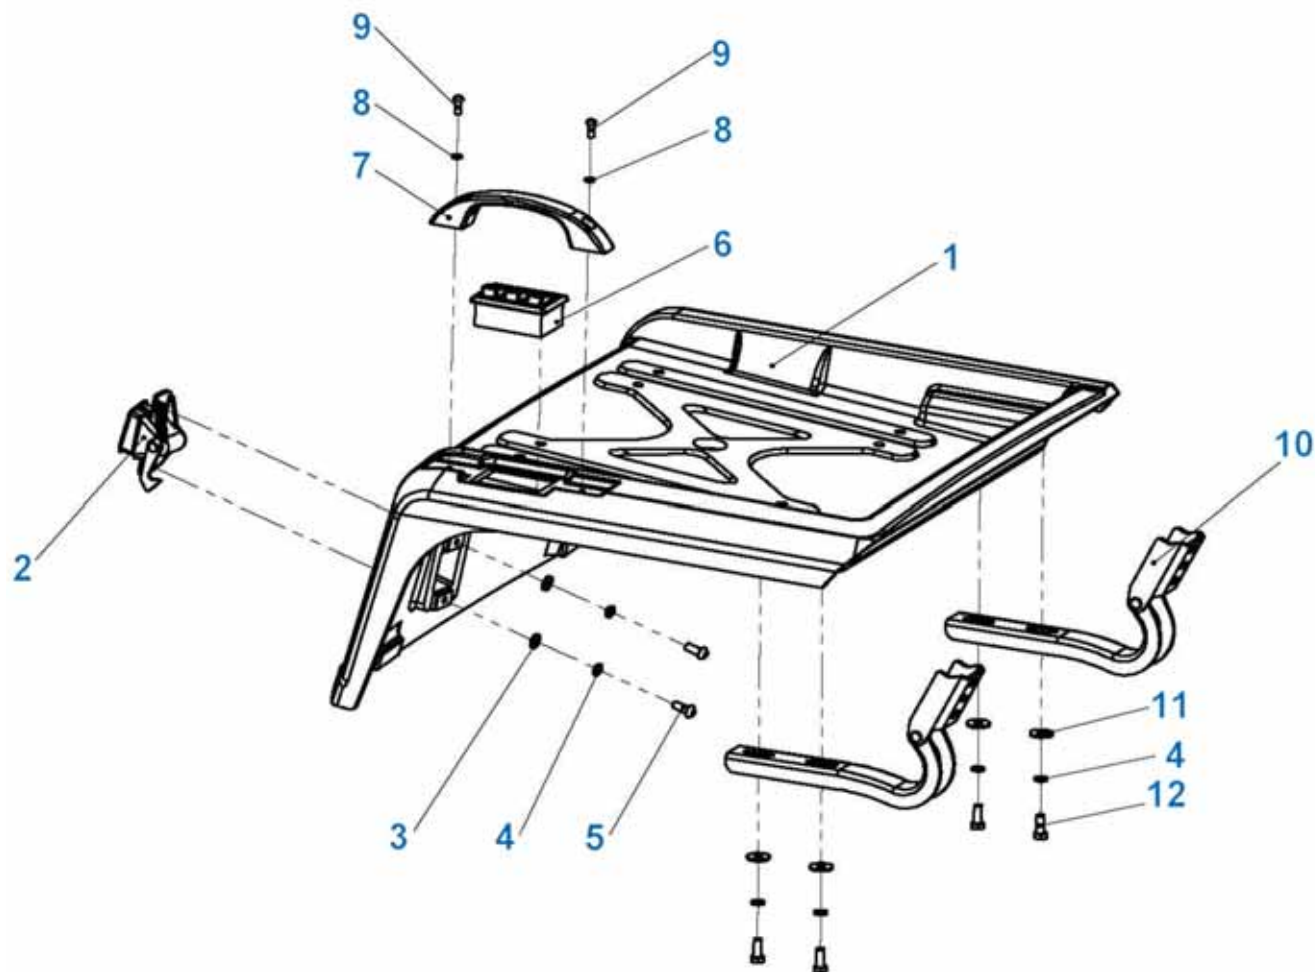

| Bonnet mounting assembly parts list |                   |                                             |          |        |
|-------------------------------------|-------------------|---------------------------------------------|----------|--------|
| Item                                | Part Number       | Part Name                                   | Quantity | Remark |
| 1                                   | 810-442001-100    | Engine bonnet                               | 1        |        |
| 2                                   | 810-442100-000    | Bonnet lock assembly                        | 1        |        |
| 3                                   | 000971 000081     | Flat washer 8                               | 2        |        |
| 4                                   | GT00093-000008-00 | Spring washer 8                             | 6        |        |
| 5                                   | 000702 080201     | Hexagon socket button head screws M8x20-8.8 | 2        |        |
| 6                                   | 1230-701400-G00   | Three way rocker switch                     | 1        |        |
| 7                                   | E25G00 520006     | Battery box handle                          | 1        |        |
| 8                                   | GT00093-000006-00 | Spring washer 6                             | 2        |        |
| 9                                   | GT070P2-006016-00 | Hexagon socket button head screws M6x16-8.8 | 2        |        |
| 10                                  | 810-449000-000    | Bonnet hinge assembly                       | 2        |        |
| 11                                  | GT00096-000008-00 | Big washer 8                                | 4        |        |
| 12                                  | 005783-008020-00  | Hexagonal head bolt M8x20-8.8               | 4        |        |


## 5. OPERATE SYSTEM

### 5.1 Operate System assembly

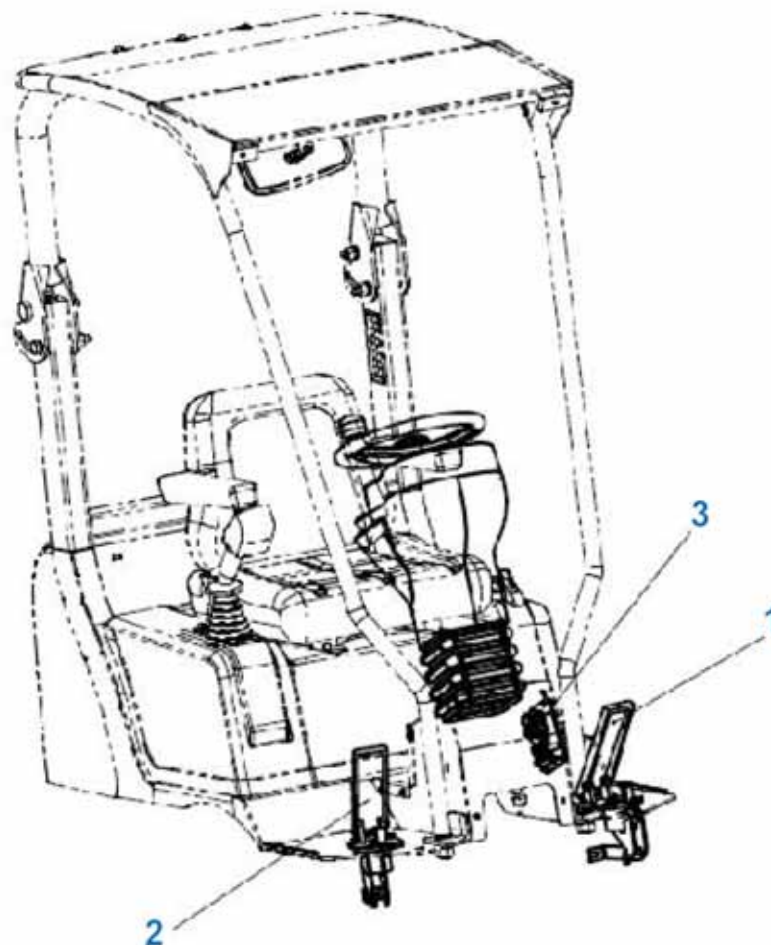

| Operate System assembly parts list |                 |                              |          |        |
|------------------------------------|-----------------|------------------------------|----------|--------|
| Item                               | Part Number     | Part Name                    | Quantity | Remark |
| 1                                  | 1130-500300-G00 | Inching operate              | 1        |        |
| 2                                  | 1130-300100-000 | Inching operate (foot brake) | 1        |        |
| 3                                  | 1130-100600-G10 | Parking brake                | 1        |        |
| 4                                  | 810-500300-000  | Foot brake                   | 1        |        |


## 5.2 Parking brake

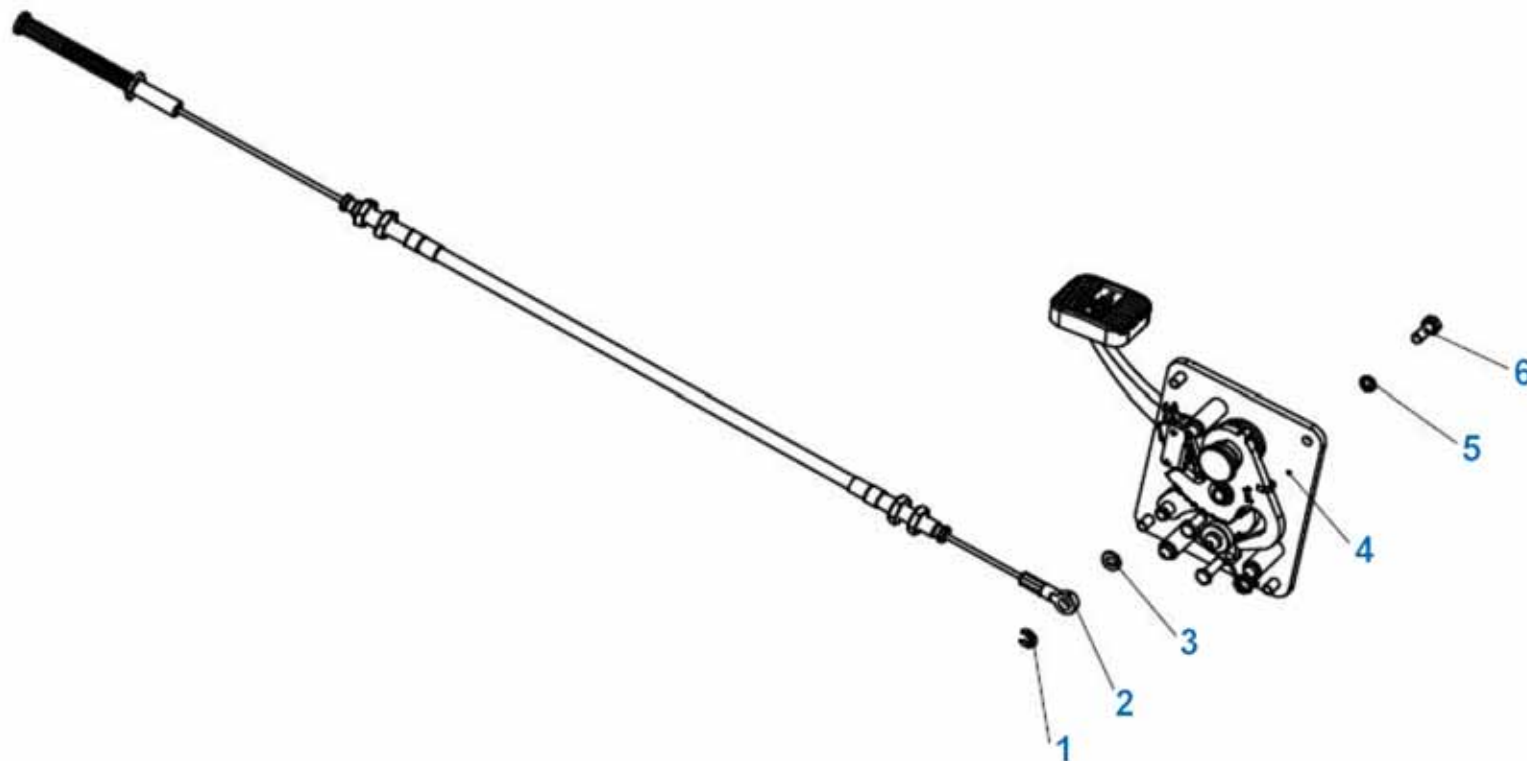

**Parking brake parts list**

| Item | Part Number      | Part Name                     | Quantity | Remark |
|------|------------------|-------------------------------|----------|--------|
| 1    | 000896 000061    | Split washer 6                | 1        |        |
| 2    | 1130-100600-G10  | Parking brake                 | 1        |        |
| 3    | 000971-000006-00 | Flat washer 6                 | 1        |        |
| 4    | 1130-500800-200  | Park brake assembly           | 1        |        |
| 5    | 000971-000006-00 | Flat washer 6                 | 4        |        |
| 6    | 005783-006016-00 | Hexagonal head bolt M6x16-8.8 | 4        |        |


## 5.3 Accelerator operate

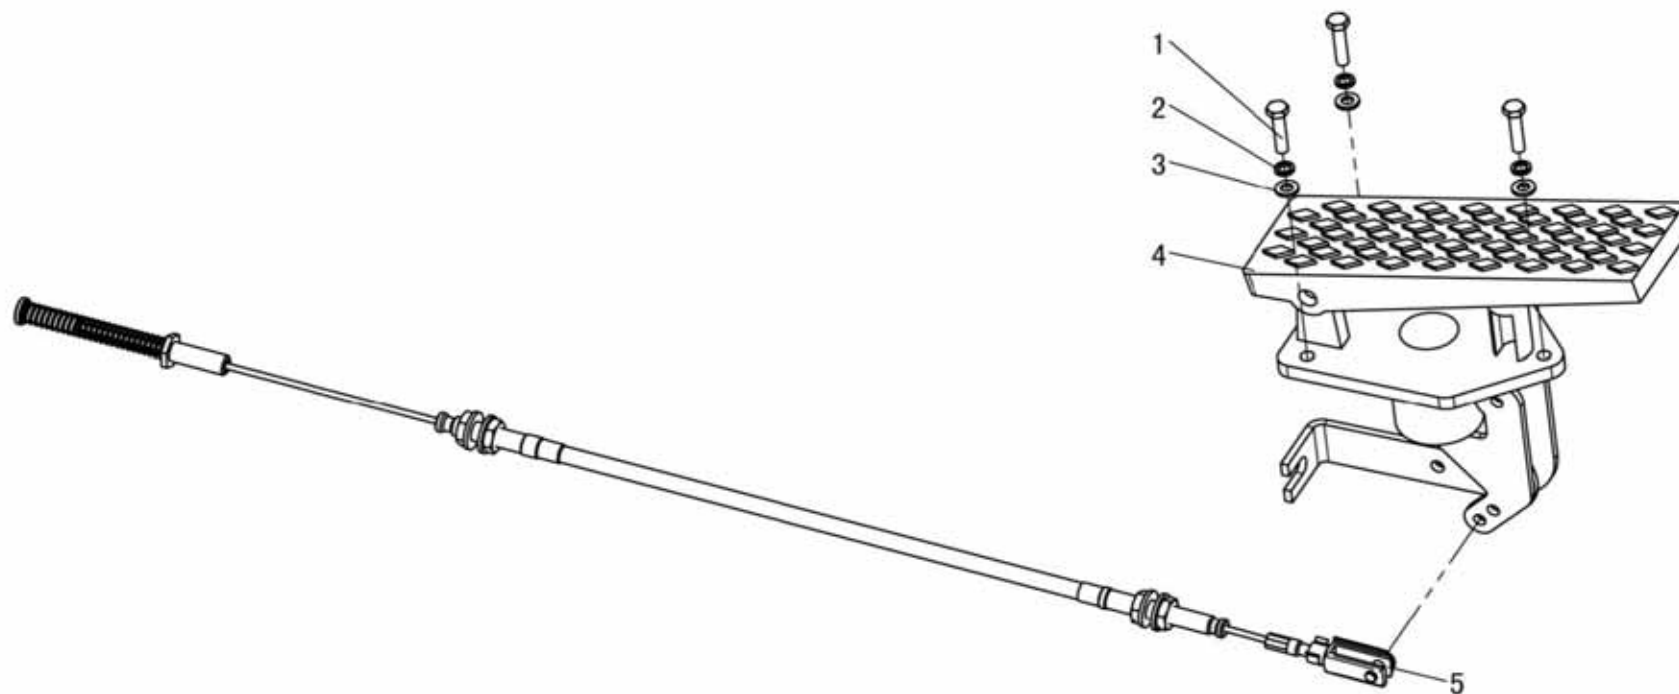

**Accelerator operate parts list**


| Item | Part Number       | Part Name                   | Quantity | Remark |
|------|-------------------|-----------------------------|----------|--------|
| 1    | 005783-006025-00  | Bolt M6X25                  | 3        |        |
| 2    | GT00093-000006-00 | Washer 6                    | 3        |        |
| 3    | 000971-000006-00  | Washer 6                    | 3        |        |
| 4    | 1130-300100-000   | Accelerator pedal component | 1        |        |
| 5    | 1130-360100-000   | Accelerator cable assembly  | 1        |        |

## 5.4 Inching operate

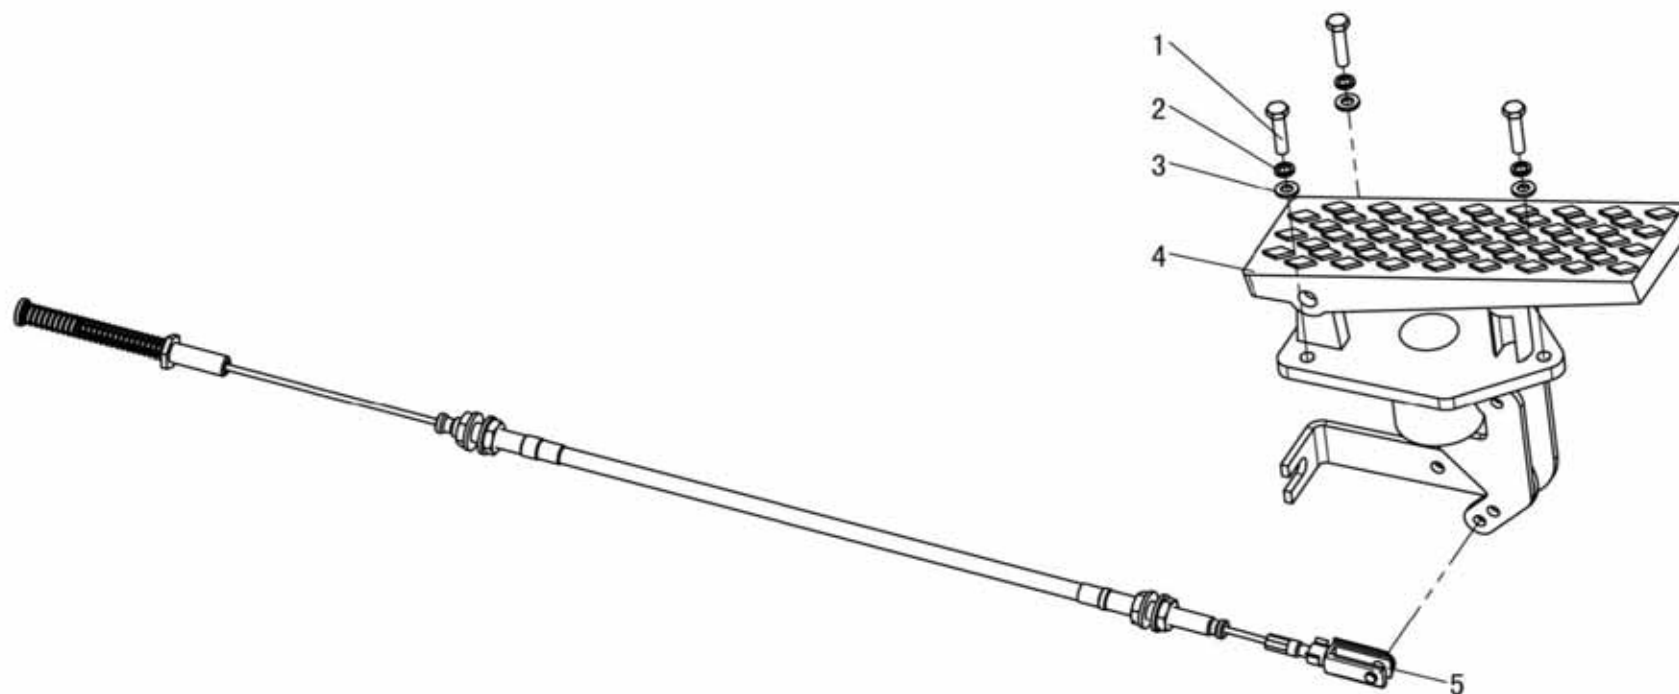

| Inching operate list |                   |                         |          |        |
|----------------------|-------------------|-------------------------|----------|--------|
| Item                 | Part Number       | Part Name               | Quantity | Remark |
| 1                    | 005783-006025-00  | Bolt M6X25              | 3        |        |
| 2                    | GT00093-000006-00 | Washer 6                | 3        |        |
| 3                    | 000971-000006-00  | Washer 6                | 3        |        |
| 4                    | 1130-300200-000   | Inching pedal component | 1        |        |
| 5                    | 1130-500300-G00   | Inching cable assembly  | 1        |        |


## 5.5 Inching operate (foot brake)

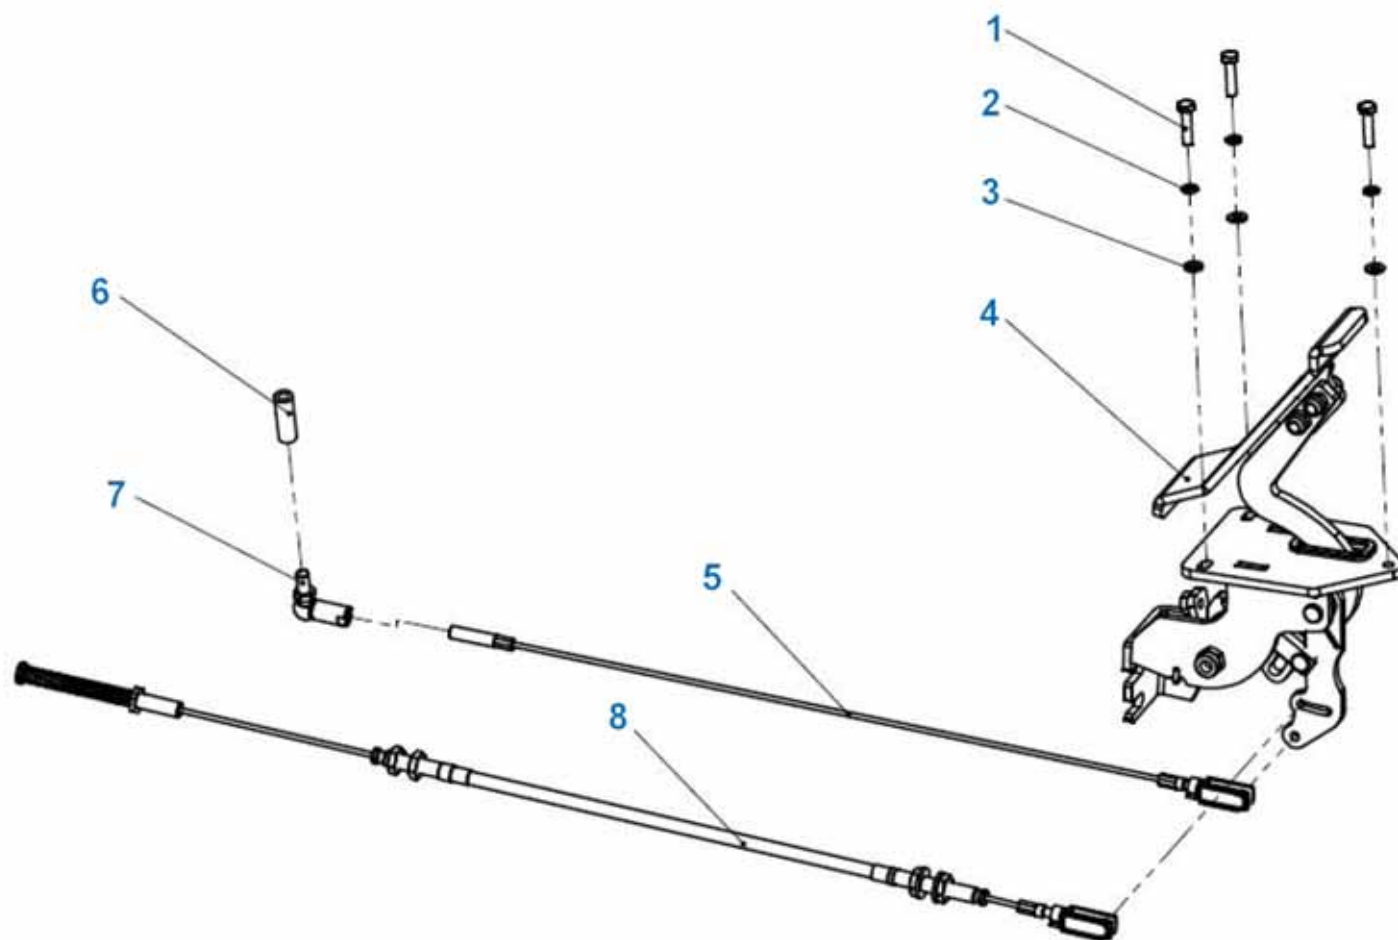

| Inching operate (foot brake) list |                   |                                     |          |        |
|-----------------------------------|-------------------|-------------------------------------|----------|--------|
| Item                              | Part Number       | Part Name                           | Quantity | Remark |
| 1                                 | 005783-006025-00  | Bolt M6X25                          | 3        |        |
| 2                                 | GT00093-000006-00 | Washer 6                            | 3        |        |
| 3                                 | 000971-000006-00  | Washer 6                            | 3        |        |
| 4                                 | 1230-500300-000   | 1230 Foot brake (cable)             | 1        |        |
| 5                                 | 1130-500300-G10   | Inching brake (foot brake)          | 1        |        |
| 6                                 | 1130-100011-000   | Coupling shaft                      | 1        |        |
| 7                                 | 1130-100240-G10   | Ball headed knuckle bearing SQP 8 S | 1        |        |
| 8                                 | 1130-100900-G10   | 1130 foot brake cable assembly      | 1        |        |


## 6. HYDRAULIC SYSTEM

### 6.1 Hydraulic system assembly

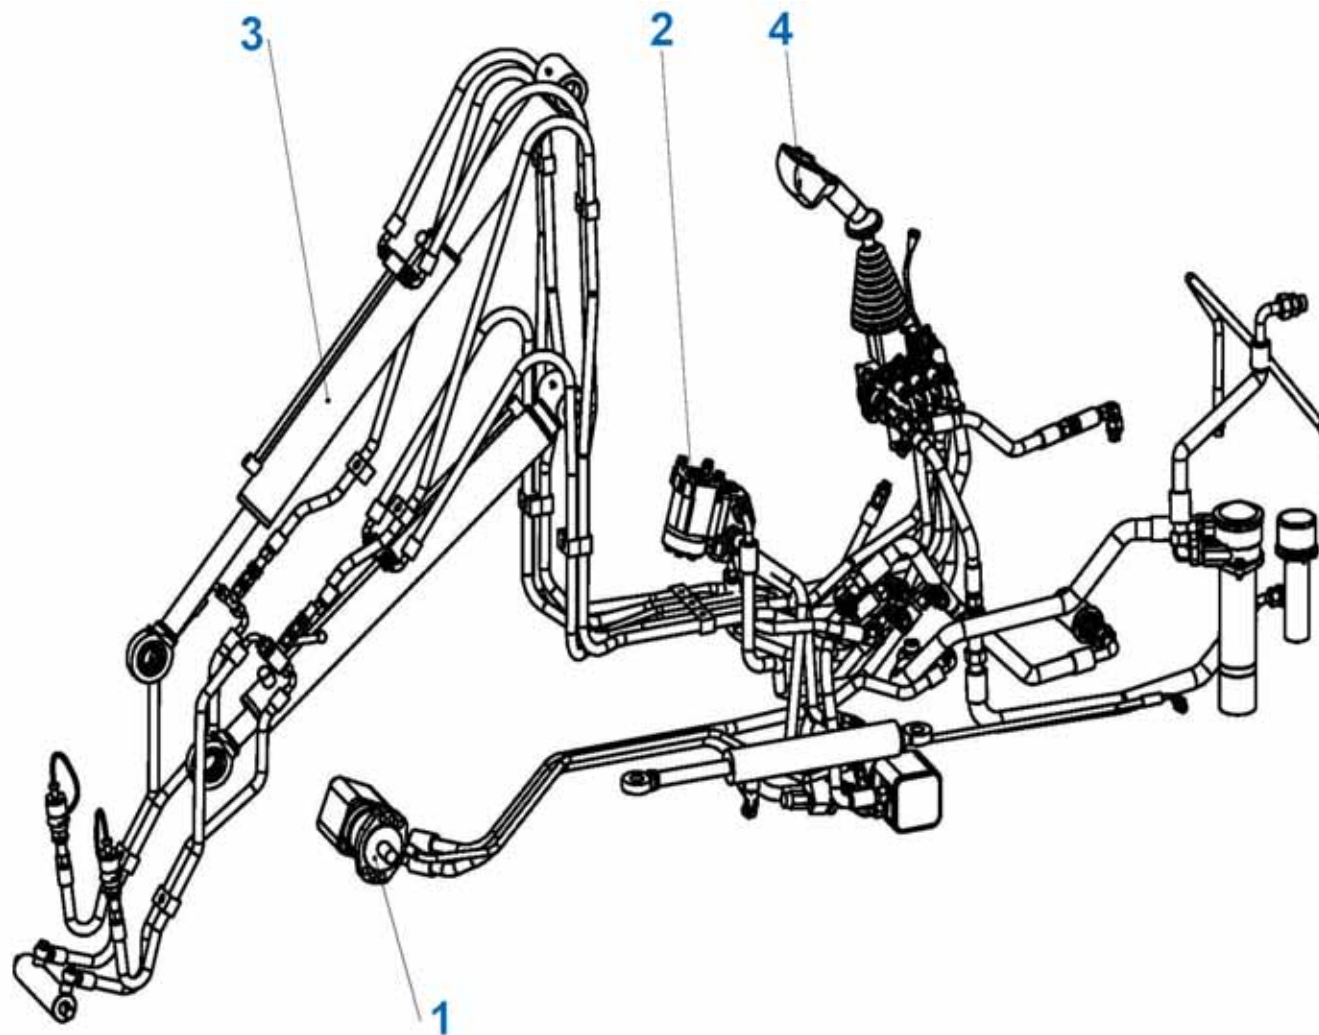


| Hydraulic system assembly parts list |             |                                      |          |        |
|--------------------------------------|-------------|--------------------------------------|----------|--------|
| Item                                 | Part Number | Part Name                            | Quantity | Remark |
| 1                                    | E-1         | Hydraulic system(plunger pump-motor) | 1        |        |
| 2                                    | E-2         | Hydraulic system(steering gear)      | 1        |        |
| 3                                    | E-3         | Hydraulic system(multitandem valve)  | 1        |        |
| 4                                    | E-4         | Multitandem valve component          | 1        |        |

## 6.2 Plunger pump-motor

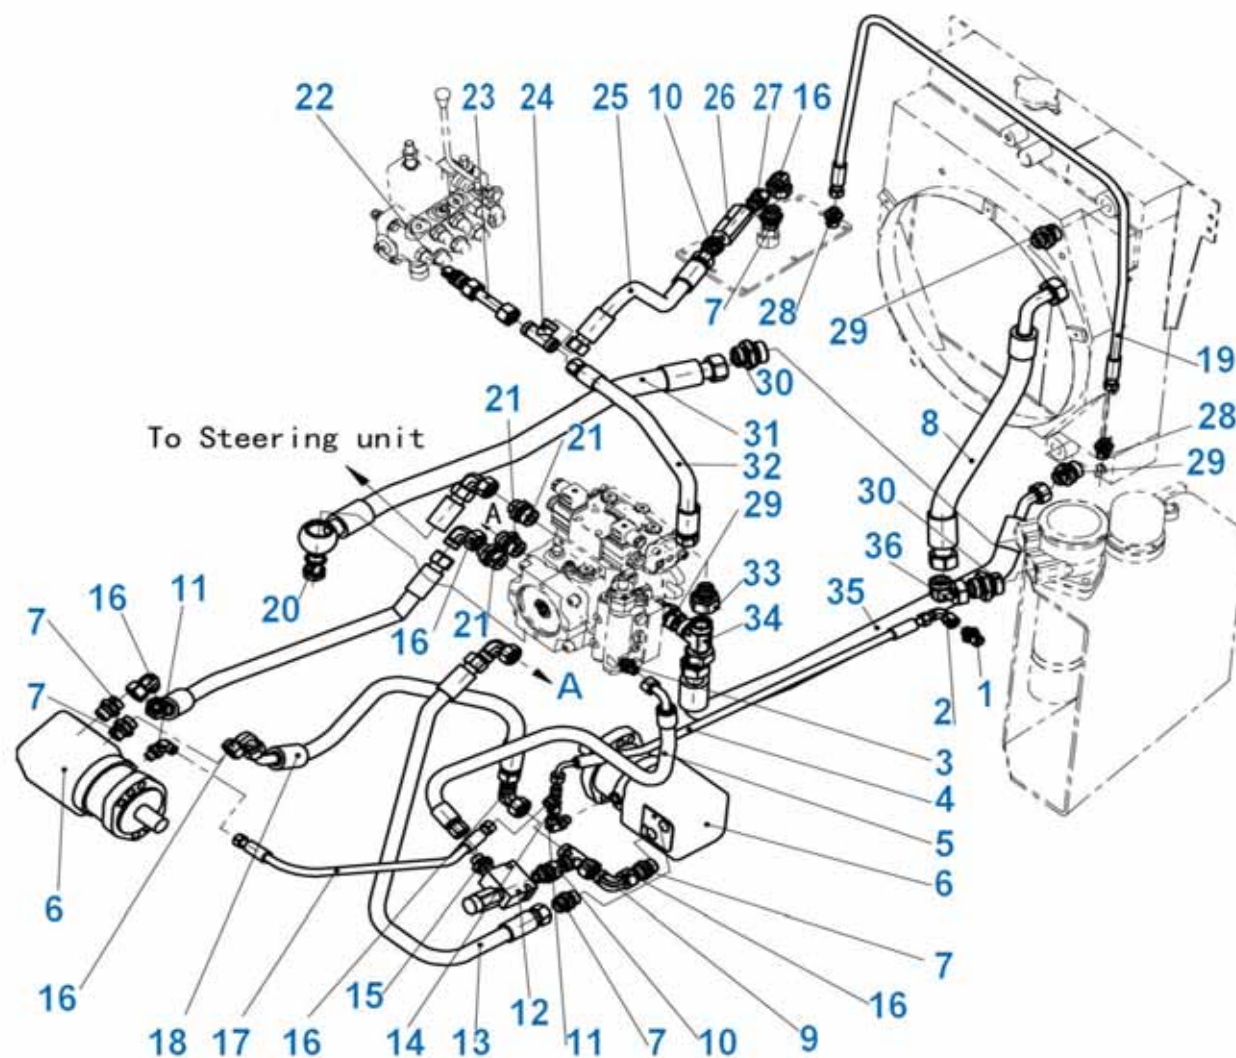

**Plunger pump-motor parts list**


| Item | Part Number     | Part Name                        | Quantity | Remark            |
|------|-----------------|----------------------------------|----------|-------------------|
| 1    | 1130-622900-G00 | Straight connector               | 1        | Q-GE08L G3/8 ED   |
| 2    |                 | Right-angle connector            | 2        | Q-EW08L M14X1.5   |
| 3    | 1130-620600-G00 | Right-angle connector            | 1        | Q-GE12L G1/4 ED   |
| 4    | 1020-611100-G00 | Hose assembly                    | 1        |                   |
| 5    | 1130-610700-G01 | Hose assembly                    | 1        |                   |
| 6    | 1130-100900-G00 | Hydraulic motor                  | 2        | BMSY230-F6-S1-D-B |
| 7    | 1130-620400-G00 | Straight connector               | 3        | Q-15L G1/2 ED     |
| 8    | 1130-613000-G00 | Hose assembly                    | 1        |                   |
| 9    | 1130-621900-G00 | T-junction connector             | 1        | Q-EL15L M22X1.5   |
| 10   | 1130-624000-G00 | straight connector               | 2        | S2GC-08-22        |
| 11   | 1130-622200-G00 | Right-angle connector            | 1        | Q-WEE08L G1/2 OR  |
| 12   | 1130-621700-G00 | Safety valve                     | 1        |                   |
| 13   | 1130-610600-G00 | Hose assembly                    | 1        |                   |
| 14   | 1130-622300-G00 | T-junction connector             | 1        | Q-EL08L M14X1.5   |
| 15   | 1130-624300-G00 | Straight connector               | 1        | Q-GE12L G1/2 ED   |
| 16   | 1130-622000-G00 | Right-angle connector            | 6        | Q-EW15L M22X1.5   |
| 17   | 1020-611000-G00 | Hose assembly                    | 1        |                   |
| 18   | 1020-610800-G00 | Hose assembly                    | 1        |                   |
| 19   | 1130-612600-G00 | Hose assembly                    | 1        |                   |
| 20   | 1130-623700-G00 | G3/4 reamer bolt component       | 1        |                   |
| 21   | 1130-620100-G00 | Straight connector               | 3        | Q-GE15L G3/4 ED   |
| 22   | 1130-623200-G00 | Straight connector               | 2        | Q-GE15L G3/8 ED   |
| 23   | 1130-624200-G00 | 15 steel tubeX90+two ends sleeve | 1        |                   |
| 24   | 1130-621300-G00 | T-junction connector             | 1        | Q-T15L            |
| 25   | 1020-612800-G01 | Hose assembly                    | 1        |                   |

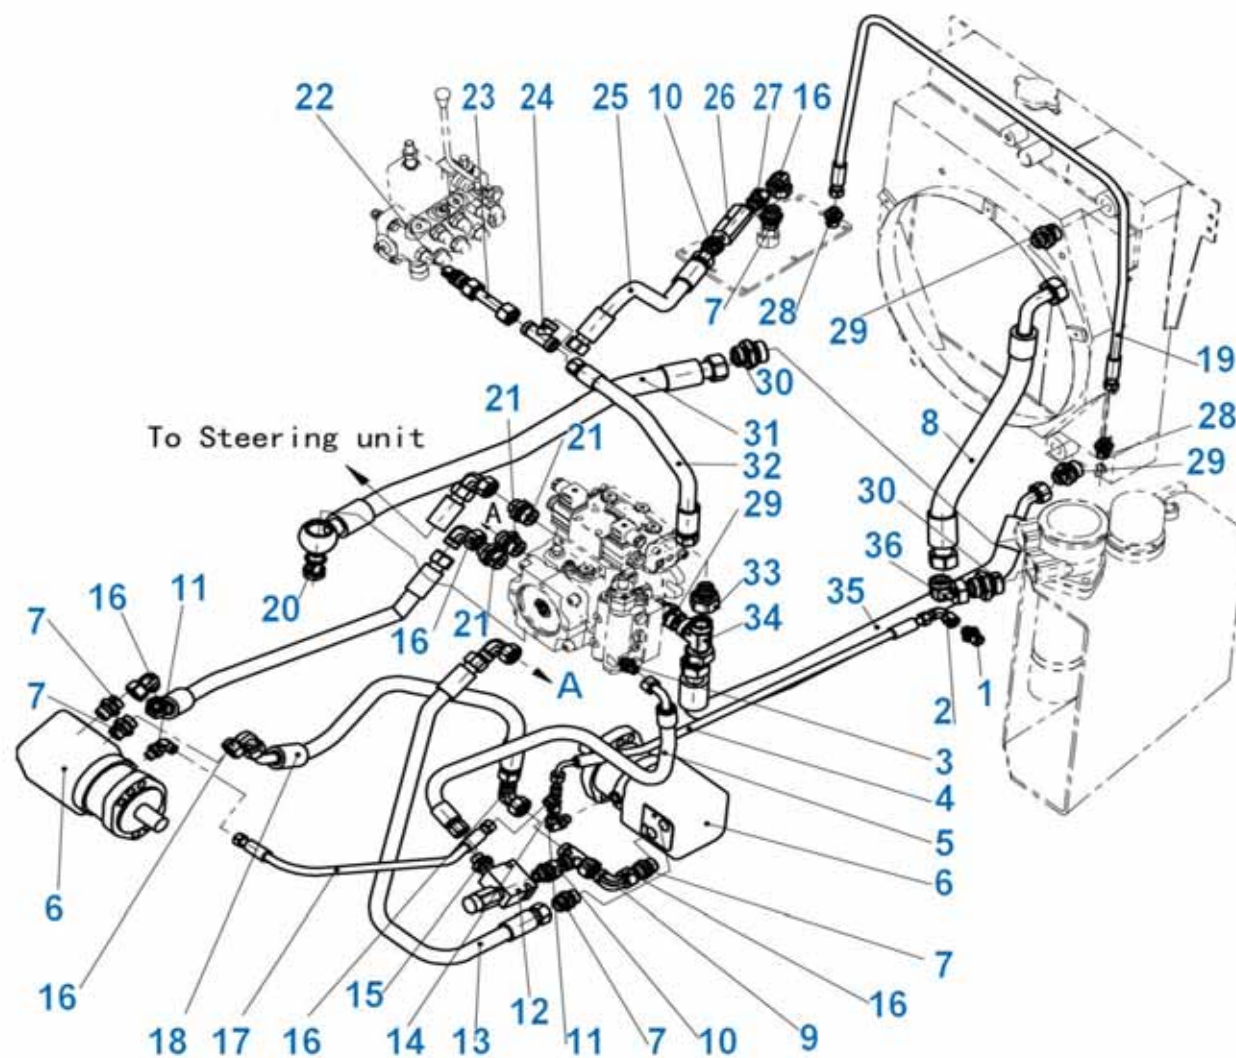

**Plunger pump-motor parts list**


| Item | Part Number      | Part Name             | Quantity | Remark          |
|------|------------------|-----------------------|----------|-----------------|
| 26   | 1130-620002-G00  | Check valve           | 1        |                 |
| 27   | S2GC-06-18       | Right-angle connector | 1        |                 |
| 28   | Q-EW22L M30X2    | Right-angle connector | 2        | Q-GE08L G3/8 ED |
| 29   | 1130-623600-G00  | Straight connector    | 3        | Q-GE22L G3/4 ED |
| 30   | 1130-620500-G00  | Straight connector    | 1        | S2C-22-30       |
| 31   | 1130-610301-G01  | Hose assembly         | 1        |                 |
| 32   | 1130-612801-G01  | Hose assembly         | 1        |                 |
| 33   | Q-EG15L M30X2 RN | Straight connector    | 1        |                 |
| 34   | Q-ET22L M30X2    | Right-angle connector | 1        |                 |
| 35   | 1130-612900-G01  | Hose assembly         | 1        |                 |
| 36   | Q-EW22L M30X2    | Right-angle connector | 1        |                 |
| 37   | 1130-613000-G00  | Hose assembly         | 1        |                 |

## 6.3 Steering gear

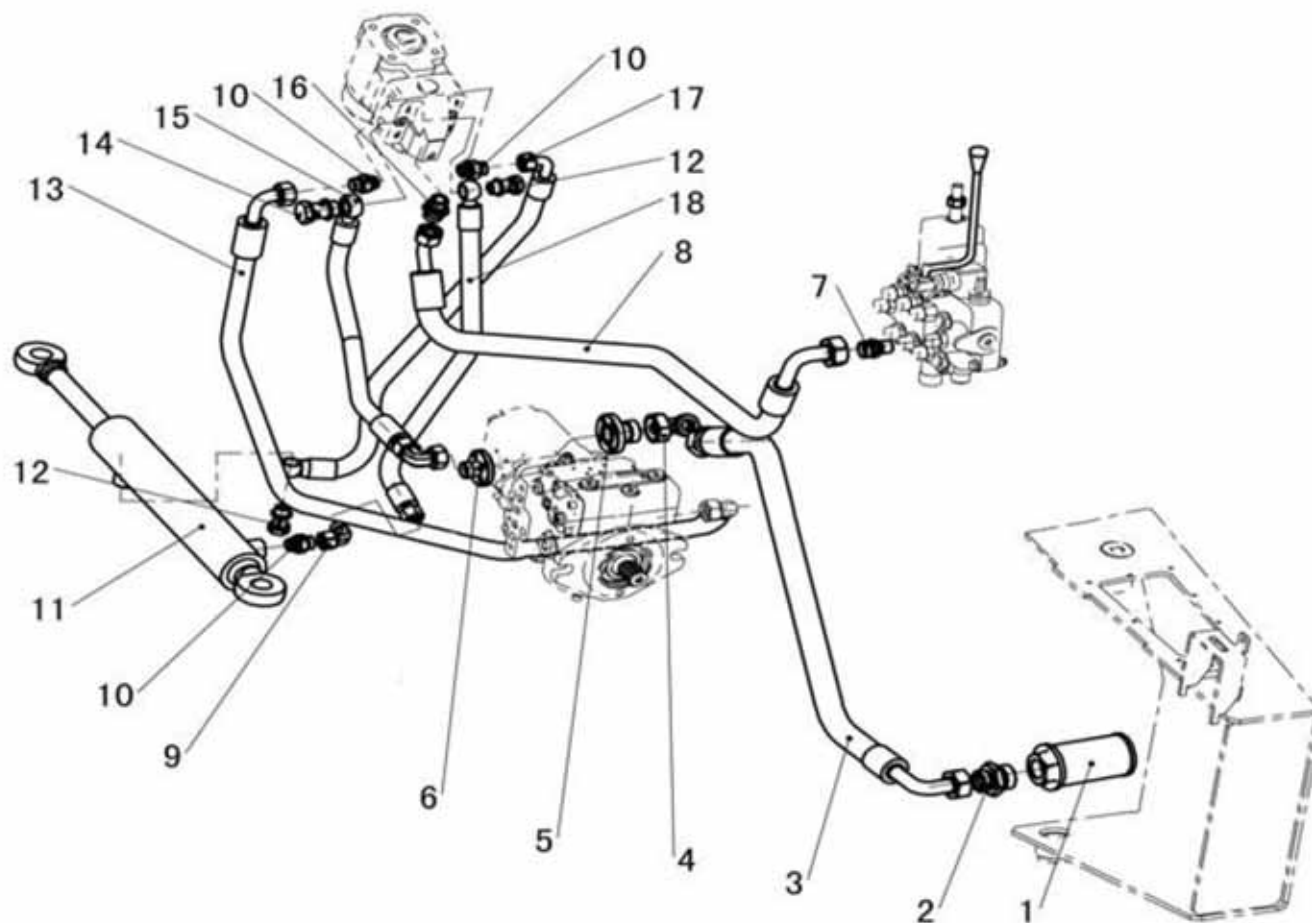


| Steering gear parts list |                 |                                 |          |                  |
|--------------------------|-----------------|---------------------------------|----------|------------------|
| Item                     | Part Number     | Part Name                       | Quantity | Remark           |
| 1                        | 1130-600600-G00 | Gear pump oil absorption filter | 1        |                  |
| 2                        | 1130-620400-G00 | Straight connector              | 1        | Q-15L G1/2 ED    |
| 3                        | 1020-612800-G01 | Hose assembly                   | 1        |                  |
| 4                        | 1130-621500-G00 | Right-angle connector           | 1        | Q-EW22L M30X2    |
| 5                        | 1130-600101-000 | Connector                       | 1        |                  |
| 6                        | 1130-600201-000 | Connector                       | 1        |                  |
| 7                        | 1130-623200-G00 | Straight connector              | 1        |                  |
| 8                        | 1130-611200-G00 | Hose assembly                   | 1        |                  |
| 9                        |                 | Right-angle connector           | 1        | Q-EW12L M18X1.5  |
| 10                       | 1130-622400-G00 | Right-angle connector           | 1        | Q-GE12L G3/8 ED  |
| 11                       | 1130-201000-G00 | Steering cylinder component     | 1        |                  |
| 12                       | 1130-623400-G00 | G3/8 reamer bolt component      | 1        |                  |
| 13                       | 1130-611300-G00 | Hose assembly                   | 1        |                  |
| 14                       | 1130-623500-G00 | G1/2 reamer bolt component      | 1        |                  |
| 15                       | 1020-611400-G00 | Hose assembly                   | 1        |                  |
| 16                       | 1130-620400-G00 | Straight connector              | 1        | Q-15L G1/2 ED    |
| 17                       | 1020-611500-G01 | Hose assembly                   | 1        |                  |
| 18                       | 1130-611700-G00 | Hose assembly                   | 1        |                  |
| 19                       | 1130-200200-G00 | Steering gear                   | 1        | 101S-5-100-15-HC |

## 6.4 Multitandem valve

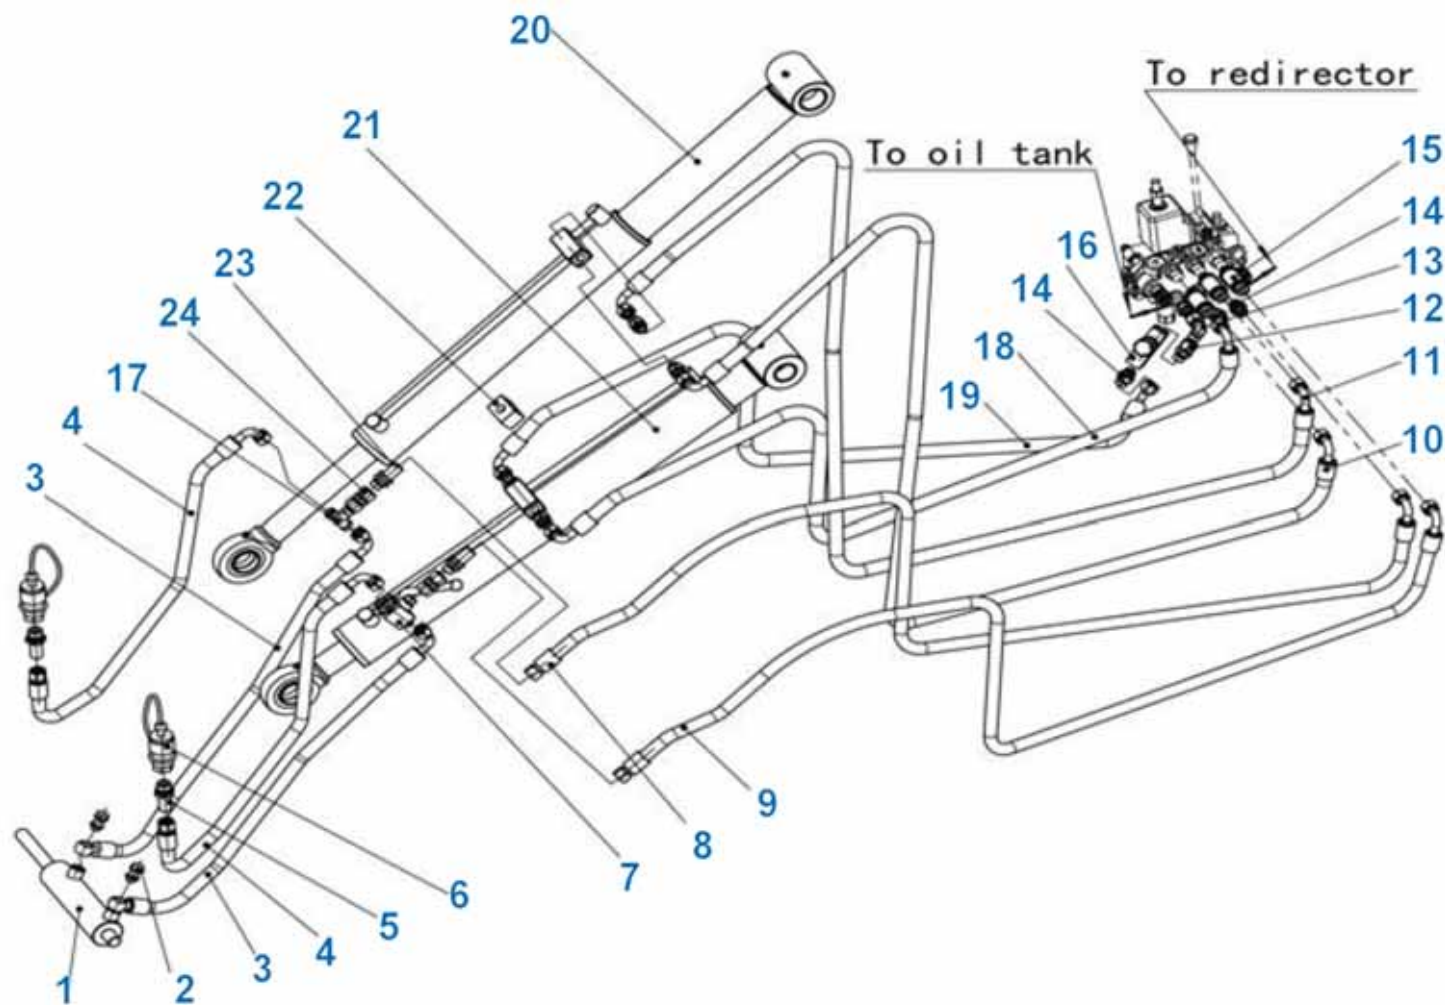

**Multitandem valve parts list**


| Item | Part Number     | Part Name                           | Quantity | Remark          |
|------|-----------------|-------------------------------------|----------|-----------------|
| 1    | 1130-438000-G01 | Lock cylinder assembly              | 1        |                 |
| 2    | 1130-623300-G00 | G1/4 reamer bolt component          | 2        |                 |
| 3    | 1130-613200-G01 | Hose assembly                       | 2        |                 |
| 4    | 1130-613300-G01 | Hose assembly                       | 2        |                 |
| 5    | 810-624600-G00  | M18X1.5-G1/2plate-joint             | 2        |                 |
| 6    | 1130-621200-G00 | Quick coupling                      | 2        |                 |
| 7    | 1130-620011-G00 | Two position three way valve        | 1        |                 |
| 8    | 1020-611900-G51 | Hose assembly                       | 1        |                 |
| 9    | 1020-611800-G51 | Hose assembly                       | 1        |                 |
| 10   | 1020-612200-G51 | Hose assembly                       | 1        |                 |
| 11   | 1020-612500-G51 | Hose assembly                       | 1        |                 |
| 12   | 1130-624100-G00 | Straight connector                  | 1        | Q-GE12L G3/8 ED |
| 13   |                 | Right-angle connector               | 1        | Q-EW12L M18x1.5 |
| 14   | 1130-622400-G00 | Straight connector                  | 4        | Q-GE12L G3/8 ED |
| 15   | 1130-624500-G00 | Straight connector                  | 3        |                 |
| 16   | 1130-620001-G00 | Throttle valve                      | 1        |                 |
| 17   | 1130-613100-G00 | T-junction connector                | 1        | Q-T12L          |
| 18   | 1020-612200-G51 | Hose assembly                       | 1        |                 |
| 19   | 1020-612300-G51 | Hose assembly                       | 1        |                 |
| 20   | 1130-437000-G53 | Lengthen tilting cylinder component | 1        |                 |
| 21   | 1130-436000-G52 | Lengthen lifting cylinder component | 1        |                 |
| 22   | 1130-600002-G00 | Clamp                               | 13       |                 |
| 23   |                 | Straight connector                  | 2        | Q-GSV12L        |

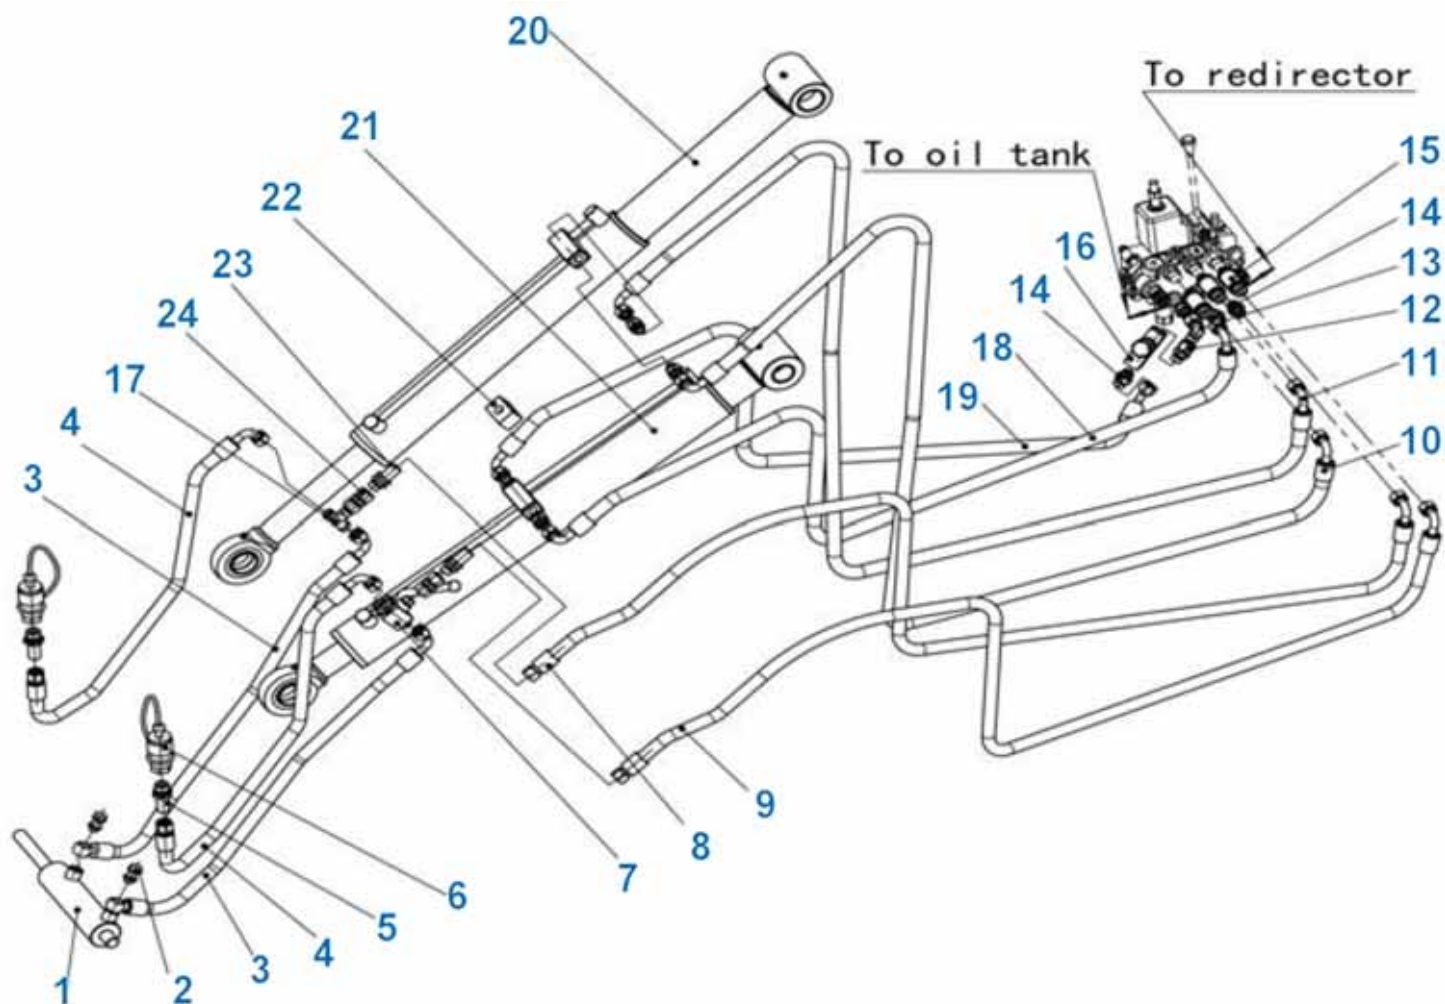

**Multitandem valve parts list**

| Item | Part Number              | Part Name                  | Quantity | Remark                     |
|------|--------------------------|----------------------------|----------|----------------------------|
| 24   | 1130-622500-G00          | Straight connector         | 2        |                            |
| -    | 1130-611800-G02          | Hose assembly              | 1        | Four way valved model      |
| -    | 1130-611900-G02          | Hose assembly              | 1        | Four way valved model      |
| -    | 810-613300-G62           | Hose assembly              | 1        |                            |
| -    | 1020-612300-G51          | Hose assembly              | 2        | Two position six way valve |
| -    | 1020-612200-G51          | Hose assembly              | 1        | Two position six way valve |
| -    | 810-612500-G61           | Hose assembly              | 1        | Two position six way valve |
| -    | DCE50-G038-TA6/10N-D12K1 | Two position six way valve | 1        | Two position six way valve |
| -    | 810-612400-G61           | Hose assembly              | 1        | Two position six way valve |
| -    | 810-613400-G69           | Hose assembly              | 2        |                            |
| -    | 810-613200-G62           | Hose assembly              | 1        |                            |
| -    | 810-613510-G69           | Hose assembly              | 1        |                            |
| -    | 810-613300-G62           | Hose assembly              | 1        |                            |
| -    | 1020-611800-G69          | Hose assembly              | 1        |                            |
| -    | 810-613200-G62           | Hose assembly              | 1        |                            |
| -    | 810-613520-G69           | Hose assembly              | 1        |                            |



## 6.5 Multitandem valve component

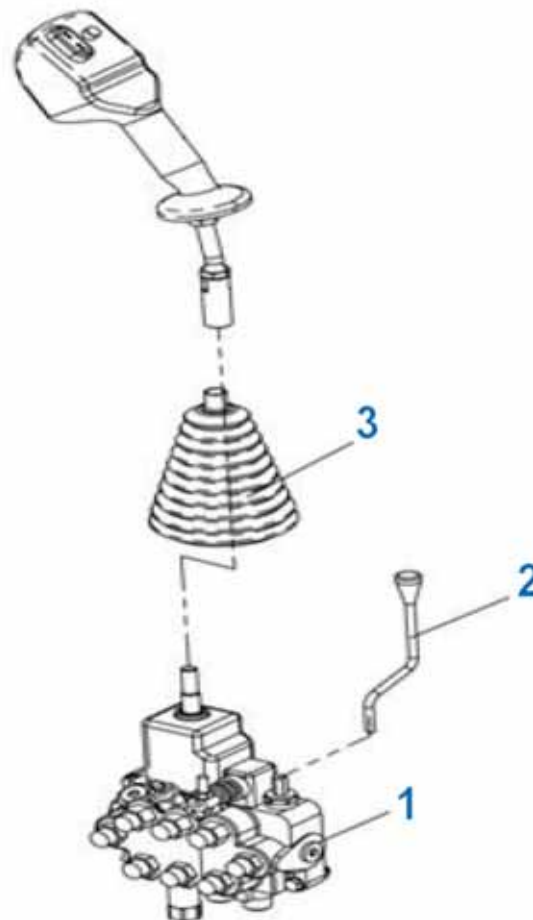

| Multitandem valve component parts list |                 |                                                       |          |        |
|----------------------------------------|-----------------|-------------------------------------------------------|----------|--------|
| Item                                   | Part Number     | Part Name                                             | Quantity | Remark |
| 1                                      | 1130-600500-G01 | Multitandem valve component assembly                  | 1        |        |
| -                                      | 1130-600500-G10 | Multitandem valve component assembly (four way valve) | 1        |        |
| 2                                      | 810-600520-000  | Handle                                                | 1        |        |
| 3                                      | 1230-600009-G00 | Main handle cover                                     | 1        |        |


## 7. ELECTRIC SYSTEM

### 7.1 Electric system installation

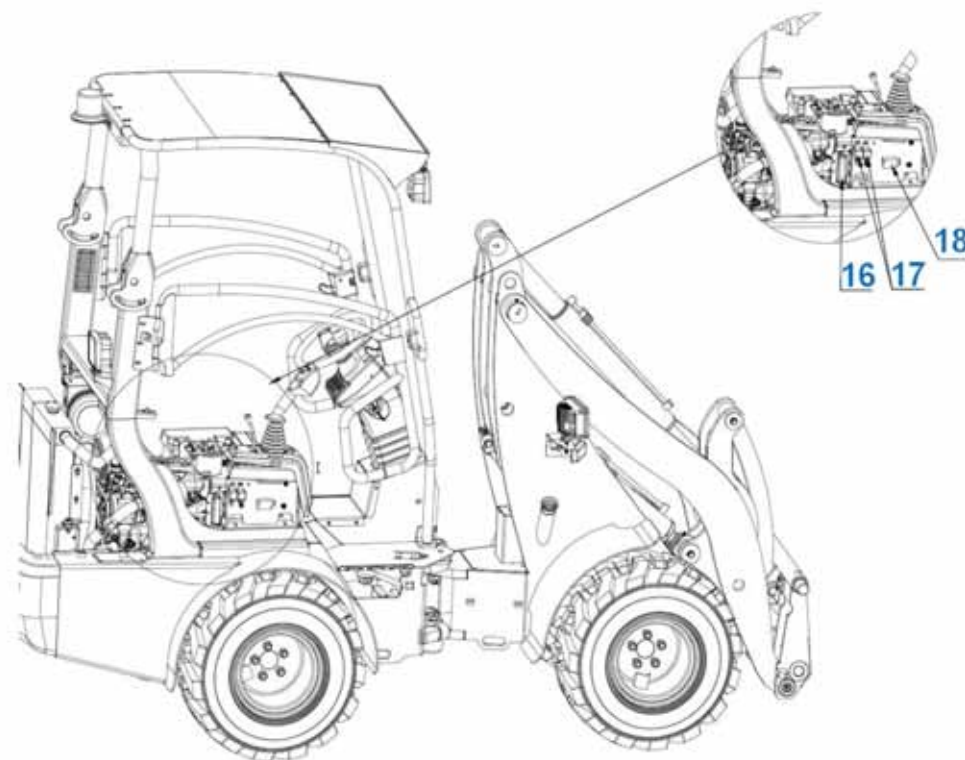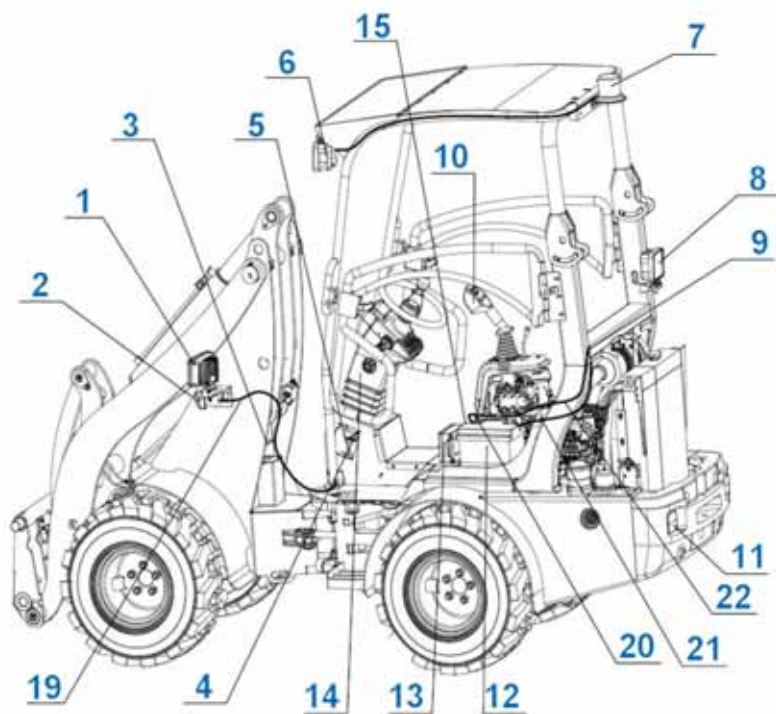


| Electric system installation parts list |                 |                                  |          |                            |
|-----------------------------------------|-----------------|----------------------------------|----------|----------------------------|
| Item                                    | Part Number     | Part Name                        | Quantity | Remark                     |
| 1                                       | 1130-504500-000 | Front combination lamp component |          | 5045S                      |
| 2                                       | 1130-700008-G00 | Width steering light             |          |                            |
| 3                                       | 1130-701500-G01 | Fuel level sensor                |          |                            |
| 4                                       | XV-156-1C25     | Position limit switch            |          |                            |
| 5                                       | 1130-701100-G00 | Horn                             |          |                            |
| 6                                       | 1130-921000-000 | Working lamp                     |          |                            |
| 7                                       | 1130-922000-000 | Beacon                           |          | TPF01                      |
| 8                                       | 1130-921000-000 | Rear working lamp                |          |                            |
| 9                                       | 1130-701900-G00 | Main power switch                |          |                            |
| 10                                      | 1130-720000-010 | Operating handle                 |          |                            |
|                                         | 1130-720000-020 | Operating handle                 |          | Two-position six-way valve |
| 11                                      | 1130-700900-G00 | Rear lamp component              |          |                            |
|                                         | 1130-700600-G00 | Rear lamp component              |          |                            |
| 12                                      | 1130-703000-G50 | Battery                          |          | L2-400                     |
| 13                                      | 1130-700900-G10 | Control box (12V-40)             |          |                            |
| 14                                      | 810-710000-200  | Dashboard                        |          |                            |
| 15                                      |                 | This part has been canceled      |          |                            |
| 16                                      | 1130-701800-G00 | 6 way fuse box                   |          |                            |
|                                         | 1130-701700-G00 | Relay                            |          |                            |
| 17                                      | 1130-701200-G00 | Insert plug fuse                 |          |                            |
| 18                                      | 810-701800-005  | Half main wiring harness         |          |                            |
| 19                                      | 810-701800-006  | All main wiring harness          |          |                            |
| 20                                      | 1130-700700-G00 | Battery positive wire component  |          |                            |
| 21                                      | 1130-700800-G00 | Battery negative wire component  |          |                            |
| 22                                      | 1130-700800-G01 | Battery negative wire            |          |                            |

## 7.2 Dashboard

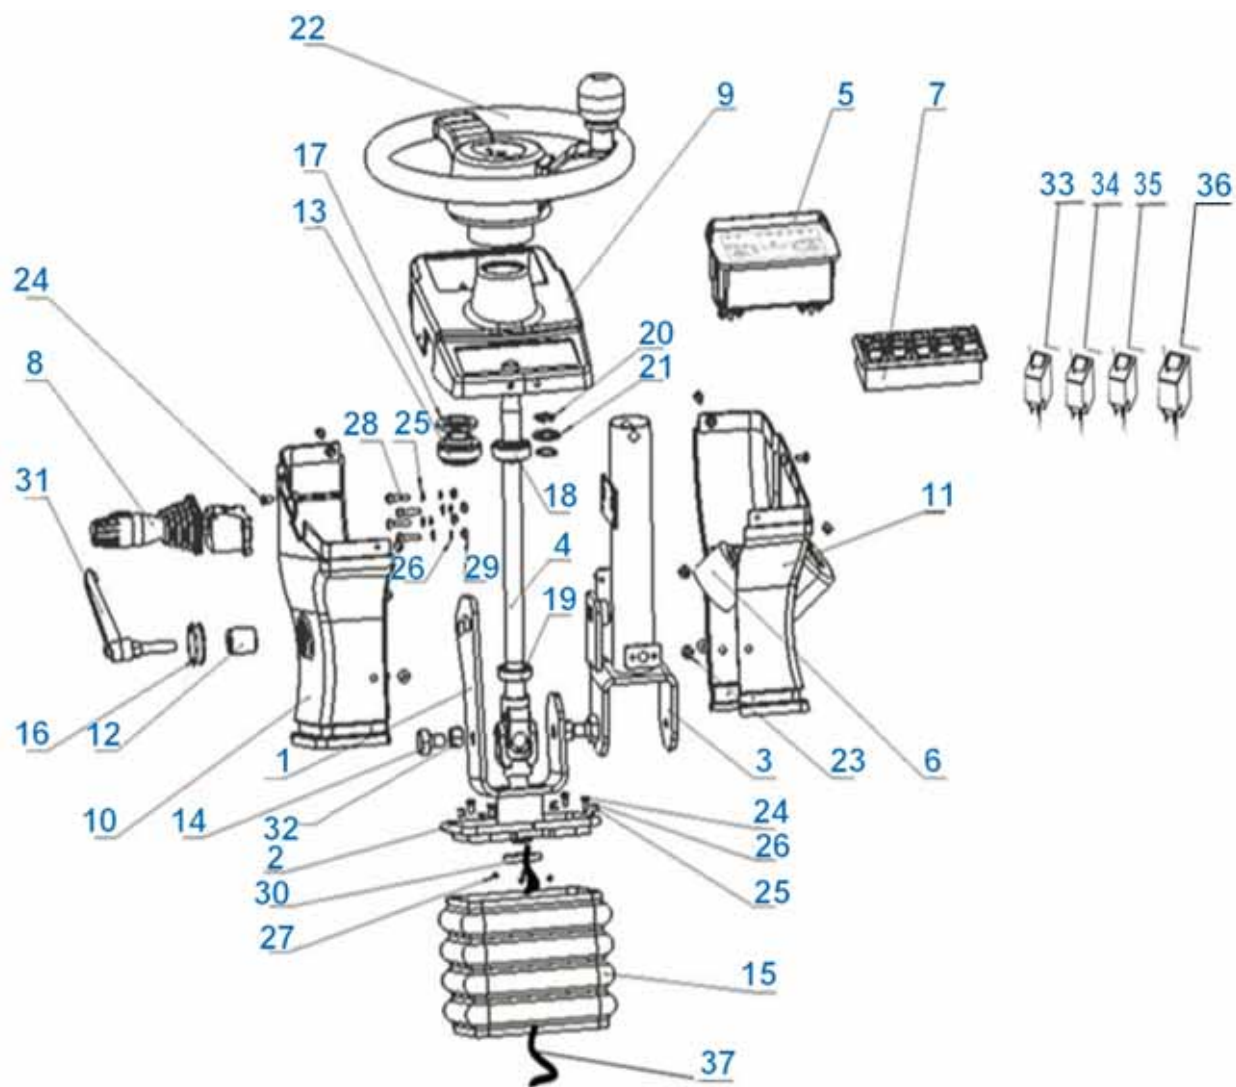

### Dashboard parts list


| Item | Part Number     | Part Name                                  | Quantity | Remark |
|------|-----------------|--------------------------------------------|----------|--------|
| 1    | 810-710100-000  | Base                                       | 1        |        |
| 2    | 810-710200-000  | Frame                                      | 1        |        |
| 3    | 810-710300-000  | Steering column assembly                   | 1        |        |
| 4    | 810-710400-000  | Steering axle assembly                     | 1        |        |
| 5    | 810-710500-G00  | Instrument panel                           | 1        |        |
| 6    | 810-710700-G00  | Starting switch assembly                   | 1        |        |
| 7    | 810-710600-G20  | Five seat switch                           | 1        |        |
| 8    | 810-710800-G00  | Steering lamp switch handle                | 1        |        |
| 9    | 810-710001-200B | Upper cover                                | 1        |        |
| 10   | 810-710002-200  | Left cover                                 | 1        |        |
| 11   | 810-710003-200  | Right cover                                | 1        |        |
| 12   | 810-710004-000  | Steering tube lock handle(outer)           | 1        |        |
| 13   | 810-710005-000  | Nylon cover                                | 1        |        |
| 14   | 810-710006-000  | M12 set bolt                               | 2        |        |
| 15   | 810-710007-G00  | Lower rubber protection ring               | 1        |        |
| 16   | 1130-700001-000 | Out coil                                   | 1        |        |
| 17   | 810-710009-000  | Fixed collar                               | 1        |        |
| 18   | 6004-2RZ        | Deep groove ball bearing GB/T274           | 1        |        |
| 19   | 61904-2RZ       | Deep groove ball bearing GB/T276 61904-2RZ | 1        |        |
| 20   | 008942 00020B   | Elastic retaining ring for shaft type B 20 | 1        |        |
| 21   | 810-710010-000  | Washer 2                                   | 1        |        |
| 22   | 810-710009-G10  | Steering wheel 300                         | 1        |        |
| 23   | 000818 006121   | Pan head screw                             | 6        |        |
| 24   | 000823 005101   | M5*10 pan head screw                       | 10       |        |
| 25   | 000095 000051   | Flat washer 5                              | 8        |        |

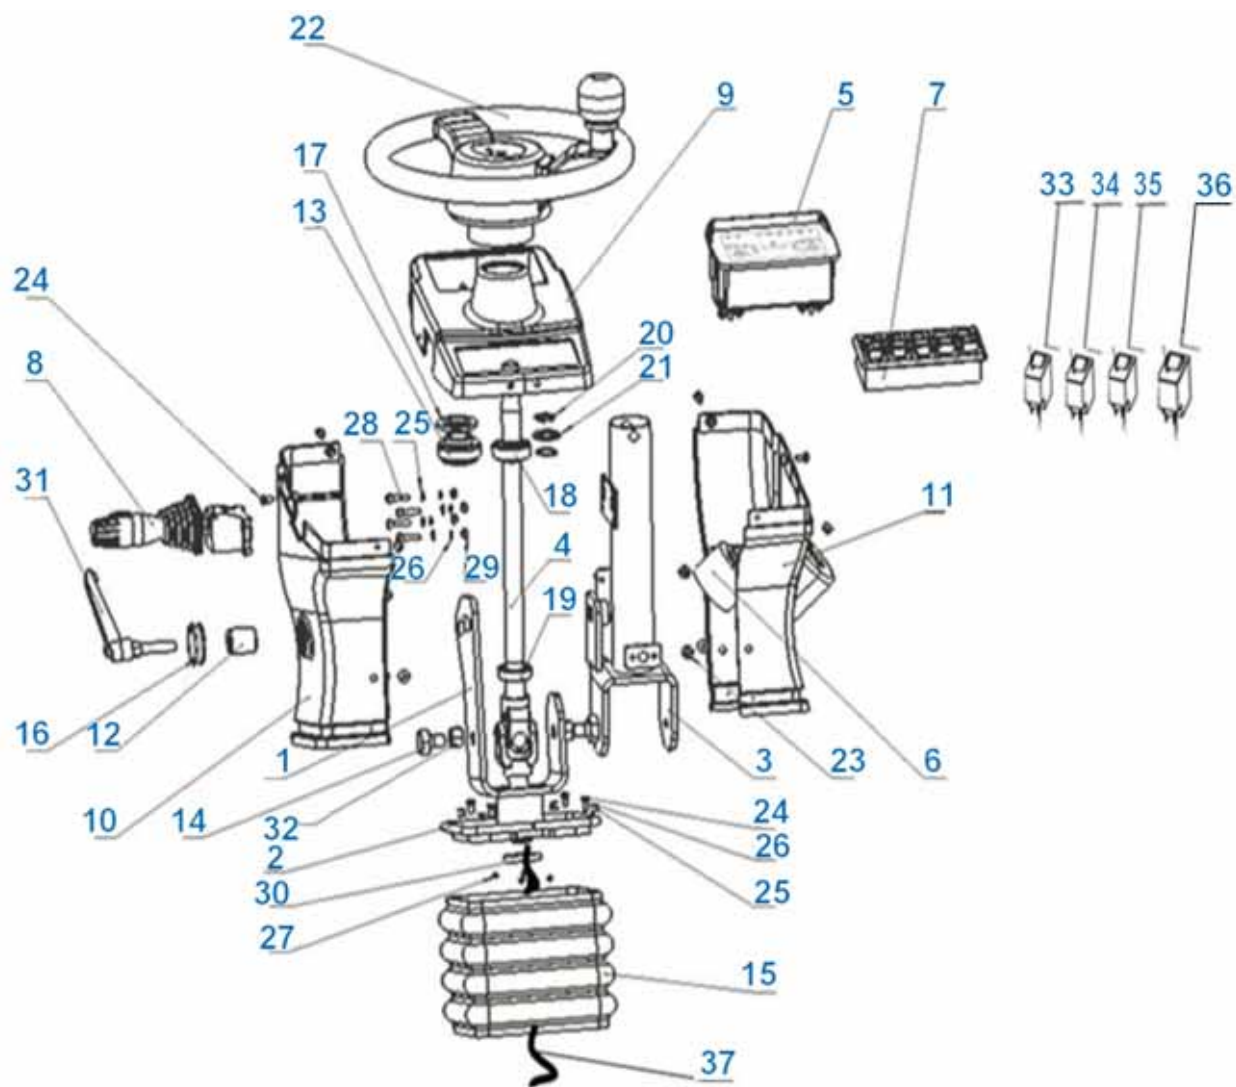

**Dashboard parts list**



| Item | Part Number     | Part Name                                              | Quantity | Remark |
|------|-----------------|--------------------------------------------------------|----------|--------|
| 26   | 000093 000051   | Spring washer 5                                        | 8        |        |
| 27   | 000854 029095   | M2.9X9.5 GB/T854 cross recessed pan head tapping screw | 8        |        |
| 28   | 000701 050201   | Hexagon socket head cap screw M5*20-8.8                | 4        |        |
| 29   | 006170 005001   | Hexagon nut M5-8.8                                     | 4        |        |
| 30   | 810-710008-G00  | Rubber ring                                            | 1        |        |
| 31   | 810-710012-G00  | 80RB-M10X50-S adjustable locking handle                | 1        |        |
| 32   | 006172 012001   | M12 hexagon thin nut GB/6712.1                         | 2        |        |
| 33   | 1130-710017-G00 | Horn switch                                            | 1        |        |
| 34   | 1130-700019-G00 | Alarm switch                                           | 1        |        |
| 35   | 1130-710012-G00 | Working light switch                                   | 1        |        |
| 36   | 1130-710018-G00 | Double jump switch                                     | 1        |        |
| 37   | 820-711000-000  | Instrument cluster                                     | 1        |        |

## 7.3 Battery and control box

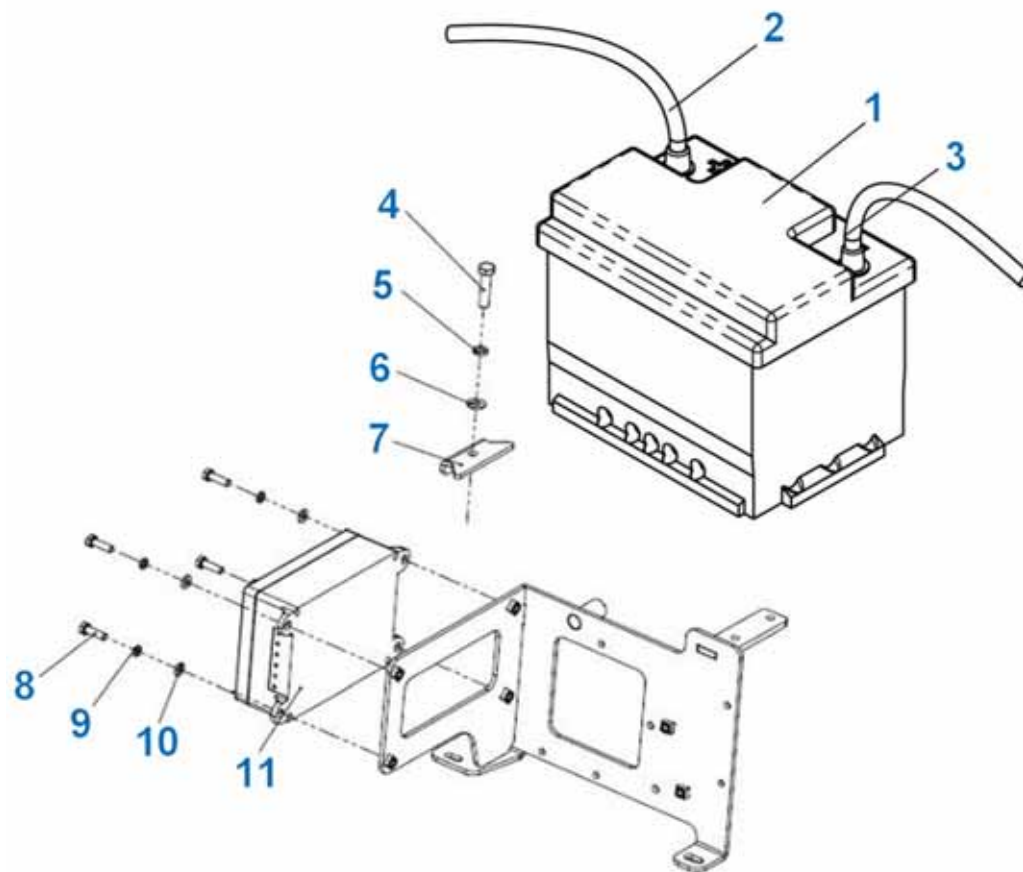

| Battery and control box parts list |                  |                                 |          |                         |
|------------------------------------|------------------|---------------------------------|----------|-------------------------|
| Item                               | Part Number      | Part Name                       | Quantity | Remark                  |
| 1                                  | 1130-703000-G50  | Battery                         | 1        | L2-400(12V 60Ah 450CCA) |
| 2                                  | 1130-700700-G00  | Battery positive wire component | 1        |                         |
| 3                                  | 1130-700800-G00  | Battery negative wire component | 1        |                         |
| 4                                  | 005783-008035-00 | Nut M8X35                       | 1        |                         |
| 5                                  | 000093 000008    | Washer 8                        | 1        |                         |
| 6                                  | 000971 000008    | Washer 8                        | 1        |                         |
| 7                                  | 1130-700104-000  | Battery fixed pressing plate    | 1        |                         |
| 8                                  | 005783 006020    | Bolt M6X20                      | 4        |                         |
| 9                                  | 000093 000006    | Washer 6                        | 4        |                         |
| 10                                 | 000971-000006-00 | Washer 6                        | 4        |                         |
| 11                                 | 1130-700900-G10  | Control box (12V-4)             | 1        |                         |

## 7.4 Operating handle

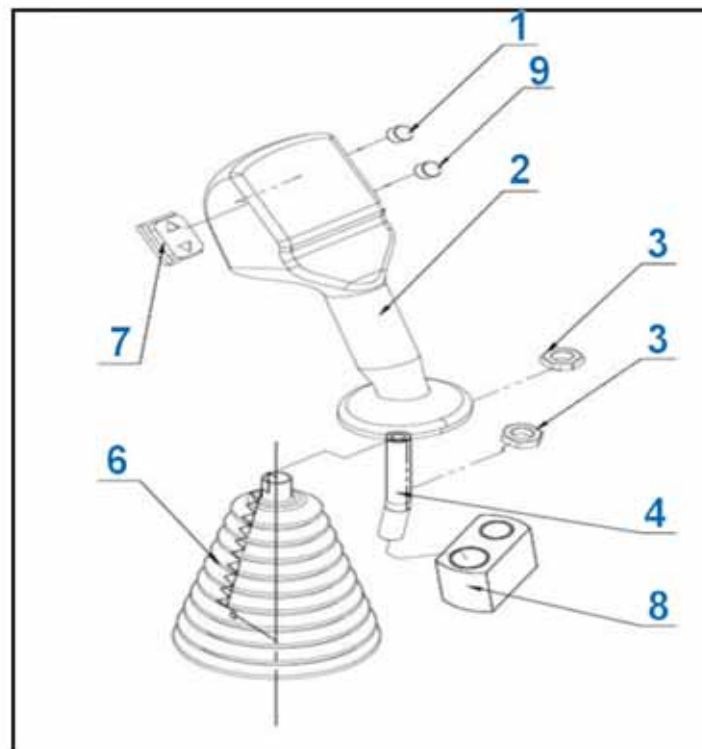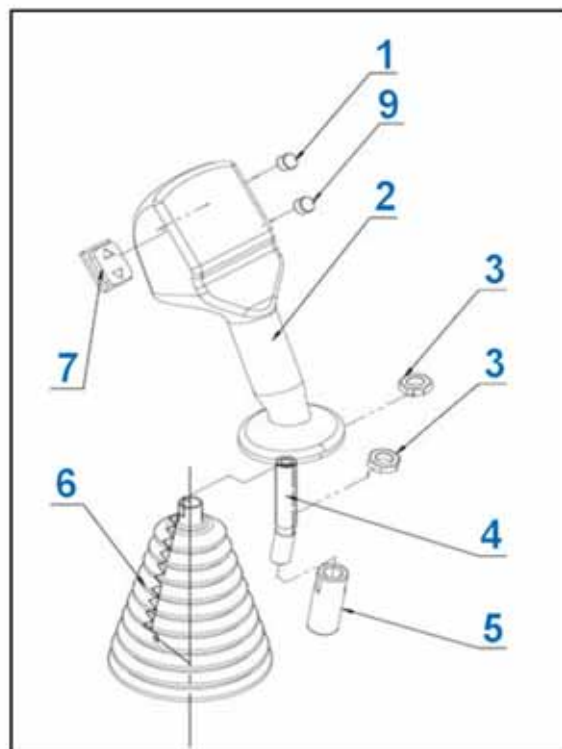


### Operating handle parts list

| Item | Part Number     | Part Name                | Quantity | Remark                     |
|------|-----------------|--------------------------|----------|----------------------------|
| 1    | 1130-600306-G00 | Button switch (red)      | 1        |                            |
| 2    | 1130-600301-G00 | Operating handle housing | 1        |                            |
| 3    | 006173 014002   | Nut M14*1.5              | 2        |                            |
| 4    | 1130-600303-001 | Operating handle lever   | 1        |                            |
| 5    | 1130-600304-001 | Handle lever             | 1        | Without cabine             |
| 6    | 1230-600009-G00 | Handle rubber sleeve     | 1        |                            |
| 7    | 1130-701500-001 | Handle shift switch      | 1        |                            |
| 8    | 1140-440013-003 | Connecting plate (cab)   | 1        | With cabine                |
| 9    | 1130-600306-G00 | Button switch (red)      | 1        | Two-position six-way valve |

## 8. ATTACHMENT

### 8.1 Bucket assembly

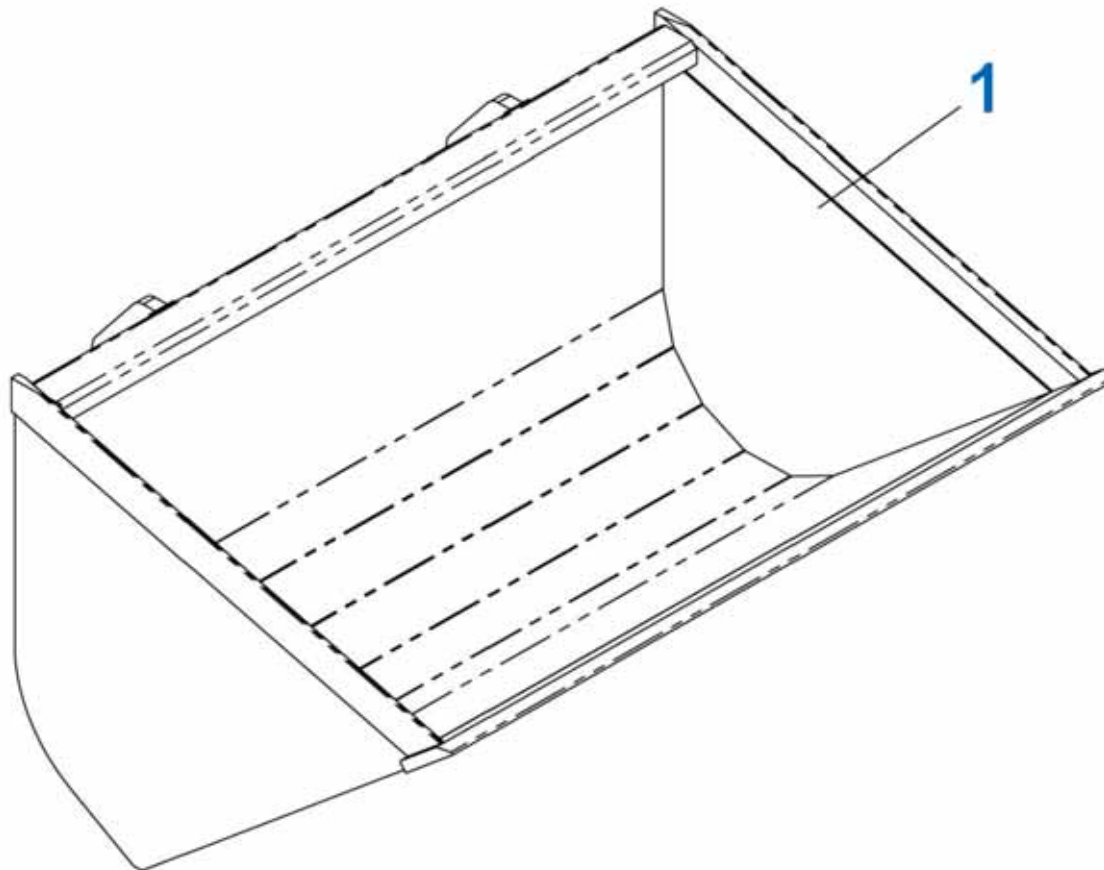

**Bucket assembly parts list**

| Item | Part Number     | Part Name       | Quantity | Remark |
|------|-----------------|-----------------|----------|--------|
| 1    | 1130-800000-000 | Bucket assembly | 1        |        |